

Service Manual



Phaser™ 200, Phaser™ 220 and Phaser™ 240 Color Printers

Warning

The following servicing instructions are for use by qualified service personnel only. To avoid personal injury, do not perform any servicing other than that contained in operating instructions unless you are qualified to do so.

This printing June 1995
070-8699-03

Copyright © 1995 by Tektronix, Inc., Wilsonville, Oregon. Printed in the United States of America. All rights reserved. Contents of this publication may not be reproduced in any form without permission of Tektronix, Inc.

This instrument, in whole or in part, may be protected by one or more U.S. or foreign patents or patent applications. Information provided upon request from Tektronix, Inc., P.O. Box 1000, Wilsonville, Oregon 97070-1000.

If acquired subject to FAR or DFARS, the following shall apply:

- Unpublished — rights reserved under the copyright laws of the United States.
- Restricted Rights Legend — Use, duplication or disclosures by the government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software at DFARS 252.227-7013, or in subparagraph (c) (2) of the Commercial Computer Software – Restricted Rights clause at FAR 52.227-19, as applicable. Tektronix, Inc., P.O. Box 1000, Wilsonville, Oregon 97070-1000.

Tektronix[®] is a registered trademark of Tektronix, Inc. TekColor[™] and Photofine[™] are trademarks of Tektronix, Inc. Phaser[™] is a trademark of Tektronix, Inc. for color printers and related products.

Adobe[™] and PostScript[™] are trademarks of Adobe Systems, Incorporated which may be registered in certain jurisdictions.

Times[™], Helvetica[™], and Palatino[™] are trademarks of Linotype-Hell AG and/or its subsidiaries.

Other marks are trademarks or registered trademarks of the companies with which they are associated.

PANTONE[®]* Colors generated by the Phaser 200, 220 and 240 Color Printers are three-color process simulations and may not match PANTONE-identified solid color standards. Use current PANTONE Color Reference Manuals for accurate colors.

PANTONE Color simulations are only obtainable on these products when driven by qualified Pantone-licensed software packages. Contact Pantone, Inc. for a current list of qualified licensees.

* Pantone, Inc.'s check-standard trademark for color reproduction and color reproduction materials.

© Pantone, Inc., 1988.

Novell[®] and NetWare[®] are registered trademarks of Novell, Inc.

TCP/IP is a trademark of FTP Software. Copyright (c) 1986, 1987, 1988, 1989 by FTP Software, Inc. All rights reserved. PC/TCP for DOS is based on a set of programs originally designed and developed by the Massachusetts Institute of Technology. FTP Software has made extensive modifications and enhancements to the M.I.T. programs.

Users safety summary

Terms in manual: CAUTION Conditions that can result in damage to the product.
WARNING Conditions that can result in personal injury or loss of life.

Power source: Do not apply more than 250 volts RMS between the supply conductors or between either supply conductor and ground. Use only the specified power cord and connector. Refer to a qualified service technician for changes to the cord or connector.

Operation of product: Avoid electric shock by contacting a qualified service technician to replace fuses inside the product. Do not operate without the covers and panels properly installed. Do not operate in an atmosphere of explosive gases.

Safety instructions: Read all installation instructions carefully before you plug the product into a power source.

Terms on product: CAUTION A personal injury hazard exists that may not be apparent. For example, a panel may cover the hazardous area. Also applies to a hazard to property including the product itself.

DANGER A personal injury hazard exists in the area where you see the sign.

Care of product: Disconnect the power plug by pulling the plug, not the cord. Disconnect the power plug if the power cord or plug is frayed or otherwise damaged, if you spill anything into the case, if product is exposed to any excess moisture, if product is dropped or damaged, if you suspect that the product needs servicing or repair, and whenever you clean the product.

Ground the product: Plug the three-wire power cord (with grounding prong) into grounded AC outlets only. If necessary, contact a licensed electrician to install a properly grounded outlet.

Symbols as marked on product:

DANGER high voltage:



Protective ground (earth) terminal:



Use caution. Refer to the manual(s) for information:



WARNING: If the product loses the ground connection, usage of knobs and controls (and other conductive parts) can cause an electrical shock. Electrical product may be hazardous if misused.

Service safety summary

For qualified service personnel only: Refer also to the preceding Users Safety Summary.

Do not service alone: Do not perform internal service or adjustment of this product unless another person capable of rendering first aid or resuscitation is present.

Use care when servicing with power on: Dangerous voltages may exist at several points in this product. To avoid personal injury, do not touch exposed connections and components while power is on.

Disconnect power before removing the power supply shield, soldering, or replacing components.

Do not wear jewelry: Remove jewelry prior to servicing. Rings, necklaces, and other metallic objects could come into contact with dangerous voltages and currents.

Power source: This product is intended to operate from a power source that will not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

Service Manual



Phaser™ 200, Phaser™ 220 and Phaser™ 240 Color Printers

Warning

The following servicing instructions are for use by qualified service personnel only. To avoid personal injury, do not perform any servicing other than that contained in operating instructions unless you are qualified to do so.

This printing June 1995
070-8699-03

Copyright © 1995 by Tektronix, Inc., Wilsonville, Oregon. Printed in the United States of America. All rights reserved. Contents of this publication may not be reproduced in any form without permission of Tektronix, Inc.

This instrument, in whole or in part, may be protected by one or more U.S. or foreign patents or patent applications. Information provided upon request from Tektronix, Inc., P.O. Box 1000, Wilsonville, Oregon 97070-1000.

If acquired subject to FAR or DFARS, the following shall apply:

- Unpublished — rights reserved under the copyright laws of the United States.
- Restricted Rights Legend — Use, duplication or disclosures by the government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software at DFARS 252.227-7013, or in subparagraph (c) (2) of the Commercial Computer Software – Restricted Rights clause at FAR 52.227-19, as applicable. Tektronix, Inc., P.O. Box 1000, Wilsonville, Oregon 97070-1000.

Tektronix® is a registered trademark of Tektronix, Inc. TekColor™ and Photofine™ are trademarks of Tektronix, Inc. Phaser™ is a trademark of Tektronix, Inc. for color printers and related products.

Adobe™ and PostScript™ are trademarks of Adobe Systems, Incorporated which may be registered in certain jurisdictions.

Times™, Helvetica™, and Palatino™ are trademarks of Linotype-Hell AG and/or its subsidiaries.

Other marks are trademarks or registered trademarks of the companies with which they are associated.

PANTONE®* Colors generated by the Phaser 200, 220 and 240 Color Printers are three-color process simulations and may not match PANTONE-identified solid color standards. Use current PANTONE Color Reference Manuals for accurate colors.

PANTONE Color simulations are only obtainable on these products when driven by qualified Pantone-licensed software packages. Contact Pantone, Inc. for a current list of qualified licensees.

* Pantone, Inc.'s check-standard trademark for color reproduction and color reproduction materials.

© Pantone, Inc., 1988.

Novell® and NetWare® are registered trademarks of Novell, Inc.

TCP/IP is a trademark of FTP Software. Copyright (c) 1986, 1987, 1988, 1989 by FTP Software, Inc. All rights reserved. PC/TCP for DOS is based on a set of programs originally designed and developed by the Massachusetts Institute of Technology. FTP Software has made extensive modifications and enhancements to the M.I.T. programs.

Users safety summary

Terms in manual: CAUTION Conditions that can result in damage to the product.
 WARNING Conditions that can result in personal injury or loss of life.

Power source: Do not apply more than 250 volts RMS between the supply conductors or between either supply conductor and ground. Use only the specified power cord and connector. Refer to a qualified service technician for changes to the cord or connector.

Operation of product: Avoid electric shock by contacting a qualified service technician to replace fuses inside the product. Do not operate without the covers and panels properly installed. Do not operate in an atmosphere of explosive gases.

Safety instructions: Read all installation instructions carefully before you plug the product into a power source.

Terms on product: CAUTION A personal injury hazard exists that may not be apparent. For example, a panel may cover the hazardous area. Also applies to a hazard to property including the product itself.

 DANGER A personal injury hazard exists in the area where you see the sign.

Care of product: Disconnect the power plug by pulling the plug, not the cord. Disconnect the power plug if the power cord or plug is frayed or otherwise damaged, if you spill anything into the case, if product is exposed to any excess moisture, if product is dropped or damaged, if you suspect that the product needs servicing or repair, and whenever you clean the product.

Ground the product: Plug the three-wire power cord (with grounding prong) into grounded AC outlets only. If necessary, contact a licensed electrician to install a properly grounded outlet.

Symbols as marked on product:

DANGER high voltage:



Protective ground (earth) terminal:



Use caution. Refer to the manual(s) for information:



WARNING: If the product loses the ground connection, usage of knobs and controls (and other conductive parts) can cause an electrical shock. Electrical product may be hazardous if misused.

Service safety summary

For qualified service personnel only: Refer also to the preceding Users Safety Summary.

Do not service alone: Do not perform internal service or adjustment of this product unless another person capable of rendering first aid or resuscitation is present.

Use care when servicing with power on: Dangerous voltages may exist at several points in this product. To avoid personal injury, do not touch exposed connections and components while power is on.

Disconnect power before removing the power supply shield, soldering, or replacing components.

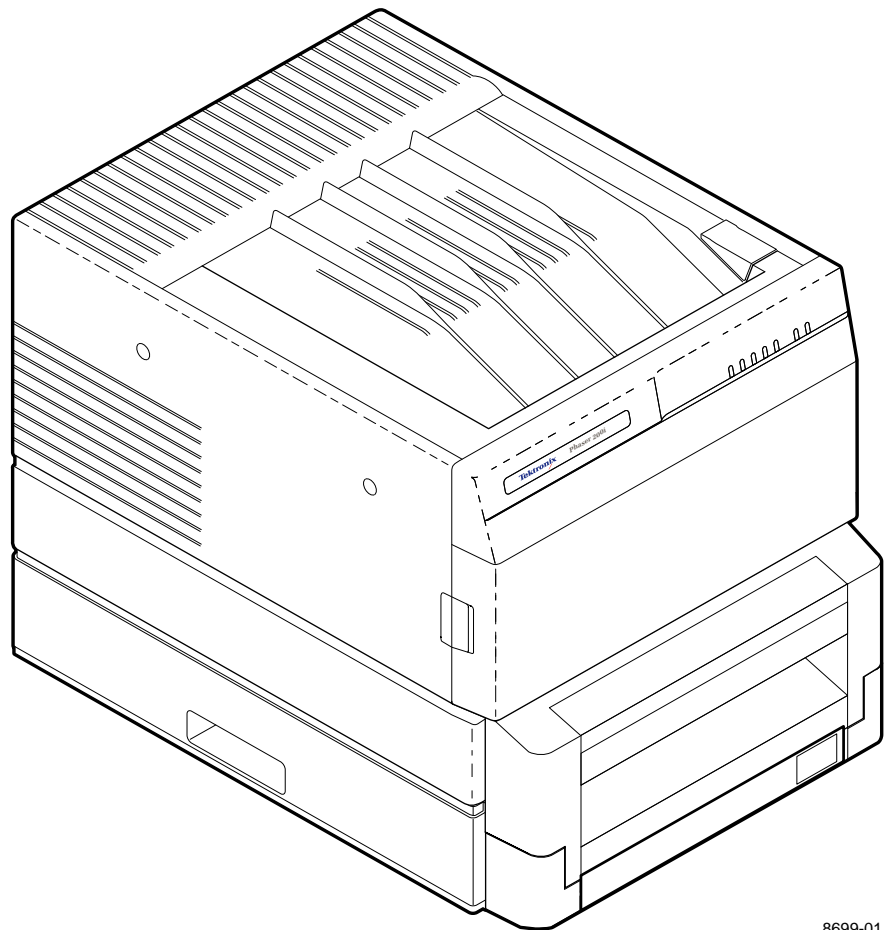
Do not wear jewelry: Remove jewelry prior to servicing. Rings, necklaces, and other metallic objects could come into contact with dangerous voltages and currents.

Power source: This product is intended to operate from a power source that will not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

General Information

This service manual contains information useful to verify operation, troubleshoot, repair, adjust, and maintain Tektronix Phaser® 200i, 200e, 220i and 220e Color Printers. The first half of this manual familiarizes you with the printers and provides information on installing and verifying the printers and training printer users as a part of the Option S0 printer installation procedure. The latter half of the manual includes troubleshooting guides, adjustment procedures, assembly/disassembly procedures and an FRU list.

To ensure complete understanding of the product, we recommend participation in Phaser 200 and 220 service training, if available.



8699-01

Figure 1-1 The Phaser 220 series printer (shown with the Lower Tray Assembly)

Phaser 200i and 220i

Phaser 200i is an Adobe PostScript Level 2, two page-per-minute, color thermal-wax transfer printer. Besides PostScript, it also supports the Hewlett Packard-Graphics Language (HP-GL) printer language. Phaser 200i prints at an addressability of 300 dots-per-inch. The printer features a single paper tray with an optional lower tray assembly which gives the printer a dual tray capability. (The Lower Tray Assembly is sometimes referred to as the second feeder.) The printer prints images on A- and A4-size paper and transparency film with 5 mm (0.2 in.) margins. Phaser 200i's image processor, sometimes called the controller board, is powered by a 24-MHz RISC processor and features integral EtherTalk. The EtherTalk port supports 10Base5, 10Base2 and 10BaseT external line units. Also standard are 6 Mbytes of RAM (expandable to 14 Mbytes), 39 standard fonts, and support for an external SCSI disk for additional font storage. For host image input, the controller also features a standard parallel port, an RS-232 serial port and a LocalTalk port.

The Phaser 220i has all the same features of the 200i but also includes support for Novell NetWare and TCP/IP networks (with the Ethernet card installed) as well as the PCL language (which requires full memory installed). In addition, the Phaser 220 supports a high-resolution 300 x 600 dots-per-inch printing mode.

Phaser 200e and 220e

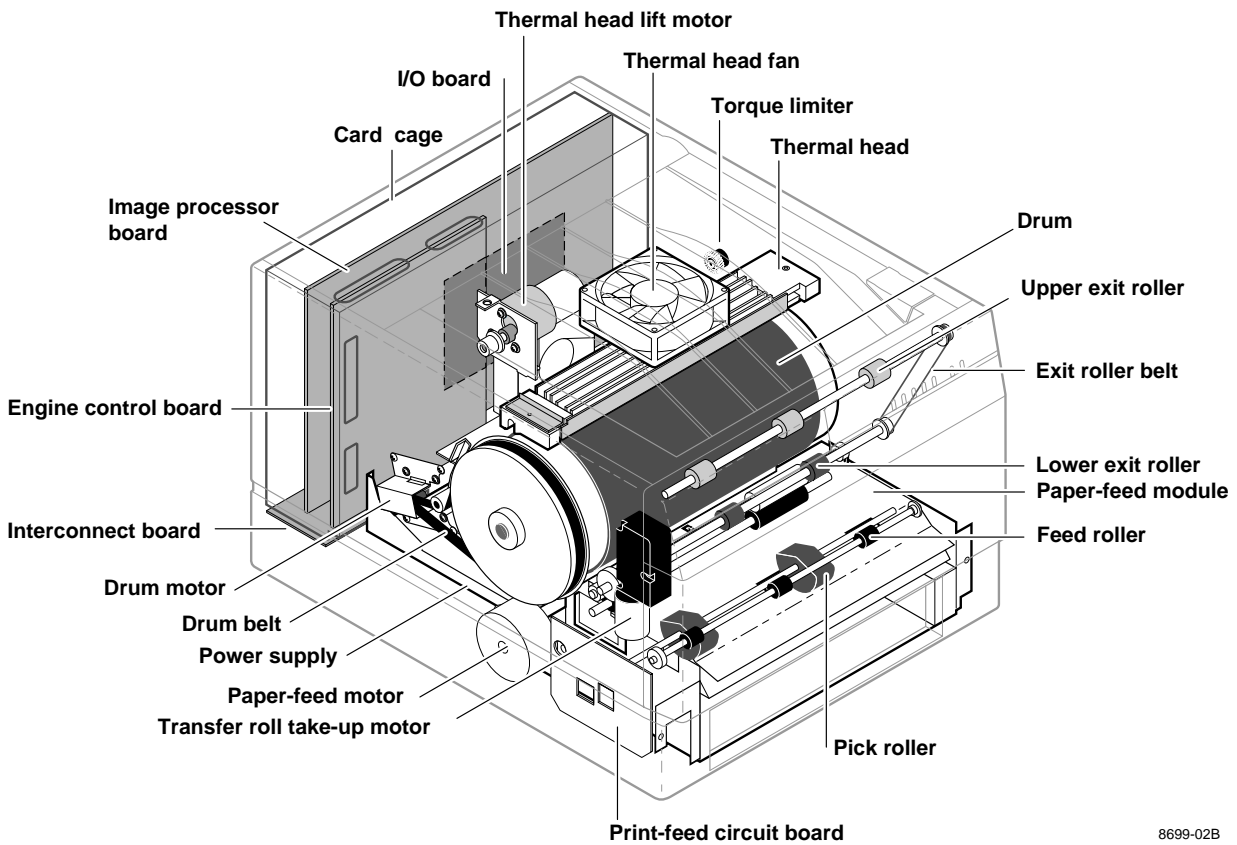
The Phaser 200e uses the same print engine as the Phaser 200i and produces the same high-quality, 300 dots-per-inch prints. It also supports Adobe PostScript Level 2 and HP-GL. The Phaser 220e also supports the PCL language. Phaser 200e comes standard with one paper tray; the lower tray assembly is optional. Both the Phaser 200e and Phaser 220e's image processor features a 16-MHz RISC processor and 4 Mbytes of RAM (expandable to 8 Mbytes). Each provides 17 standard printer fonts which can be expanded to 39 fonts. Unlike the Phaser 200e, the Phaser 220e supports a high-resolution, 300 x 600 dots-per-inch printing mode.

Neither the Phaser 200e, nor the Phaser 220e supports TCP/IP or Novell protocols. Nor do they support an external SCSI drive.

Plain-paper printing


The Phaser 200 and 220 print on a specially coated paper with a very smooth, even surface, optimized for wax-transfer printing. The printers can also print on ordinary Bond paper, using a special 4-pass plain-paper transfer roll called the ColorCoat Transfer Roll. During printing, a special primer coating is applied to the paper in its first pass past the thermal head. The coating is applied only to the portions of the paper where yellow, magenta and cyan wax will be applied in the following passes. The coating supplies a smooth, flat surface for the wax to adhere to. Because of the extra pass required for printing on plain-paper and the fact that the drum moves in a slower, half-step mode while placing the precoat on the paper, plain-paper printing times are slightly longer than printing on coated paper with the 3-pass, 3-Color Transfer Roll.

Print engine assemblies



8699-02B

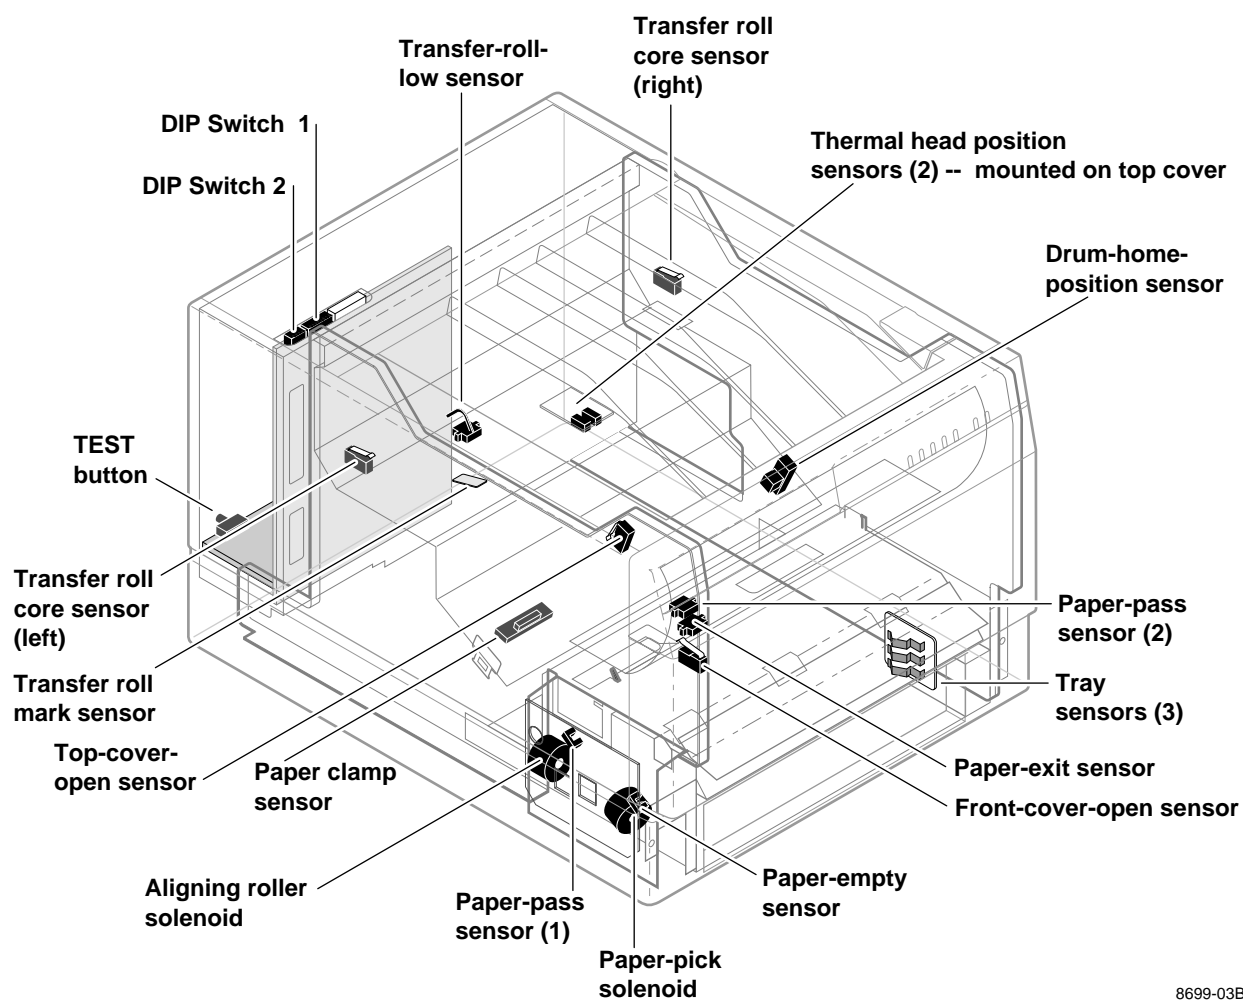Figure 1-2 Internal features of the Phaser 220 and 200 print engines



8699-03B

Figure 1-3 Sensors and switches on the Phaser 220 and 200 print engines

Combination sensors and their meanings

Combinations of sensors are used by the Phaser 220 and 200 print engines to determine the type of transfer roll and the type of media tray installed in the printers.

Transfer roll type sensing

The combinations of the two transfer roll core sensors “tell” the print engine what type of transfer roll is installed. The length of the cores (long or short) actuate the switches. Long cores close the switches, turning them on.

Table 1-1 Transfer roll core sensor combinations

Left transfer roll core sensor	Right transfer roll core sensor	Transfer roll type
Closed	Open	ColorCoat Transfer Roll (for plain paper)
Open	Open	3-Color Transfer Roll (for coated paper)
Closed	Closed	Black Transfer Roll (for coated paper)

Media tray type sensing

The combinations of the three tray sensors “tell” the Phaser 200 and 220 print engines what type of paper tray is installed. (The print engine does not detect the type of media installed in the tray; it only detects the particular tray used with the media.) The tray sensors are located on the right-side interior of the paper tray slot. There are four different tray types:

- **Letter Perforated Media.** This tray is used for Tektronix paper and transparency film with the tear-off perforation. This extra-long media accounts for the portion of the media held by the drum's paper clamp during printing (and therefore cannot be printed upon.) After tearing off the perforated end of the print, the result is a letter-size print in which the image is printed evenly to all four of the paper's edges. A slide switch on the side of the media tray lets you select either paper or transparency film.
- **Letter Plain Paper.** This tray is sized for 8.5 x 11-inch plain paper. It is used when printing with the ColorCoat Transfer Roll.
- **A4 Perforated Media.** This tray is used for the metric equivalent of the Letter-size perforated media. A slide switch on the side of the media tray lets you select either paper or transparency film.
- **A4 Plain Paper.** This tray is sized for 210 x 297-mm plain paper. It is used when printing with the ColorCoat Transfer Roll.

Lower tray assembly. The identical sensor combination scheme is used to determine the type of tray (referred to as the lower tray) installed in the Lower Tray Assembly. (The Lower Tray Assembly is sometimes referred to as the *second feeder*.)

Table 1-2 Tray switch sensor combinations

Bottom switch	Middle switch	Top switch	Tray type
Open	Closed	Open	Letter – Perforated paper
Open	Open	Closed	Letter – Perforated transparency film
Open	Closed	Closed	Letter – Plain paper
Closed	Open	Open	A4 – Perforated paper
Closed	Open	Closed	A4 – Perforated transparency film
Closed	Closed	Closed	A4 – Plain Paper

Printer image processor boards

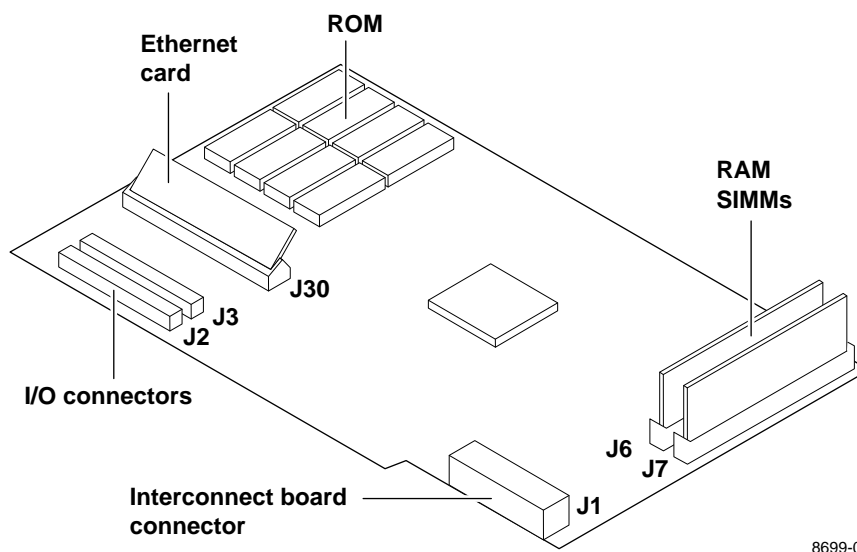


Figure 1-4 Features of the Phaser 200i and 220i image processor boards

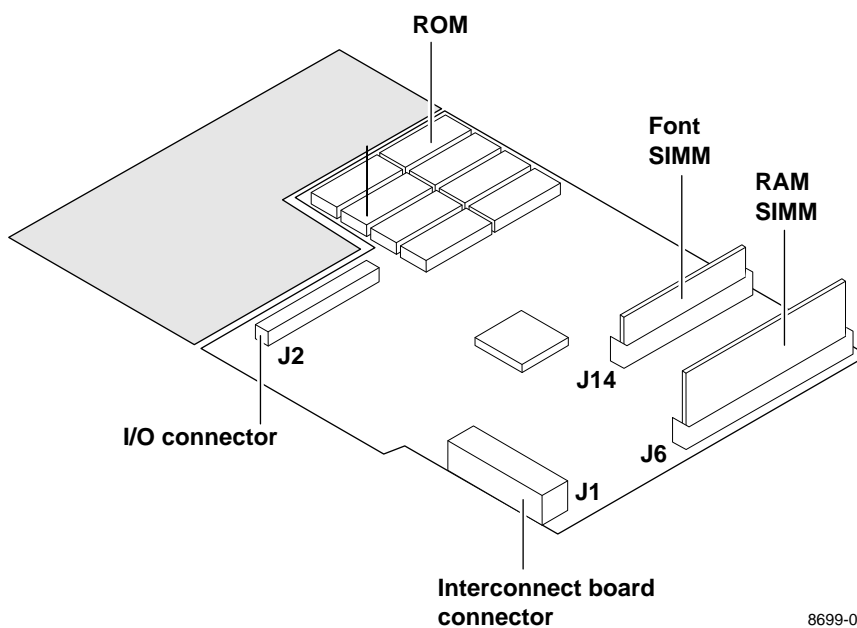


Figure 1-5 Features of the Phaser 200e and 220e image processor boards

Rear panel

Connectors

The rear panel of all Phaser 200 and 220 printers features the host interface connectors to the printer. They include the following connectors:

- Standard parallel
- RS-232 serial
- LocalTalk
- SCSI (Phaser 200i and 220i only)
- Ethernet (Phaser 200i and 220i only)

Both Phaser 200 and 220 rear panels also feature DIP switches to control certain aspects of the printers' imaging. You can also use the DIP switches for controlling the self-tests of the printers' image processor board. Refer to the Section 6 topic "Image processor self-diagnostics" on page 6-31.

Health LED

A health LED indicates the status of the printer.

- *Blinking* (at a steady rate): The printer is operating normally. The LED blinks irregularly during diagnostics.

If a soft error occurs, the image processor board will operate, but in a reduced capacity. Soft failures include failure of expansion memory SIMMs or any of the interface ports. When a soft error occurs, the printer automatically prints a start-up page listing the error.

- *On or Off*: A hard error condition has occurred that would keep the image processor board from operating.

TEST button

The **TEST** button, located at the bottom right rear corner of the printer, has two functions:

- Following normal power-up, pressing the **TEST** button for 5 seconds prints a composite test pattern. Refer to Figure B-1 in Appendix B, *Test Patterns* for a sample of the composite test pattern.
- Pressing and holding the **TEST** button while you turn on the printer places the printer in Service mode.

The following figures illustrate the rear panels of the Phaser 200i and 200e. The rear panels of the Phaser 220i and 220e are, correspondingly, similar to the Phaser 200i and 200e.

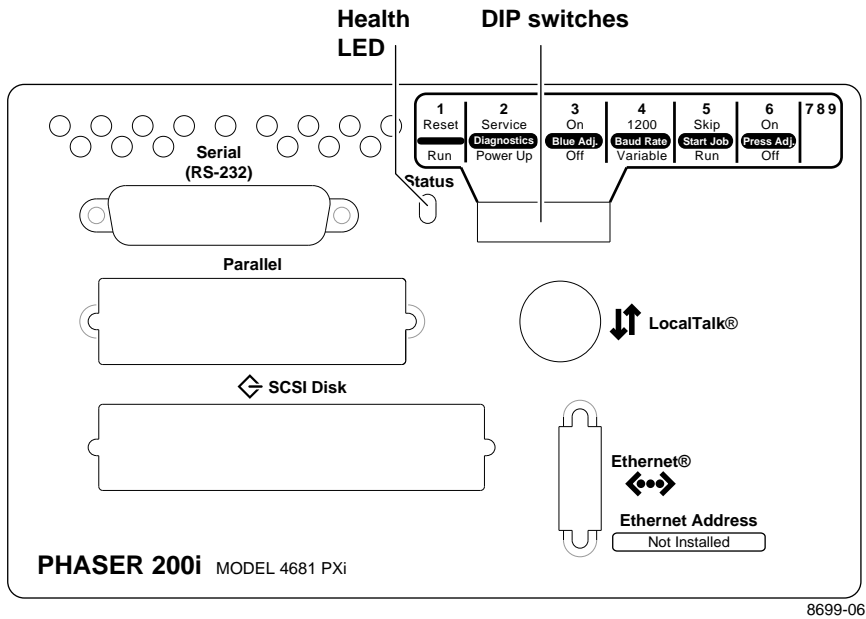


Figure 1-6 Phaser 200i rear panel (similar to Phaser 220i)

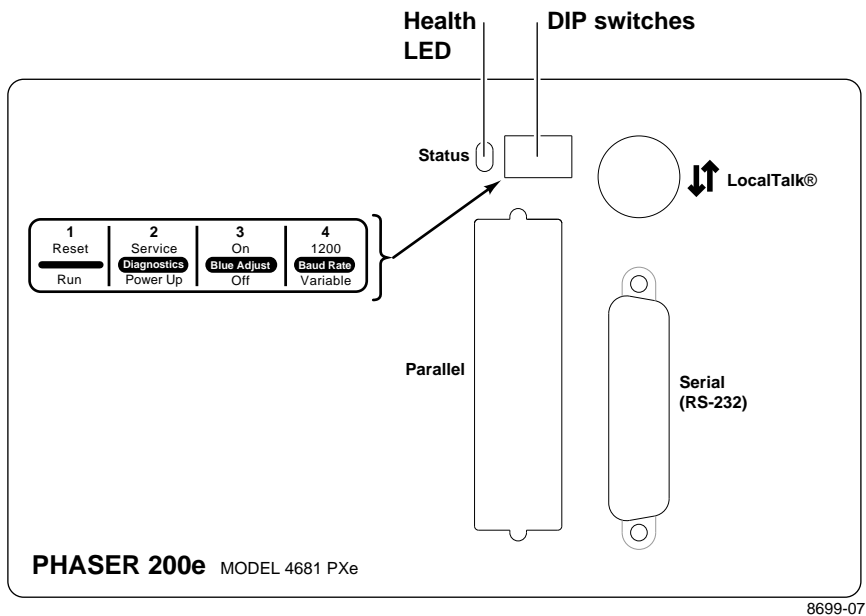


Figure 1-7 Phaser 200e rear panel (similar to Phaser 220e)

Table 1-3 Phaser 200e rear panel DIP Switches

Switches	200e		
1	(down) Normal operation (up) Reset		
2 through 4	Diagnostics modes, serial parameters fixed at 1200 baud, Blue Adjust		
	2	3	4
	↓	↓	↓
	↓	x	↑
	↓	↑	x
	↑	↓	↑
	↑	↑	↓
	↑	↑	↑
			Normal power-up self tests
			Fixed RS-232 parameters
			Blue Adjust
			No self test
			Verification self tests
			Manufacturing Service tests

x means the switch position doesn't matter

Table 1-4 Phaser 220e rear panel DIP Switches

Switches	220e		
1	(down) Normal operation (up) Reset		
2 through 4	Diagnostics modes, serial parameters fixed at 1200 baud. Vivid Blue, Configuration page, NVRAM Reset, Demo pages		
	2	3	4
	↓	↓	↓
	↑	↓	↓
	↓	↑	↓
	↑	↓	↓
	↓	↓	↑
	↑	↓	↑
	↓	↑	↑
	↑	↑	↑
			Normal power-up self tests
			Fixed RS-232 parameters
			Used NVRAM-stored color correction
			Service mode
			Configuration page/NVRAM reset
			Demo pages
			Verification mode
			No self tests

Table 1-5 Phaser 200i rear panel DIP Switches

Switches	200i																												
1	(down) Normal operation (up) Reset																												
2 through 4	Diagnostics modes, serial parameters fixed at 1200 baud, Blue Adjust																												
	<table><tr><td>2</td><td>3</td><td>4</td><td></td></tr><tr><td>↓</td><td>↓</td><td>↓</td><td>Normal power-up self tests</td></tr><tr><td>↓</td><td>x</td><td>↑</td><td>Fixed RS-232 parameters</td></tr><tr><td>↓</td><td>↓</td><td>x</td><td>Blue Adjust</td></tr><tr><td>↑</td><td>↓</td><td>↑</td><td>No self test</td></tr><tr><td>↑</td><td>↑</td><td>↓</td><td>Verification self tests</td></tr><tr><td>↑</td><td>↑</td><td>↑</td><td>Manufacturing Service tests</td></tr></table>	2	3	4		↓	↓	↓	Normal power-up self tests	↓	x	↑	Fixed RS-232 parameters	↓	↓	x	Blue Adjust	↑	↓	↑	No self test	↑	↑	↓	Verification self tests	↑	↑	↑	Manufacturing Service tests
2	3	4																											
↓	↓	↓	Normal power-up self tests																										
↓	x	↑	Fixed RS-232 parameters																										
↓	↓	x	Blue Adjust																										
↑	↓	↑	No self test																										
↑	↑	↓	Verification self tests																										
↑	↑	↑	Manufacturing Service tests																										
5	(down) Check for <i>Sys/Start</i> file on attached SCSI disk (up) Bypass <i>Sys/Start</i> file																												
6	(down) Make no Press Adjust color change. (up) Alter output to simulate printing press output (Press Adjust).																												
7 through 9	<i>not used</i>																												

Table 1-6 Phaser 220i rear panel DIP Switches

Switches	220i		
1	(down) Normal operation (up) Reset		
2 through 4	Diagnostic modes, configuration page, demo pages, Vivid Blue		
	2	3	4
	↓	↓	↓
	↑	↓	↓
	↓	↑	↓
	↑	↑	↓
	↓	↓	↑
	↑	↓	↑
	↓	↑	↑
	↑	↑	↑
			Normal power-up self tests
			Verification mode
			No self tests
			Service mode
			Configuration page
			Demo pages
			<i>not used</i>
			<i>not used</i>
5	(down) Check for <i>Sys/Start</i> file on attached SCSI disk (up) Bypass <i>Sys/Start</i> file		
6	<i>not used</i>		
7	(down) Baud rate is variable (up) Fixed RS-232 parameters		
8 through 9	Color corrections, NVRAM reset		
	8	9	
	↓	↑	No color corrections
	x	↓	Simulate Press (SWOP)/NVRAM reset
	↑	x	Vivid Blue
	↑	↑	Use NVRAM-stored setting (default is Euroscale Press)

Front panel

The same front panel is used for Phaser 200 and Phaser 220 printers. It consists of seven LEDs indicating the printer's normal operating status.

POWER: Illuminates to indicate that the power supply is generating +5 VDC.

READY: *On* indicates the printer is idle. *Blinking* indicates the printer is receiving and processing data.

COVER: *On* indicates either the front or top cover is open.

TRANSFER ROLL (RIBBON): *On* indicates the transfer roll is low and will soon need to be replaced. *Blinking* indicates the transfer roll is empty.

MEDIA: *On* indicates the paper tray is empty. *Blinking* (together with the JAM light) indicates the wrong size paper is installed in the paper tray.

JAM: *On* indicates a jam has occurred inside the printer. *Blinking* indicates a paper-pick error has occurred.

ERROR: *On* indicates a hardware engine error has occurred. *Blinking* indicates a data processing error has occurred with the image processor board.












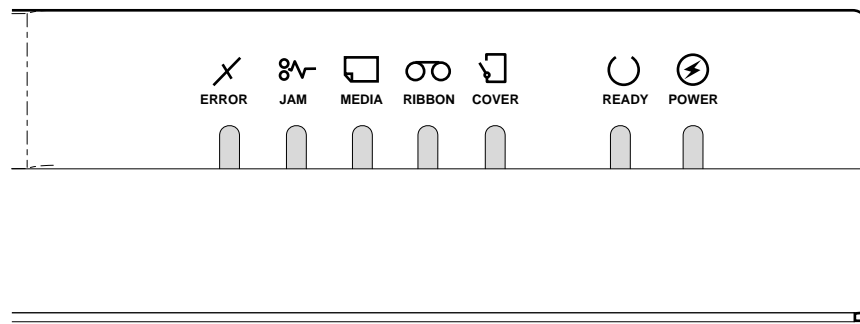




















 

































 
 





























 





Figure 1-8 Phaser 200 and 220 front panels

Front panel LED service mode error codes

Detected error conditions in all print engines are displayed on the front panel as LED patterns. The following table lists the service mode error codes which are displayed while the printer is in service mode. (Service mode is explained in Chapter 9, “Checks and Adjustments.”) These codes are more specific than the error codes displayed during normal operation (see the previous topic “Rear panel”). If an error occurs during normal operation, pressing the rear panel **TEST** button causes the appropriate, and more specific, service mode error code to be displayed on the front panel. The error codes listed below are explained in greater detail in the Chapter 6 topic “Print engine error codes and their causes” on page 6-19.

Table 1-7 Service mode error code summary

Front panel LEDs	Hex code	Error
o o o o o o 	00	No error
o o o o o  	01	Drum position error.
o o o o  o 	02	Thermal head temperature error.
o o o  o o 	04	Top cover open error.
o o o  o  	05	Front cover open error.
o o o   o 	06	Strobe error.
o o o    	07	Engine control board RAM error.
o o  o o o o 	08	Engine control board ROM error.
o o  o  o o 	0A	Interface error with image processor board.
o o   o  	0D	Thermistor failure.
o o    o 	0E	Thermal head lift error.
o o      	0F	Thermal head thermistor failure.
o  o o o o o 	10	Transfer roll empty.
o  o o o o  	11	Transfer roll low.
o  o o   	12	Transfer roll jam.
o   o o o o 	18	Transfer roll feed timer error.
 o o o o o o 	20	Out of media.
 o o o o o  	21	Tray not installed.
 o o o o  o 	22	Paper eject sensor failed to turn on.
 o o o   	23	Paper-pass error / lower tray.
 o o  o o 	24	Paper-pass error / upper tray.
 o o  o   	25	Paper-pass sensor 2 error.
 o o   o 	26	Paper clamped error.
 o o     	27	Media size error.
 o   o o o o 	28	Paper eject sensor failed to turn off.
 o   o o  	29	Paper-pass sensor 1 failed to turn off after paper eject.
 o   o  o 	2A	Paper-pass sensor 2 failed to turn off after paper eject.
 o   o   	2B	Clamp timer error.

o means LED off  means LED on
 means the POWER LED which is *always on*

Specifications

These specifications apply to both the Phaser 200 and Phaser 220 printers.

Table 1-8 Physical dimensions

Dimensions	Value
Height	28 cm. (11 ins.) 37 cm (14.5 ins.) with Lower Tray Assembly
Width:	342 cm (13.4 ins.)
Depth:	42.5 cm (16.7 ins.)
Weight:	Approximately 18 kgs (40 lbs). Print engine weight only; add 26.4 kgs (12 lbs.) for Lower Tray Assembly. Shipping weight is not to exceed 32 kgs (70 lbs).

Table 1-9 Printer clearances

Clearances	Value
Top:	45.7 cm (18 ins.)
Left:	10.2 cm (4 ins.)
Right:	10.2 cm (4 ins.)
Front:	Unrestricted to replace trays and transfer rolls
Rear:	10.2 cm (4 ins.)
Bottom:	No obstruction under printer that could block its cooling vents.
Mounting surface flatness:	Within 5 degrees of horizontal with all four feet in contact with the surface.

Table 1-10 Functional specifications

Characteristic	Specification
Printing process	Sequential surface thermal transfer printing (thermal-wax transfer).
Transfer rolls	<p>Wax-impregnated transfer rolls. The printer automatically senses the transfer roll type by the coding on the leading edge of the yellow band.</p> <p>3-Color Transfer Roll features sequential bands of yellow, cyan, and magenta; 342 prints per roll.</p> <p>A 4-pass ColorCoat Transfer Roll features sequential bands of precoat, yellow, magenta and cyan; 214 prints per roll.</p> <p>Black Transfer Roll features all black panels; 880 prints per roll.</p> <p>The printer automatically senses the transfer roll type by the size of the transfer roll cores.</p>
Addressability	300 dots-per-inch (horizontal and vertical).
Engine printing speed	<p>The time it takes from paper loading to paper ejecting a print:</p> <p>3-Color transfer roll: about 30 seconds per print.</p> <p>ColorCoat transfer roll: about 40 seconds per print.</p> <p>Print times do not include image processing time by the image processor which varies due to image complexity.</p>
Minimum printing margins	<p>Perforated paper:</p> <p>A- and A4-size: all sides, 5 mm (0.2 ins.).</p> <p>Non-perforated paper</p> <p>A- and A4-size: all sides, 5 mm (0.2 ins.) except the bottom, which is 21 mm (0.8 ins.)</p>

Table 1-11 Electrical specifications

Characteristic	Specification
Primary line voltages	87 to 128 VAC (115 VAC nominal) 174 to 250 VAC (220 VAC nominal) Input voltage range is switch-selectable.
Primary voltage frequency range	47 to 63 Hz
Power consumption	235 watts at idle. (800 BTUs/hour) – Power consumption for the printer will be somewhat higher due to image processor electronics which draw power from the print engine.
Current rating	115 VAC configuration – 7 amp max./1 amp min. 220 VAC configuration – 7 amp max./1 amp min.
Primary voltage fusing	115 VAC configuration – 5 amp 220 VAC configuration – 5 amp Fuses are not user-accessible.
Secondary voltages	+5V (4.95 ~ 5.05 V) — 10 A maximum +12 V (11.2 ~ 12.6 V) -12 V (11.5 ~ 12.5V) VH – thermal head voltage (V_{high} – 26 ~ 27.4 V), (V_{low} – 10.6 ~ 11.0)
RF emissions	Both 115 and 220 VAC-configured instruments pass these standards: FCC Part 15 Class B VDE 0871/6.78 Class B EN55022 (CISPR 22) Class B VCCI (CISPR 22) Class B

Table 1-12 Environmental specifications

Characteristic	Specification
Temperature	
Operating	15 to 30° C (59 to 86° F)
Non-operating (power off)	0 to 40° C (32° to 104° F)
Storage (without transfer roll)	-20 to 60° C (-4 to 140° F)
Humidity	
Operating	20 to 80% relative humidity, non-condensing
Non-operating	10 to 90% relative humidity, non-condensing
Altitude	
Operating	0 to 4570 m (15,000 ft.) at 25° C
Non-operating	0 to 15200 m (50,000 ft.)
Vibration/shock	
Non-Operating (vibration)	0.75g, 25 minutes in three mutually perpendicular axes, no resonant frequencies below 25 Hz.
Non-operating (shock)	30 g, half sine, 11 msec.
Operating (shock)	The printer may have any corner raised and dropped 2 inches, while no printing is in progress, without subsequent impairment of operation.
Acoustic Noise (operating)	Average sound level (LEQ) is less than 50 dbA. Peak noise is 55 dbA.

Regulatory specifications

Both the Phaser 220 and Phaser 200 printers are recognized components in conformance with the following regulatory standards:

- The packaged product meets National Safe Transit Committee Test Procedures.
- UL 1950 Information Processing & Business Equipment.
- CSA C22.2 No. 950 Safety of Information Technology Equipment, Including electrical Business Equipment.
- IEC 950 (1991) Second Edition; EN60950 Information Processing & Business Equipment.
- EC: EN60950 Safety of Information Technology Equipment including Electrical Business Equipment.
- EC: EN55022 Limits and methods of measurement of radio interference characteristics of Information Technology Equipment.
- Vfg 243 Radio Interference suppression of Radio Frequency Equipment for Industrial, Scientific, Medical (ISM) and similar purposes and Equipment used in Information Processing Systems; General License.
- VDE 0871/6.78 (Class B) Radio Frequency Interference Suppression of Radio Frequency Equipment for Industrial, Scientific, Medical (ISM) and Similar Purposes.
- FCC Class B (for 115 VAC equipment).

Installing the Printer and Drivers

This chapter discusses installing the printer and its drivers as a part of the S0 installation option. Tektronix Service Option S0 consists of three main functions detailed in this and the next two chapters of this manual:

- Chapter 2 “Installing the Printer and Drivers.” The first portion of installation instructions, this chapter, consists of five basic processes:
 - Pre-installation interview. This is a phone interview to verify that the customer is ready for the printer. The interview verifies that the customer has a suitable place for the printer with the proper environment. The call also verifies that any assistance, such as network system administration, will be available for the scheduled installation and that all necessary cables will be available.
 - Unpacking. This is the procedure for taking the printer out of its shipping box.
 - Testing. This checks that the printer works properly prior to connecting it to a host computer.
 - Cabling and configuring. This discusses setting up the printer for communicating to the appropriate host computers.
 - Loading drivers. This covers installing software on the host computers and configuring the host applications to drive the printer.

Following these steps, proceed to Chapter 3 and then Chapter 4.

- Chapter 3 “Verifying the Printer and Its Hosts” explains how to verify that the printer, the host driver and the connection between them functions correctly.
- Chapter 4 “Key Operator Training” gives a procedure for training customers to use and care for the printer.

Pre-install questions for customers

Prior to installing the printer, you should contact the customer and verify that he or she has prepared an appropriate location for the printer. You will also want to ensure that you have all the information you need to install the printer at the customer's site.

Ask the customer the following:

Customer's name _____

Address _____

Phone number _____

- What type of computers will be networked to the printer?
 - ☐ PC _____
 - ☐ Macintosh _____
 - ☐ UNIX _____
 - ☐ other _____
- Which type of host-to-printer connection will be used:
 - ☐ serial
 - ☐ parallel
- What kind of network environment will the printer be installed into?

<u>Hardware</u>	<u>Protocols</u>
<input type="checkbox"/> LocalTalk	<input type="checkbox"/> EtherTalk
<input type="checkbox"/> Token Ring	<input type="checkbox"/> TCP/IP
<input type="checkbox"/> ThinNet (10Base2)	<input type="checkbox"/> Novell NetWare
<input type="checkbox"/> Twisted Pair (10BaseT)	<input type="checkbox"/> other _____
- In the event that the printer is to be installed into a network environment, will a network administrator be available to help in assigning network names and addresses for the printer?

Administrator's name _____

Phone Number _____
- In the event that the printer is to be installed in a TCP/IP network, has the network administrator assigned a printer name and the appropriate addresses for the printer?

Printer Name _____

Printer IP address _____

Net Mask _____

Broadcast address _____

Gateway _____
- What software application packages will be used with the printer?
(Some applications require special printing utility files.)

- Will the application(s) and sample files be available at the time of the installation to send test files to the printer? _____
- Will an external SCSI font disk be installed on the printer? _____
- For installations using the printer's built-in Ethernet interface, you should inform the network administrator of the printer's preconfigured Ethernet address; it is printed on the configuration page.
- Does the customer have the appropriate power outlet available? The printer's AC power supply auto-senses these voltages:
 - 110 VAC (90 to 132 VAC)
 - 220 VAC (180 to 264 VAC)
- Did the customer order the correct power cord?
 - _____ U.S. Standard (161-0230-01)
 - _____ European Option A1 (161-0104-06)
 - _____ United Kingdom Option A2 (161-0066-10)
 - _____ Australian Option A3 (161-0104-05)
 - _____ Swiss Option A5 (161-0154-00)
- *Customers must provide* the particular interface cable or network adapter they need to use with the printer. Customers can purchase the following from the Tektronix Graphics Supplies Order Desk by calling 1-800-835-6100.
 - Parallel cable, DB25-pin plug to Centronics 1284C 012-1468-00
 - Serial, 9-pin to 9-pin, 3 m (10 ft.), null modem 012-1379-00
 - Serial, 9-pin to 25-pin, 3 m (10 ft.), null modem 012-1380-00

For AppleTalk installations, *customers must provide* the appropriate network adapter to the printer's 9-pin circular LocalTalk connector. Customers can obtain an adapter from their dealer. For Ethernet networks, *customers must provide* the appropriate network cables to connect to the printer's ThinNet or Twisted Pair connector.

The printer requires the following environmental conditions:

- Temperature: 15 to 32° C (59 to 90° F)
- Humidity: 10 to 80% relative humidity, non-condensing
- Power: 110 VAC or 220 VAC. The printer requires about 4.5 amps of current at full load in 110 VAC mode; 2.5 A at 220 VAC mode.
- Clearances: A space measuring 183 cm wide by 92 cm deep by 183 cm high (72 ins. wide by 36 ins. deep by 72 ins. high). The space in front of the printer accounts for enough clearance to install the paper tray. The extra height is open the top cover.

A space measuring about 6 meters (18 feet) long by 2 meters (7 feet) wide must be available to unpack the printer.

- Weight support: 135 kgs (300 lbs.)

Driver software must be installed on the host computer to use the printer's fullest potential. A host computer must meet the following conditions:

Mac

- Mac II, Performa, Centris, Quadra or PowerMac
- Operating System 6.0.7 or later
- 4 Mbytes RAM

PC

- IBM AT, PS/2, Pentium or compatible, with a 386 or later CPU, a 3.5-inch floppy disk drive, and a hard disk drive, 2 Mbytes RAM, 2 Mbytes of hard disk space

DOS systems

DOS 3.1 or later

An application that supports color PostScript or HP-GL

Windows systems

Windows 3.1

Windows 95

OS/2

Windows for Workgroups 3.11

Windows NT and Daytona

Workstation

- UNIX workstations: The X Window System,
SUN workstations: Solaris 1.1 (BSD), Solaris 2.x (Sys V, optional LPD support required)
DEC: Ultrix, VMS, OpenVMS
HP: HP-UX
SGI: IRIX
IBM RS6000: AIX (optional LPD support required)
- 1 Mbyte hard disk space for files

Based on the results of the pre-install interview with the customer, you may wish to access the Tektronix Highly Automated Library (HAL) during business hours, at 1-800-835-6100 (ask to be transferred to HAL) for articles that may help with installing the printer into a customer's network. You can call HAL directly at (503) 682-7450, 24 hours a day, 7 days a week. The articles can be faxed to you in just minutes. HAL has articles that may be of interest to your customer, such as printing from a specific application. (This is a good way of introducing the HAL system to the customer.) Outside of the U.S. you may use EuroHAL. Refer to the Chapter 4 topic, "Using the automated fax systems" on page 4-6.

Installing the printer

Printer inventory

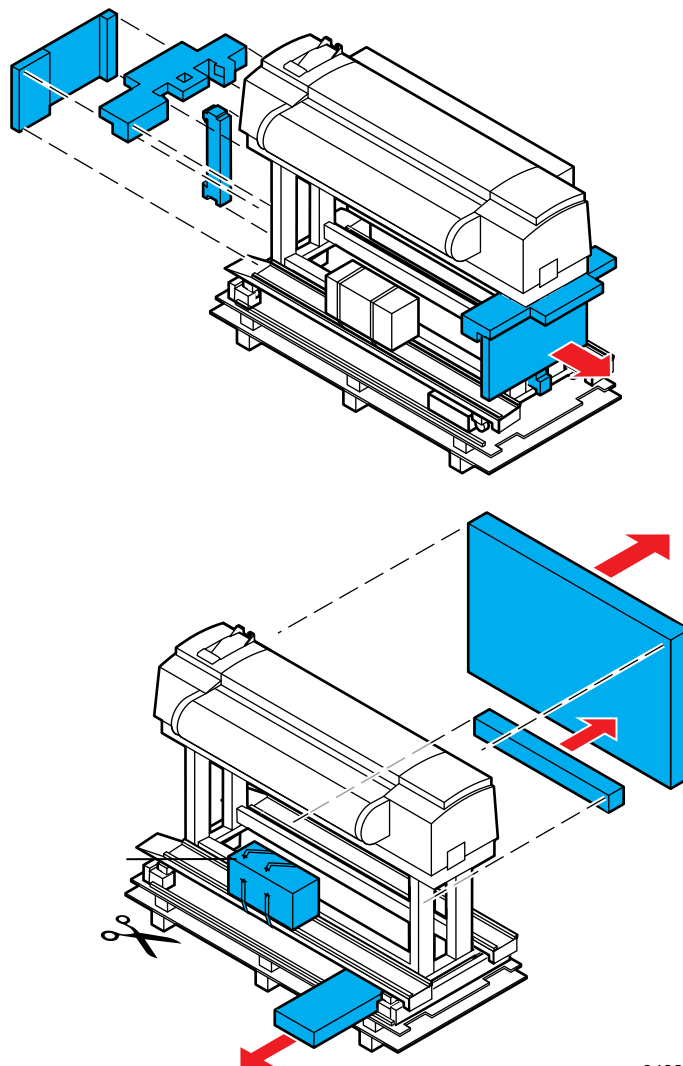
The printer and its accessories are shipped in a single box on a pallet. The following items are shipped with the printer:

- Unpacking Instructions
- Quick-Start Installation Instructions
- *Phaser 600 Color Printer User Manual*
- Phaser 600 CD-ROM and diskettes
- TekColor Care information (including the registration card)
- *Phaser 600 Quick Reference Card*
- Supplies information sheet
- Power cord
- Optional PhaserShare manuals and diskettes
- Starter paper roll
- Paper roll holder
- Ink loader
- ColorStix ink sticks
- Output bin
- Media sampler kit

Removing the packing material

Note Save *all* packing material in case moving or subsequent shipment is necessary.

1. Follow the instruction on the exterior of the shipping box to remove the exterior packing material.
2. Remove any adhesive tape that holds the printer's doors shut.




9482-119

Figure 2-1 Removing the packing material

Installing the pallet ramps

The shipping pallet contains two ramps that allow you to gently roll the printer from the pallet to the floor. A space measuring about 6 meters (18 feet) long by 2 meters (7 feet) wide must be available to unpack and roll the printer off the shipping pallet.

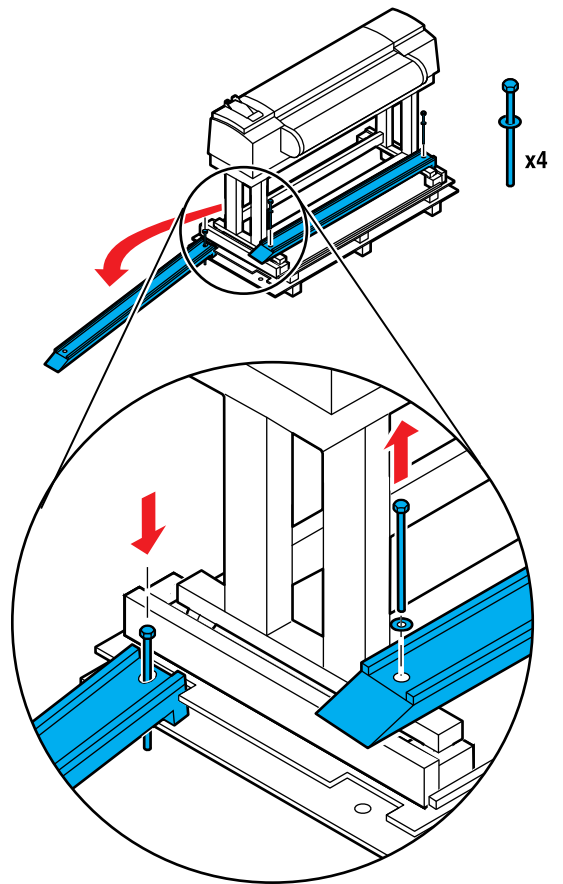1. Make sure that the leveling legs under the printer are screwed into the printer as far as possible. This is necessary to allow the printer enough clearance to be rolled to the pallet ramps.
2. Using a 13 mm socket wrench, loosen and remove the two bolts holding each ramp to the pallet platform.
3. Lift the ramps off the pallet and place them into the openings on the side of the pallet.



9482-120

Figure 2-2 Installing the ramps

4. Insert one bolt into each ramp at the point where the ramp rests on the pallet. The bolts serve as pegs and are not tightened.

5. Raise the levelers at each end of the printer. There is one leveler next to each wheel.
6. Remove the block of wood from the left side of the printer and place it under the ramps for support.

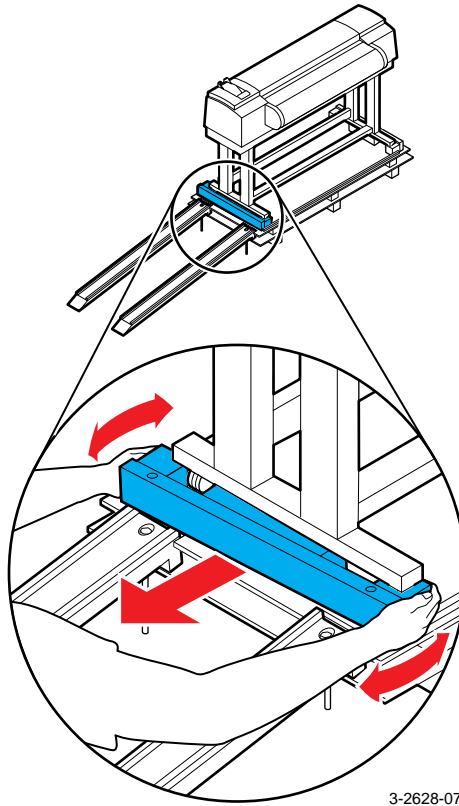


Figure 2-3 Remove the wooden block

Removing the printer from the shipping pallet

Warning *Because of its size and weight, always use two people to move the printer off or onto the ramps; also, make sure that you guide the printer slowly down the ramps so that it doesn't roll into anyone or anything. Failure to do so may injure a person or damage the printer.*

1. Gently move the printer so that the printer's wheels align with the ramps. Unlock the wheels.
2. Gently guide the printer onto the ramps and down to the floor.

Caution As you guide the printer onto the ramps, be careful that the leveling legs do not catch on the wood block (if they are fully retracted, they provide enough clearance).

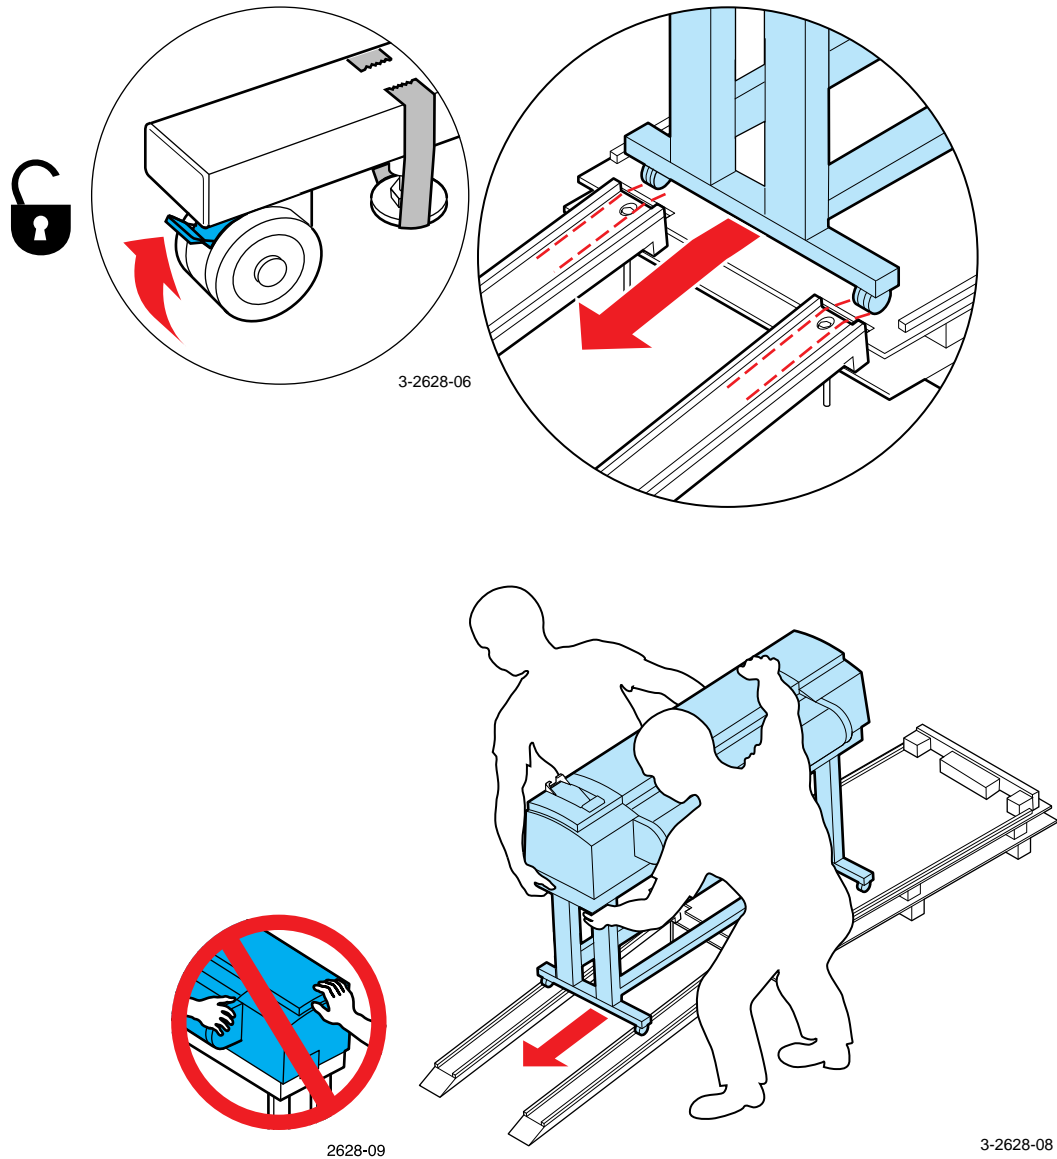



Figure 2-4 Guiding the printer down the ramps

3. Remove the bolts from the ramp.
4. Slide the ramps onto the pallet and secure with the bolts. Store or discard the pallet.
5. Roll the printer to the location that you have selected and prepared for its operation.

Removing the shipping block

Note Make sure that you have access to all sides of the printer while you are setting it up.

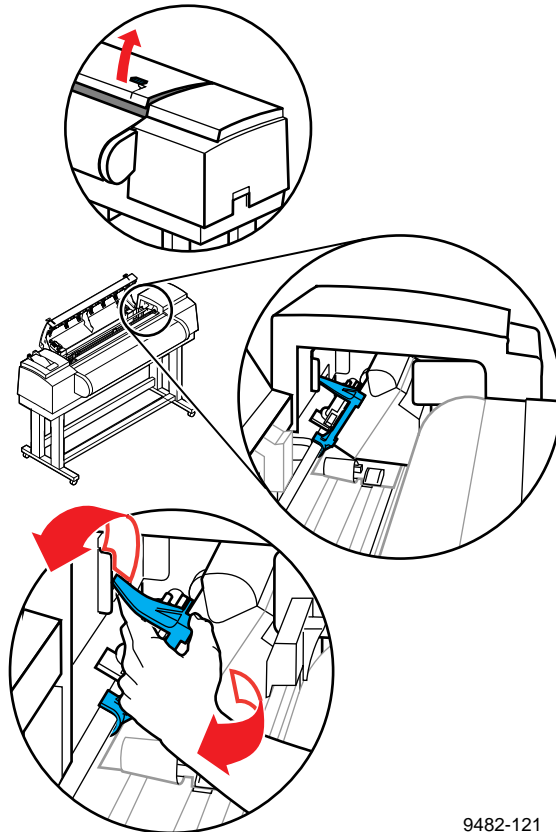1. Open the top cover.
2. Remove the shipping block (printhead restraint) from inside the printer.




9482-121

Figure 2-5 Removing the shipping block

3. Close the top cover, making sure that it is locked.

Attaching the ink loader

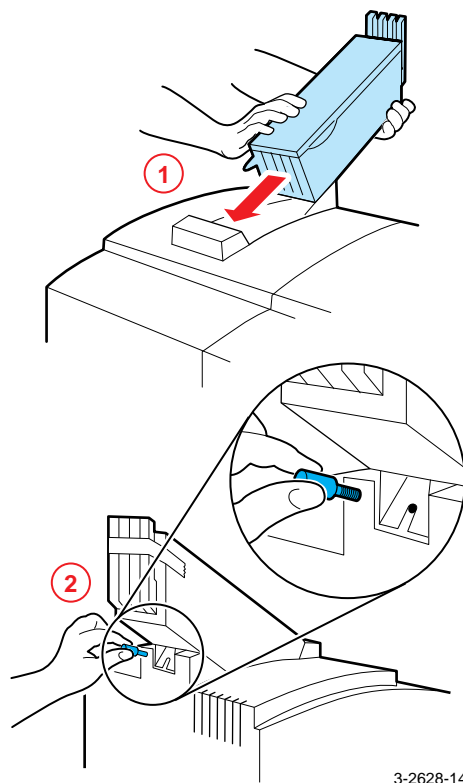1. Remove the ink loader from its packaging.
2. Remove the thumbscrew from the back of the printer where the ink loader will install.
3. Pull back the four sliders as shown.
4. Insert the ink loader into the printer.
5. At the rear of the ink loader, insert the thumbscrew into the opening to secure the ink loader to the printer; tighten the screw.



3-2628-14

Figure 2-6 Installing the ink loader

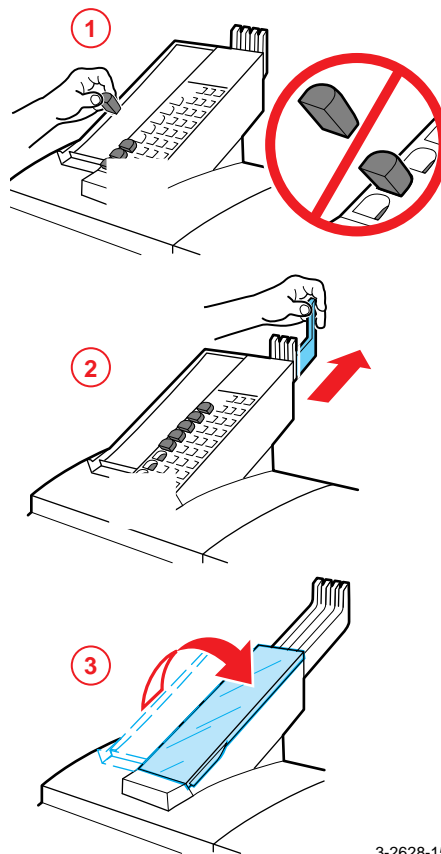
Loading the ink

1. Open the ink loader cover.
2. Insert the black ColorStix ink sticks (8) into the appropriate slots for that color.

Caution Load only one ink stick at a time in each slot; otherwise the ink sticks might jam.

Note Each color ink stick is uniquely shaped to make ink loading easy.

3. Pull back the black ink's slider to release the ink sticks into the printer.
4. Repeat steps 2 and 3 for each color.
5. Close the ink loader cover.



3-2628-15

Figure 2-7 Loading ink

Attach the output bin

1. Remove the output bin and its two screws from its packing box.
2. With the output bin folded at its joint, hook the shorter end over the back rail of the printer.
3. Align the screwholes of the longer end of the output bin with the screwholes in the front legs of the printer.
4. Insert the screws into the holes and tighten with a 5 mm (7/32 in.) hex wrench.

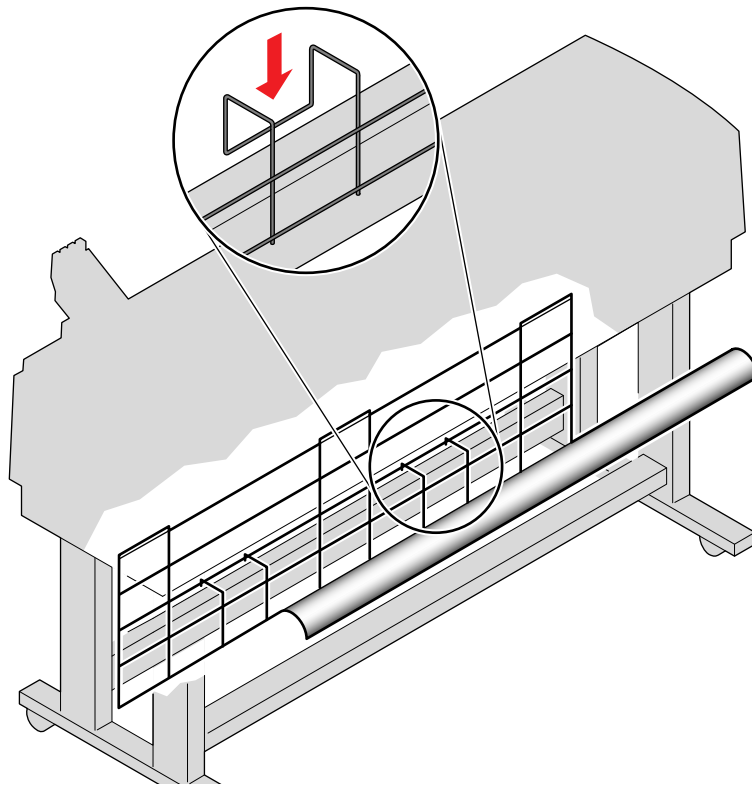


Figure 2-8 Installing the output bin

Adjust the leveling legs

1. Lock the wheels, adjust the four leveling legs under the printer by unscrewing each to the desired height.

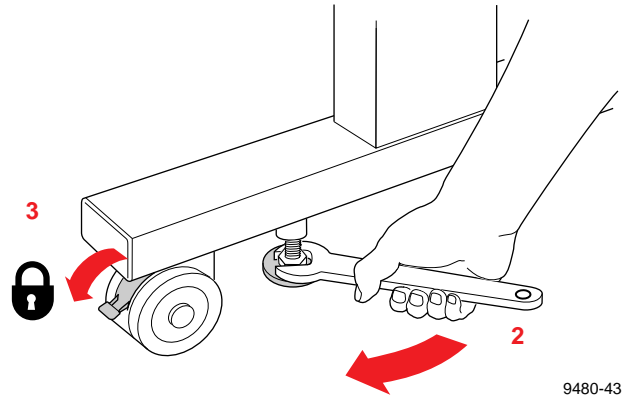


Figure 2-9 Leveling the printer

2. Test that the printer is level in the side-to-side and front-to-back axes.

Installing the paper roll

1. Open the paper cover.
2. Lift the paper roll holder out of the printer. Notice that each end of the holder is unique:
 - a. The left side of the holder (closest to the ink loader) has a removable plastic nut and endcap.
 - b. The right side of the holder (closest to the front panel) has a fixed endcap.
3. Loosen the plastic nut from the left end of holder by unscrewing it.

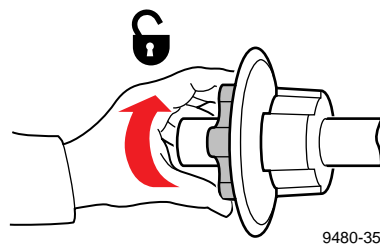


Figure 2-10 Loosening the nut from the roll holder

4. Slide the removable endcap from the shaft.

5. Slide the paper roll onto the shaft and center it over the fixed endcap.

Note The endcaps are fitted with adapters which convert the roll holder to use 75 mm (3 inch) diameter core rolls. Removing the snap-fit adapters allows the customer to use 50 mm (2 inch) core rolls.

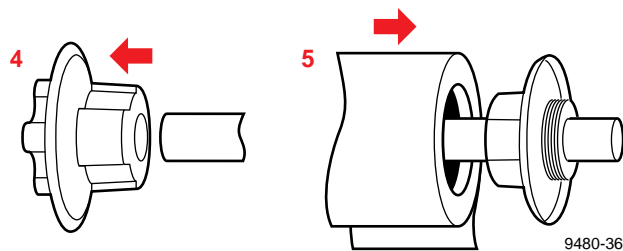


Figure 2-11 Loading a media roll on the roll holder

6. Reinstall the removable endcap; it fits inside the paper roll.
7. Tighten the plastic nut.

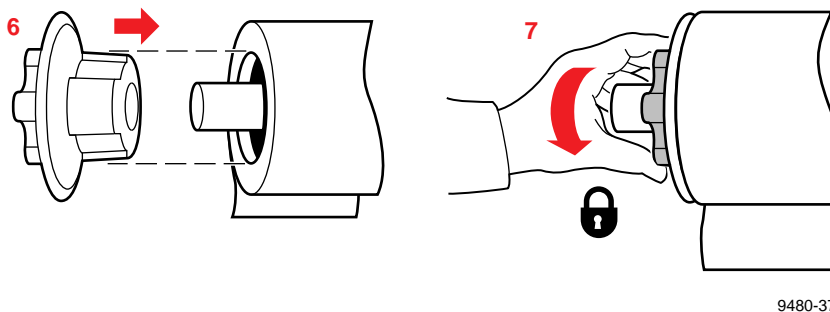


Figure 2-12 Securing the roll on the roll holder

8. Insert the paper roll holder into the printer as shown, with the fixed end (a) closest to the front panel (b).

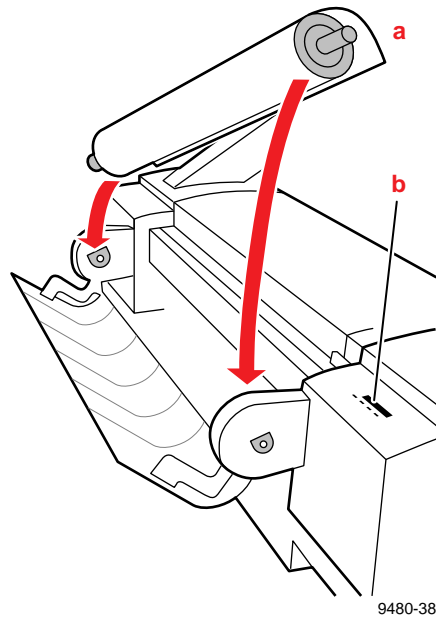


Figure 2-13 Loading the roll in the printer

9. Feed the paper into the slot; when the printer is ready, the printer will pick up the paper. If the paper is pushed in too far, a jam may occur.

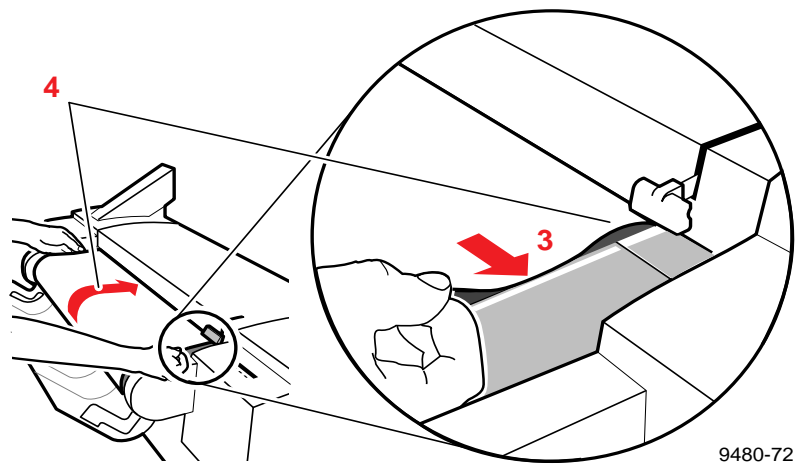


Figure 2-14 Feeding the roll into the printer

10. Close the paper cover.

Caution *To keep your printer in good working order, always use clean, unused media.*

Installing options

1. **Installing RAM SIMMs.** The standard configuration of the printer includes 8 Mbytes of RAM. This can be supplemented with 16-Mbyte RAM SIMMs. To install the optional memory, refer to the Chapter 8 topic, “RAM SIMM” on page 8-65.
2. **Installing a network card.** Network support is provided via three optional PhaserShare Network Interface plug-in cards.
 - The LocalTalk/Serial Card supports AppleTalk/LocalTalk protocols and RS-232 serial connectors.
 - The Ethernet Interface Card supports the EtherTalk, Novell NetWare, and TCP/IP protocols.
 - The Token Ring Network Card supports Novell NetWare, TokenTalk and TCP/IP protocols.

To install a network card, refer to the Chapter 8 topic, “Network card” on page 8-68.

3. Following RAM SIMM or network card installation, turn on the printer, as explained in the following topics, to ensure that the card works properly. The printer executes a power-up self-test and prints a startup page. If the printer fails its self-test, refer to Chapter 6, “Troubleshooting.” The printer can take up to 15 minutes to warm up from a cold start.
4. Connect the printer to a host as detailed in the following topics.

Note *Carry spare serial and parallel cables and network adapters. You can use them if you encounter a defective cable or as an alternate means of testing the printer-to-host communications.*

Connecting the printer

Printer ports

The printer is shipped standard with a bi-directional parallel port and a SCSI port for interfacing to the optional Phaser Copystation, or an external hard disk for font storage. In addition, the printer can be configured with optional networking and serial ports. The printer accepts print jobs from all the data ports at the same time on a first-come, first-served basis. Refer to “Turning on the printer” on page 2-22 and “SCSI connections” on page 2-21 for more information on the SCSI port. For more information on the Phaser Copystation, refer to the CD-ROM and World Wide Web topics.

The optional, PhaserShare card provides the other printer ports:

- The PhaserShare Ethernet card supports Novell NetWare, EtherTalk and TCP/IP protocols.
- PhaserShare Token Ring card supports Novell NetWare, TCP/IP and TokenTalk protocols.
- PhaserShare LocalTalk/serial card provides a LocalTalk port and a 9-pin serial port.

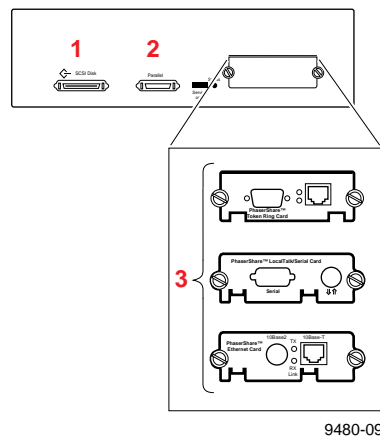


Figure 2-15 Printer ports

Note Make all printer port connections **before** you turn on the printer.

The *PhaserShare Network Cards and Software System Administrator User Manual* contains all the information necessary for configuring and using the optional connections.

Parallel connection

To connect to the printer's parallel port, a high-density bi-directional parallel cable is required. This cable is available from most computer cable vendors, and also as Tektronix part number 012-1468-00 (36-pin high-density printer to 25-pin DSUB PC cable).

The printer supports a standard (uni-directional) parallel port. The parallel port can also be set for bi-directional communications. Refer to the CD-ROM or World Wide Web for instructions on changing parallel communications and for information on cables and adapters.

1. Connect a parallel interface cable to your computer and to the printer's parallel port.

Note *The printer's parallel port uses a high-density connector, Type IEEE 1284-C. To use a standard Centronics-style parallel cable, use a parallel cable adapter.*

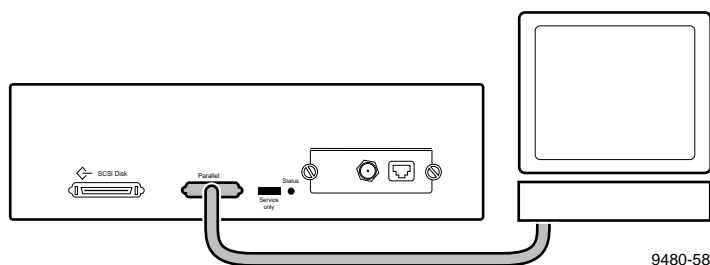


Figure 2-16 Connecting the parallel port

2. If you have no other connections to make, turn immediately to "Turning on the printer" on page 2-22.

PhaserShare™ network and serial connections

To obtain serial or network connections, one of the optional PhaserShare™ cards must be installed in the printer. A PhaserShare card can be purchased initially with the printer or later as a separate upgrade kit. If purchased initially, you will find the network manuals, *PhaserShare Network Cards and Software System Administrator User Manual* and *PhaserShare Status Software User Manual*, included in the box with your printer.

PhaserShare network interfaces offer high performance and flexible workgroup connectivity. All data input ports and network protocols are simultaneously active. Print jobs are processed on a first-come, first-served basis.

To order the optional hardware, contact your local Tektronix reseller or call Tektronix toll-free in the United States at **1-800-835-6100**.

For detailed information on configuring and using the printer on networks, refer to the *PhaserShare Network Cards and Software System Administrator User Manual*.

SCSI connections

The SCSI port is used for connecting these optional peripheral devices:

- **External font disk** *(optional)*
For information on installing a hard disk, refer to the CD-ROM or World Wide Web topics.
- **Phaser Copystation accessory** *(optional)*
Refer to Chapter 2 of the *Phaser Copystation User Manual* to set up the Phaser Copystation.

Turning on the printer

Caution Before turning on the power to the printer, make sure that you have removed the shipping block (printhead restraint) from inside the printer's top cover. Otherwise the printer will power-up with an error.

After you have connected all the interface cables, you are ready to connect the power cord and turn on the printer.

Caution To protect your printer from a power surge, make sure that the power switch on the printer is in the **off** position before plugging in the cord.

Make sure that you use the power cord that is shipped with the printer.

1. Plug the power cord into the printer and into a grounded outlet.

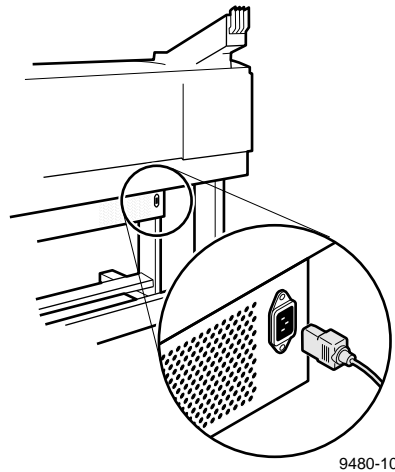


Figure 2-17 Attaching the power cord

2. Turn on the power to any peripherals you have connected (such as a font disk or Phaser Copystation).
3. Wait 1 minute, then turn on the printer.

What happens at power-up

- Both status indicators (power ☺ and error ✕) on the printer's front panel light briefly. Messages appear in the display panel (LCD). The printer goes through a series of self-tests making a number of different sounds as it initializes its motors and systems. The printer takes about 15 minutes to warm up and complete the self-tests.

Note *The printer's memory includes a startup page that is disabled by default. You can turn on the startup page using either the front panel menu or a software utility file provided on the CD-ROM or the Tektronix World Wide Web page.*

When the printer is ready for operation

When the power-up sequence is complete, the green indicator is on steady (not blinking), the red indicator is off, and the front panel message reads Ready.

Startup page

When you turn on the printer, it executes a series of self-tests to determine if there are any problems with the PostScript interface. After running self-tests and reaching the “Ready” state, the printer prints a startup page (if the startup page has been enabled or a failure occurs). After running self-tests and printing the startup page, the printer is ready for operation. A downloadable PostScript utility file, found on the printer’s CD-ROM, allows you to enable or disable the startup page. Alternately, you can disable the startup page using the front panel menu; refer to the Chapter 9 topic, “Front panel menu” on page 9-2.

The startup page provides valuable information about the printer:

- Fonts
- Ports (Serial, Parallel, LocalTalk, Ethernet)
- Printer name
- Ethernet protocols
- TekColor corrections and print quality mode
- Pages printed
- RAM installed
- Tektronix version firmware
- Adobe PostScript version software
- Printer ID
- Authorization code
- SCSI disk attached

If the printer detects a non-fatal error at power-up, the startup page prints with an error message printed in red; this is true, even if the startup page has been disabled; the printer will still force a print to report the error.

Message

Serial, Parallel, LocalTalk, EtherTalk, or
SCSI Port failed
DRAM SIMM failed

Description

The named port is not working. The other ports can still be used.

The memory SIMM is not working. Since the printer’s base memory is still working, the printer can still be used, but large images may not print, special imaging features may not work and throughput may be reduced.

Configuration page

To provide further diagnostic information, the printer can print a configuration page. The configuration page lists the values that the printer stores in its NVRAM as well as those of an installed network card's NVRAM. These values can be informative when troubleshooting the printer, particularly networked operations. To print a configuration page, while the printer is powered-up and idle, scroll through the front panel menu and select **Configuration Page** from the **Help pages** menu. Refer to the Section 9 topic, "Printing the configuration page" on page 9-4.

The configuration page gives the following information:

- General information about the printer, such as print count, the assigned name, Ethernet address, the authorization code (if loaded), timeouts, number of fonts, and total memory
- Color settings such as Vivid Color
- Serial port settings (if installed)
- Parallel port settings
- LocalTalk port settings (if installed)
- EtherTalk settings (if installed)
- TCP/IP settings (if installed)
- Novell NetWare settings (if installed)

Table 2-1 Configuration page settings

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
Printer name	The current name of the printer as seen on a network.	yes	Phaser 600	Any name defined by the user up to 31 characters in length.
Pages printed	Total number of prints processed through the image processor.	yes	0	
Startup page enabled	Indicates if the printer prints a startup page upon power-up.	yes	No	Yes
Printer ID	The Ethernet address provided for each printer.	yes	In the format xx:xx:xx:xx:xx:xx	
Adobe PostScript version	Tektronix version number of the PostScript firmware running on the printer's processor.	yes	2015.105	
Print engine FW version number	Tektronix version number of the engine firmware running on the printer's processor. Read from ROM and stored in NVRAM.	yes	1.0/1.0	Any value

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
Fonts in ROM	Number of font stored in the printers ROM memory.	no	17	39 (Roman) or 59 (Kanji)
Job Timeout	Amount of time a job can take to process.	yes	0 seconds	Any value from 0 to 65535 denoted in seconds; 0 means unlimited amount of time.
Wait Timeout	Amount of time the image processor will wait for additional data from a host.	yes	40 seconds	Any value from 0 to 65535 denoted in seconds; 0 means unlimited amount of time.
Manual Feed time-out	Amount of time allowed to install a sheet of media in the manual feed tray.	yes	60 second	Any value from 0 to 65535 denoted in seconds; 0 means unlimited amount of time.
Auto Continue time-out	Amount of time the image processor waits for a Page Size Policy 2 or Print Preview request.	yes	15 minutes	Any value from 0 to 65535 denoted in seconds; 0 means unlimited amount of time.
RAM memory	Total amount of RAM on the image processor board.	no	8 MBytes	24 or 40 Mbytes
Print Quality mode	Indicates the selected print quality mode	yes	Standard	Enhanced
Color Correction	Indicates the type of color adjustments used to simulate different color uses.	yes	None	User-defined, Vivid Color, Simulate Display, SWOP (Specification for Web Offset Publication) Press, Euroscale Press, Commercial Press, SNAP (Specification for Non-heat Advertising Print) Newsprint Monochrome, Raw RGB Colors, Raw CMYK Colors.
Parallel port interpreter	Indicates the type of interpreters in use at the port.	yes	PostScript Level 2	Not installed, Disabled, <interpreter>
Parallel port Encoding	Indicates the type of data encoding the parallel port is expecting.	yes	Binary	ASCII, Raw, TBCP
Parallel port back channel	The device used for standard output and standard error.	yes	None	Serial, Parallel, LocalTalk, EtherTalk, TokenTalk
PhaserShare	Indicates the type of PhaserShare card installed in the printer		Hardware-dependent	Ethernet Card, TokenRing card, Serial/LocalTalk card
Ethernet address	A unique address provided for each printer.	yes	Hardware-dependent	In the format xx:xx:xx:xx:xx:xx
Token Ring Address	A unique address provided for each printer.	yes	Hardware-dependent	In the format xx:xx:xx:xx:xx:xx
Token Ring: Speed	Speed at which the ring is operating	yes	4	16
Token Ring: Bridging	Ring bridging method	yes	Adaptive	Transparent, Source Route

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
Token Ring: All Routes Broadcast	Indicates default frame type for broadcasts	yes	false	true
Token Ring: Connection State	Indicates connection state	no	Connection-dependent	NoCable, Cable connected, Inserted, Removed, Duplicate Address
Token Ring: Early Token Release	Indicates whether the release was an early one	yes	Firmware dependent	true, false
Firmware version	Indicates the version number of the Phasershare card firmware	yes	Firmware dependent	
LocalTalk port interpreter	Indicates the type of interpreter in use at the port.	yes	PostScript Level 2	Not installed, Disabled, <interpreter>
LocalTalk printer type	Indicates the type of printer installed at the port.	yes	LaserWriter	Any string 32 characters in length or less
LocalTalk node	Indicates the LocalTalk network node number of the printer.	no	0	Any integer 0 through 254
Serial port interpreter	Indicates the type of interpreters in use at the port.	yes	PostScript Level 2	Not installed, Disabled, <interpreter>
Serial port encoding	Data byte encoding for communication.	yes	ASCII	Binary, Raw, TBCP
Serial port speed	Baud rate.	yes	9600	38400 (printer-dependent), 19200, 9600, 4800, 2400
Serial port flagging	Hardware or software flagging.	yes	XonXoff	DTR, DTR low, Etx Ack, Robust Xon Xoff, Xon Xoff2
Serial port check parity	Determines if parity checking is done	yes	false	true
Serial port parity	Parity check used between the printer and the host	yes	None	Space, Even, Odd, Mark
Serial port data bits	Bits used to encode a data byte.	yes	8	7
Serial port stop bits	Number of stop bits.	yes	1	2
EtherTalk Port interpreter	Indicates the type of interpreter in use at the port.	yes	PostScript Level 2	Disabled, <interpreter>
EtherTalk printer type	Indicates the type of printer installed at the port.		LaserWriter	Any string of 32 character or less.
EtherTalk zone	Name assigned by the network administrator for the zone the printer is assigned to	yes	*	Any string of 32 characters or less.
EtherTalk network	The EtherTalk protocol address assigned at boot time for routing.	yes	0	Integer 1 through 65535
EtherTalk node	Indicates the EtherTalk address of a printer on a network.	yes	0	Integer 1 through 65535

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
TokenTalk Port interpreter	Indicates the type of interpreter in use at the port.	yes	PostScript Level 2	Disabled, <interpreter>
TokenTalk printer type	Indicates the type of printer installed at the port.		LaserWriter	Any string of 32 character or less.
TokenTalk zone	Name assigned by the network administrator for the zone the printer is assigned to	yes	*	Any string of 32 characters or less.
TokenTalk network	The TokenTalk protocol address assigned at boot time for routing.	yes	0	Integer 1 through 65535
TokenTalk node	Indicates the TokenTalk address of a printer on a network.	yes	0	Integer 1 through 65535
NetWare port interpreter	Indicates the type of interpreters in use at the port.	yes	Auto Select	Disabled, <interpreter>
Strip control characters	Also known as filtering. "Yes" means that Adobe IntelliSelect heuristics are used for protocol detection.	yes	yes	no
Print server name	Name of the printer server.	yes	TEK01B009, hardware-dependent	<i>user-defined</i>
Configuration file server	Name of the configuring file server.	yes	null string	<i>user-defined</i>
Login Password	Indicates whether a network password has been set.	yes	Not set	Set
Queue Scan interval	Interval between successive queue scans by the printer.	yes	15 seconds	An integer (1 through 3600) in seconds
Print server Status	Print server status.	no	null string	
Suppress Banners	Don't print banners.	yes	false	true
Configuration time-out	Time to wait before executing fall back code.	yes	3 minutes	
Network Address	Printer's network number on the Ethernet network; it is automatically set when the printer is turned on.	yes	null string	An 8-digit hex number 00000001 through FFFFFFFE
Ethernet frame type	How IPX packets are transmitted over the network.	yes	Adaptive	802.3-X, DIX, 802.3-2, 802.3-2-SNAP
TCP/IP port interpreter	Indicates the type of interpreter in use at the port	yes		Not authorized, Disabled
RARP/BOOTP (Reverse Address Resolution Protocol/Boot Parameter Protocol)	Used for setting the printer's IP address from a boot server.	yes	False	True

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
IP Address	The Internet Protocol address. If null, the address will be set at run time via RARP or BOOTP.	yes	Not Set	String of 15 or fewer characters of the format N.N.N.N followed by the word "Dynamic" if IP Address Dynamic parameter is set to True.
Network Mask	Indicates which fields of the IP Address designates the network portion and which designates the node portion. If null, the mask will be determined from the printer's IP address or the BOOTP or ICMP (Internet Control Message Protocol) Netmask Reply.	yes	Default	String of 15 or fewer characters of the format N.N.N.N
Broadcast Address	The IP Address used to broadcast messages on the local network. If null, the value will be determined from the IP Address and Network Mask at run time.	yes	Default	String of 15 or fewer characters of the format N.N.N.N
Gateway Address(es)	A list of addresses of the gateways to other networks.	yes	None	String of 15 or fewer characters of the format N.N.N.N
Ethernet Frame Type	Data packet encapsulation type for ARP (Address Resolution Display and Control/RARP requests and IP datagrams.	yes	DIX	Adaptive, 802.2-SNAP, may be followed by the word "Dynamic."
LPR port interpreter	Indicates the type of interpreter in use at the BSD system configured port.	yes		Not Authorized, Disabled, <null string>
LPR Host access list	List of TCP/IP network addresses for host access to printer.	yes		Unrestricted, only first 16 network addresses on list print on the configuration page.
LPR Receive Window Size	Buffer size used by the printer.	yes	0	0 to 512. 0 means the buffer size will be based on the total memory in the printer.
AppSocket port interpreter	Indicates the type of interpreter in use at the System V configured port.	yes	Auto Select	Not Authorized, Disabled, <interpreter>
AppSocket Data Port Number	Port number for bi-directional transmission of printer language jobs.	yes	9100	1024 through 65535
AppSocket Host access list	List of TCP/IP network addresses for host access to printer.	yes		Unrestricted, only first 16 network addresses on list print on the configuration page.
AppSocket status port number	Port number for sending status information back to the host computer.	yes	9101	1024 through 65535

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
AppSocket receive window size	The buffer size on the printer in which to receive data. The actual window size is established when the connection is made and may be smaller to accommodate the host.	yes	0	1024 through 59392
AppSocket send window size	The buffer size on the printer in which to send data. The actual window size is established when the connection is made and may be smaller to accommodate the host.	yes	0	1024 through 59392
Syslog	Protocol that acts as a remote front panel to the printer.	yes		Not Authorized, <null string>
Log Hosts	Address list of hosts that want to receive syslog messages.	yes	Send no messages	List of IP addresses in the format N.N.N.N
Log Priority	The threshold indicating the priority level of messages from the printer that will be sent to the list of log host(s).	yes	5	0 – unit is no longer usable, 1 – messages indicating action is needed on part of system admin, 2 – critical error messages, 3 – error message, 4 – warning messages, 5 – normal but significant message, 6 – informational messages, 7 – debugging messages
SNMP	Allow the printer to respond to status queries from host-resident Simple Network Management Protocol (SNMP) utilities.	yes		Not Authorized, <null string>
System name	Printer name	yes	Phaser 600	String of 0 to 255 characters
System contact	Name and phone number or address of person responsible for the printer.	yes		String of 0 to 255 characters
System location	Location of the printer.	yes		String of 0 to 255 characters
Trap Hosts	A list of hosts, one for each protocol, which are able to receive traps.	yes	None	None, N.N.N.N/Public, N.N.N.N/Proxy, N.N.N.N/Private, N.N.N.N/Regional, N.N.N.N/Core
Private Hosts	A single node address per protocol of a host which is able to set SNMP variables.	yes	None	List of IP addresses of the form N.N.N.N
Authentication Failure Traps	If enabled, the printer sends a trap for SNMP authentication failure.	yes	Enabled	Disabled
SCSI Disk	Indicates if a SCSI disk is attached to the printer. Also indicates its storage capacity and the amount of free space.	no	Internal Connected, External	On-line, <i>total space</i> , <i>free space</i> . Uninitialized.

Table 2-1 Configuration page settings (cont'd.)

Parameter	Description	Saved in NVRAM	Default	Limits or alternate choices
Execute Sys/Start Job	Determine whether or not to run the system start file during system initiation.	yes	Run	Skip
Boot Delay	Number of seconds the printer waits before booting up the attached hard drive.	yes	0	Any positive integer.
Check parity	If true, data parity should be checked.	yes	False	True
Disk Address	SCSI address of disk for the SCSI communication channel.	no	Internal disk fixed at 4	0, 1, 2, 3, 5, 6
Printer address	SCSI address of printer when it is the initiator.	no	7	
Copystation	Indicates whether a Copystation is attached to the printer.	no	Not connected	Connected
Copy control firmware	Indicates the version number of the copy control firmware.	yes	Firmware-dependent	
Copy station firmware	Indicates the version number of the Copystation firmware.	yes	Firmware-dependent	
HTTP	Indicates whether or not HTTP is enabled.	yes	Enabled	Disabled
Auto transmit	allow inquires via the WWW page.	yes	Enabled	Disabled
Local URL	The universal Resource Locator designation.	no	null string	null string

Selecting a language for the front panel

Messages that appear in the front panel window are in English. To change the language to French, German, Spanish, Italian, or Japanese, follow these steps.

1. When the printer is on and the Ready message appears, press the **Menu** button. You see this message:

```
Help Pages
<---      --->   Menu
```

Pressing the left arrow button (<---) scrolls backward through the selections; pressing the right arrow button (--->) scrolls forward through the selections; pressing **Menu** enters the currently displayed menu.

2. Using the left (<---) or right (--->) arrow buttons, scroll through the selections until you see this message:

```
Language
<---      --->   Menu
```


3. Press the **Menu** button to enter the language selection menu. You see this message:

```
Language: English*
<---      --->   Select
```

where the asterisk (*) indicates the currently selected language.

4. Press the right arrow button until the display shows the language you want from these selections:

```
Language: English
Language: Español
Language: Français
Language: Deutsch
Language: Italiano
Language: (Japanese)
```

5. Press **Select** to select the language. Press the  button until Ready is displayed.

Installing the printer's software

Packaged with your printer are the Phaser 600 compact disk (CD-ROM) for platforms with a CD-ROM drive or, if your computer does not have a CD-ROM drive, the diskettes for PC and Macintosh computers. The CD-ROM and diskettes contain software and utility files that work with a printer driver to let you select and control printer features.

PC software

Installing printer description files

PostScript printer description files (PPDs) are used by some drivers and applications for gaining information about a printer's page sizes, color corrections, and other options. To properly use the printer with one of the following applications, install the appropriate file.

QuarkXPress

The Quark XPress application uses a unique PDF file.

1. Locate the *TKPH6001.PDF*:
 - On the printer's CD-ROM in the *QUARK* directory.
 - On the Printer Software for Windows diskette in the *QUARK* directory.
2. Copy the *TKPH6001.PDF* file to the *PDF* subdirectory of the Quark application on your hard disk. For example:

```
COPY TKPH6001.PDF C:\XPRESS33\PDF
```

Aldus and Adobe applications

Aldus and Adobe applications, such as PageMaker and FreeHand, use PostScript printer description (PPD) files. Refer to your applications' documentation for details on using PPD files.

Note To add PPDs for printers other than the Phaser 600 printer, open the *WIN95_NT* directory on the printer's CD-ROM.

1. Locate the printer's PPD files:
 - On the printer's CD-ROM in the *WIN95_NT* directory.
 - On the Printer Software for Windows diskette at the top level.

2. Select a PPD file:

- Use *TKPH6001.PPD* if you have the standard version of the printer.
- Use *TKP600P1.PPD* if you have the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

3. Copy the PPD file to the directory on your hard disk where other PPD files are located. For example, the subdirectory in FreeHand's File Manager containing printer description files should be called:

ALDUS\USENGLISH\PPD4

Setting up the Microsoft PostScript driver for Windows 95

1. Use either the printer's CD-ROM or diskette:
 - **CD-ROM:** Insert the printer's CD-ROM into your CD-ROM drive.
 - **Diskette:** Insert the Printer Software for Windows diskette into your disk drive.
2. Click the **Start** icon in the taskbar on your screen. In the menu that appears, click **Settings**.
3. In the menu that appears, click **Printers**; the **Printers** window appears.
4. In the **Printers** window, double-click **Add Printer**.
5. When the **Add Printer Wizard** window appears, click **Next**.
6. Select your printer's connection:
 - Select **Local Printer** if your printer is connected directly to your computer, then click **Next**.
 - Select **Network Printer** if you are accessing your printer through a network. Click **Browse** to search the network and select a printer queue. Then click **Next**.
7. In the window listing **Manufacturers/Printers**, click the **Have Disk** button.

8. In the **Install From Disk** dialog box, do one of the following:

CD-ROM:

- a. Click **Browse**.
- b. In the **Open** dialog box select the **Drive** for the printer's CD-ROM.
- c. Select the `\WIN95_NT` directory under **Folders**.
- d. Click **OK**.

Diskette:

- a. Click **Browse**.
- b. In the **Open** dialog box select the **Drive** for the Printer Software for Windows diskette.
- c. Click **OK**.

9. A list of Tektronix printers appears. Select your printer in the list, then click **Next**.

- Select **Tektronix Phaser 600** if you have the standard version of the printer.
- Select **Tektronix Phaser 600 with Extended Features** if you have the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

10. Select the port your printer is connected to, then click **Next**.
11. It is recommended that you use the default printer name shown under **Printer name**. Click **Yes** if you want this printer to be the default printer. Then click **Next**.
12. At the prompt, *Would you like to print a test page?* click **Yes** to verify the printer's connection, or click **No**. Then click **Finish**.

A status bar appears while files are copied to your computer.

13. If prompted, select the path for the PostScript driver files; these should be in your `WINDOWS/SYSTEM` directory.

If the files aren't installed on your hard disk, do *one* of the following:

- Select the drive for the printer's CD-ROM and the `\WIN95_NT` directory, and click **OK**.
- Select the drive for the printer's diskette and click **OK**.

The software you need is installed.

14. If your printer is set up correctly, and you clicked **Yes** in Step 12, a test page prints showing the Windows 95 logo and information on your printer.

Your Phaser 600 printer is added to the **Printers** window.

Setting up the Adobe PostScript driver for Windows 95

Note *The files for this driver are available only on the printer's CD-ROM. If you already have the driver installed and you are only adding a printer, such as the Phaser 600 printer, open the Control Panel, double-click the Adobe driver icon, then continue with Step 7.*

1. Insert the printer's CD-ROM into your CD-ROM drive.
2. Click the **Start** icon in the taskbar on your screen. In the menu that appears, click **Run**.
3. In the **Run** window, type in the drive the CD-ROM is in, followed by the `\ADOBEPS4` directory and the file name `SETUP.EXE` and click **OK**. For example:

C: \ADOBEPS4 \SETUP

4. When the **AdobePS4 PostScript Printer Driver Setup** dialog box appears, click the **Read** button if you wish to see a text file with driver instructions. Click **Next** to continue, or **Exit** to quit.
5. In the **Install Setup Program** dialog box, decide if you want to copy the Adobe driver setup program to your hard disk, then click **Next**.

If you selected **Yes**, continue with the on-screen instructions.

6. In the **Printer Type** dialog box, select your printer's connection:
 - Select **Local Printer** if your printer is connected directly to your computer, then click **Next**.
 - Select **Network Printer** if you are accessing your printer through a network. Click **Browse** to search the network and select a printer queue. Then click **Next**.

7. In the **Install PostScript Printer from PPD** dialog box, select the directory and drive for the printer's CD-ROM and the *ADOBEPS4* directory. Select your printer, then click **Next**.
 - Select **Tektronix Phaser 600** if you have the standard version of the printer.
 - Select **Tektronix Phaser 600 with Extended Features** if you have the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

8. In the **Local Port Selection** dialog box, select the port you want to use, then click **Next**. (You can configure the port in this dialog box at any time.)
9. In the **Add Printer** dialog box, type in the printer's name, select the printer as default, and decide if you want to print a test page. Click **Next** to continue.
10. If you see the **Different Versions Detected** dialog box, click **Next** to update the files from the printer's CD-ROM.
11. When the installation is finished, the **Tektronix Phaser 600 Properties** dialog box appears. Make selections in the driver, referring to Chapter 3 for more information on printer options.

Note *Refer to the Adobe PostScript Printer Driver User Guide on the printer's CD-ROM (USRGUIDE.PDF) for more detailed information on the Adobe PS 4 driver.*

Setting up the Adobe PostScript driver for Windows 3.1

Note The files for this driver are available on the printer's CD-ROM and on the Adobe PS 3 Driver diskette.

If you already have the driver installed and you are only adding the Phaser 600 printer, open the Control Panel, double-click the Adobe driver icon, then continue with Step 5.

If you already have the driver installed and you want to add a printer other than the Phaser 600 printer, open the Control Panel, double-click the Adobe driver icon, then continue with Step 5. Printer PPD files are located in the \WIN95_NT directory on the printer's CD-ROM only.

1. Insert the printer's CD-ROM into your CD-ROM drive, or insert the Adobe PS 3 Driver diskette into your disk drive.
2. In the **Program Manager** in Windows 3.1, select **Run** from the **File** menu.
3. At the **Command Line**, do one of the following:
 - **CD-ROM:** Type in the drive the CD-ROM is in, followed by the \ADOBEPS3 directory and the file name *SETUP.EXE*, and click **OK**. For example:

C : \ADOBEPS3 \SETUP
 - **Diskette:** Type in the drive the diskette is in, followed by the file name *SETUP.EXE*, and click **OK**. For example:

A : SETUP
4. When the **README.WRI** dialog box appears, select one of the buttons as desired.
5. In the **PostScript Printer Driver Setup** dialog box, click **Continue** to begin the driver installation. This installer overwrites older versions of the Adobe PostScript driver.
6. A message appears as files are copied to your hard disk. Click the **Restart Windows** button when the installation is complete.

7. When the **Install PostScript Printer from PPD** dialog box appears, select your printer in the **Printer Descriptions Available** list and click **Install**:

- Select **Tektronix Phaser 600** if you have the standard version of the printer.
- Select **Tektronix Phaser 600 with Extended Features** if you have the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

8. At the installation successful message, click **OK**.
9. Click **Close** in the **Install PostScript Printer from PPD** dialog box.
10. At the message, click **OK**; the **Control Panel** opens.
11. From the **Control Panel**, double-click **Printers**.
12. In the **Printers** dialog box, select the **Tektronix Phaser 600** printer you just installed, then click **Connect**.
13. In the **Connect** dialog box, select the port the printer is connected to, then click **OK**.

Note *Refer to the **Adobe PostScript Printer Driver User Guide** on the printer's CD-ROM (USRGUIDE.PDF) for more detailed information on the Adobe PS 3 driver.*

Setting up a Windows NT PostScript driver

Note You may need your original Windows NT setup diskettes (or CD-ROM) to complete this procedure if you need to install a PostScript printer in Step 3.

1. If your computer has an Intel-compatible processor, such as the Intel I386, go on to Step 2.

If your computer is a MIPS, Alpha, or PowerPC, you need to edit the *PRINTER.INF* file on the Phaser 600 printer's CD-ROM or Printer Software for Windows diskette.

- a. The Phaser 600 printer's CD-ROM and Printer Software for Windows diskette are read-only (write-protected). To edit the *PRINTER.INF* file, copy the following files from the *WIN95_NT* directory on the printer's CD-ROM, or from the top level of the diskette, to a new, formatted floppy diskette. Place all of these files at the top (root) level of the new diskette.

TEK1

PRINTER.INF

TK600171.PPD (for the standard version of the printer)

TK600391.PPD (for the printer's Extended Features option)

Note If you are installing a Tektronix printer other than a Phaser 600 printer, copy the *PRINTER.INF* and printer PPD files from the *WIN95_NT* directory on the printer's CD-ROM.

- b. Open the copy of the *PRINTER.INF* file on the new diskette in a text editor such as **Notepad**.
- c. Locate the following section in the *PRINTER.INF* file:
[ProductType]
STF_PLATFORM = I386
- d. Replace the **I386** with one of the following depending on your computer type:
 - **MIPS** (for a MIPS platform)
 - **Alpha** (for an Alpha platform)
 - **ppc** (for a PowerPC)
- e. Save the *PRINTER.INF* file, and go on to Step 3.

2. From the **Main** window, double-click on the **Print Manager** icon.
3. If you have a PostScript printer driver installed, go on to Step 4.

Note *If you do not have a PostScript printer driver installed, install one now. You need a PostScript printer driver installed because the driver files are required to complete the Tektronix printer installation.*

- a. From the **Printer** menu, select **Create Printer**; the **Create Printer** dialog box appears.
 - b. Under **Driver**, scroll through the list and select a PostScript printer, such as the Apple LaserWriter NT, and click **OK**.
 - c. Follow the on-line instructions to install the driver files from your Windows NT CD-ROM or diskettes.
4. Install the Tektronix Phaser 600 printer. From the **Printer** menu, select **Create Printer**; the **Create Printer** dialog box appears.
 5. Under **Driver**, scroll to the end of the list and select **Other**; the **Install Driver** dialog box appears.
 6. When prompted, do one of the following.
 - **If you are using the Phaser 600 CD-ROM:** Type in the CD-ROM drive location, and the \WIN95_NT directory. Click **OK**; the **Select Driver** dialog box appears.
 - **If you are using the Tektronix Printer Software for Windows diskette:** Type in the disk drive location of the diskette, and the \WIN95_NT directory. Click **OK**; the **Select Driver** dialog box appears.
 - **If you are using an edited copy of the PRINTER.INF file from Step 2:** Type in the disk drive location of the diskette. Click **OK**; the **Select Driver** dialog box appears.
 7. Under **Printer Driver**, choose your Phaser 600 printer from the list, then click **OK**.
 - Select **Tektronix Phaser 600** if you have the standard version of the printer.
 - Select **Tektronix Phaser 600 with Extended Features** if you have the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

8. In the **Windows NT Setup** dialog box, type in the same path you used in Step 7 (for example, B:). Click **Continue**; the **Noncritical Error** dialog box appears.
9. When you are prompted for the location of the *PSCRIPTUI.DLL* file and the *PSCRIPT.DLL* file, click **Ignore**. (These files were installed in the procedure in Step 4 or were already installed.)

10. When the **Create Printer** dialog box appears, fill in the other fields as desired, then click **OK**; the **PostScript Printer Setup** dialog box appears.
11. Select options in the **PostScript Printer Setup** dialog box. Enabling the **Use Printer Halftoning** option is recommended. Then click **OK**; the **Windows NT Setup** dialog box appears.
12. If you installed a PostScript printer in Step 4, follow this procedure to delete it. (Now that the Tektronix printer is installed, this printer is no longer needed.)
 - a. Select the printer you want to remove.
 - b. From the **Printer** menu, select **Remove Printer**.
 - c. At the prompt, click **OK** to remove the selected printer.

Installing Adobe Acrobat Reader

1. Insert the printer's CD-ROM into your CD-ROM drive.
2. Do one of the following depending on your system:

Windows 95:

- a. Click the **Start** icon in the taskbar on your screen. In the menu that appears, click **Run**.
- b. In the **Run** window, type in the drive the CD-ROM is in, followed by the `\TOOLS` directory and the file name `ACROREAD.EXE` and click **OK**. For example:

`C:\TOOLS\ACROREAD`

Windows 3.1:

- a. In the **Program Manager** in Windows 3.1, select **Run** from the **File** menu.
- b. At the **Command Line**, type in the drive the CD-ROM is in, followed by the `\TOOLS` directory and the file name `ACROREAD.EXE`, and click **OK**. For example:

`C:\TOOLS\ACROREAD`

3. Follow the on-screen instructions to install Acrobat Reader.

Installing ATM software

Note *ATM software is available only on the CD-ROM for the printer's Extended Features option.*

1. Insert the printer's CD-ROM into your computer's CD-ROM drive.
2. Click the **Start** icon in the taskbar on your screen. In the menu that appears, click **Run**.
3. In the **Run** window, type in the drive the CD-ROM is in, followed by the \ATM directory and the file name *INSTALL1.EXE* and click **OK**.
For example:
C:\ATM\INSTALL
4. Follow the on-screen instructions to install ATM. For more information, refer to the ATM quick reference cards that were shipped with your printer.

Macintosh software

Note *You must have an optional PhaserShare card installed in the printer before using the driver.*

A Tektronix Installer application automatically installs the printer software on your Macintosh hard disk.

Using the Macintosh Installer

Use the installer application on the printer's CD-ROM or diskettes to install the printer's standard software. Then, continue with driver setup instructions depending on the driver you are using.

1. Use either the Phaser 600 printer's diskette or CD-ROM.
 - **Floppy diskette:** Insert the Printer Software for Macintosh diskette into your computer's disk drive.
 - **CD-ROM:** Insert the Phaser 600 printer's CD-ROM into your computer's CD-ROM drive.

2. Double-click the **Phaser 600 Installer** icon. Click **Continue** until the **Easy Install** window appears.

3. To install the items listed in the **Easy Install** window, click **Install**.

For details on each item, click **Read Me**.

To see a list of individual options, select **Custom Install** from the pull-down menu (available with the installer on the CD-ROM only).

4. Select individual items to install from the **Custom Install** window. Click the **I** buttons for information on each item. Click **Install** when you are ready to install the selected items.

Setting up the Phaser 600 printer driver

The Phaser 600 driver is a Tektronix-modified version of Apple's LaserWriter 7.1.2 printer driver. Use the Phaser 600 driver if you are using System Software 6.0.7, or 7.0 and later.

1. Install the printer's software as described on "Using the Macintosh Installer" on page 2-44. Choose **Easy Install** to install all of the necessary software, or select **Phaser 600 Driver** in the **Custom Install** window.
2. Select **Chooser** from the **Apple** menu.
3. Click on the **Phaser 600** printer driver icon on the left side of the **Chooser**. A list appears with the printers you have connected to your Macintosh or printers that are available on a network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also check the cable connections on your computer and printer.)
4. Click on the **Zone** your printer is in. See your network administrator if you have questions.
5. Click on your Phaser 600 printer in the list of printers on the right side of the **Chooser**.
6. Close the **Chooser** by clicking its close box.

Setting up the Adobe PSPrinter Driver

The Adobe PSPrinter driver uses printer-specific PPDs (PostScript Printer Description files) for information on a printer's page sizes, printing options, and media type options. To use the Adobe PSPrinter driver with a Phaser 600 printer, do the following steps. If the printer is busy, it may take some time to complete this set-up procedure; you may want to do this procedure when the printer is idle. You only have to set up a printer once.

Note Refer to the *Adobe PostScript Printer Driver User Guide* on the printer's CD-ROM for more detailed information on the Adobe PSPrinter driver.

1. Install the printer's software as described on "Using the Macintosh Installer" on page 2-44. Select **Easy Install** to automatically install all of the necessary software, or select **Adobe PSPrinter Driver** and **Printer Descriptions** in the **Custom Install** window.
2. Open the **Chooser**.
3. Select the **PSPrinter** driver icon.

4. Click on the **Zone** your printer is in. See your network administrator if you have questions.
5. Select your printer from the list.
6. Still in the **Chooser**, click the **Setup** button to see a list of options.
7. The correct PPD file should be selected automatically.

If the PPD file is not automatically selected, a dialog box opens showing the location of the PPD files you have installed in the *Printer Descriptions* folder, in the *Extensions* folder, inside your *System Folder*. Click one of the following PPDs and click **Select**:

- Use *TKPH6001.PPD* with the standard version of the printer.
- Use *TKP600P1.PPD* with the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

8. In the dialog box that appears, select the appropriate items under **Installable Options** then click **OK**.
9. Click the **Chooser's** close box.

Setting up the Phaser 600 GX driver

If you are using Apple Macintosh QuickDraw GX and System Software 7.5 or later, use the Phaser 600 GX driver to print to your Phaser 600 printer.

- The Phaser 600 GX driver works with QuickDraw GX and non-QuickDraw GX applications.
- QuickDraw GX does not work with non-QuickDraw GX printer drivers. If you want to print from non-QuickDraw GX applications with a driver such as the LaserWriter 8.x, you must first disable QuickDraw GX.

Note *Refer to the on-line manual on the printer's CD-ROM for details on using the Phaser 600 GX driver.*

1. Install the printer's software as described on "Using the Macintosh Installer" on page 2-44. Select **Easy Install** to automatically install all of the necessary software, or select **Phaser 600 GX Driver** in the **Custom Install** window.
2. Select **Chooser** from the **Apple** menu.

3. Click the **Phaser 600 GX** printer driver icon on the left side of the **Chooser**. A list appears with the printers available on your network. (If the printer driver icon does not appear, **Restart** your Macintosh, and repeat the printer driver installation procedure; also, check the cable connections on your computer and printer.)
4. Click on the **Zone** your printer is in. See your network administrator if you have questions.
5. In the **Connect via** field's pop-up menu, select your printer's communication method:
 - The **AppleTalk** option is the standard network connection.
 - The **Servers** option is used to select a shared desktop printer.
6. Click on your Phaser 600 printer in the list of printers on the right side of the **Chooser**.
7. Click the **Create** button to create a desktop printer. An icon of the printer appears on the desktop with the same name as the printer selected in the **Chooser**.
8. Close the **Chooser** by clicking its close box.

Setting up the Apple LaserWriter 8.x driver

The LaserWriter 8.x driver uses printer-specific PPDs (PostScript Printer Description files) to learn a printer's page sizes, printing options, and media type options. To use the LaserWriter 8.x driver with a Phaser 600 printer, do the following steps. If the printer is busy, it may take some time to complete this configuration procedure; you may want to do this procedure when the printer is idle. You only have to configure a printer once.

This driver software is available only on the printer's CD-ROM.

Note *During installation, the LaserWriter 8.x driver leaves other versions of the LaserWriter driver (such as 7.x and 6.x) intact, but overwrites an earlier version of the LaserWriter 8.x driver, if one exists.*

1. Install the printer's software as described on "Using the Macintosh Installer" on page 2-44. Choose **Custom Install**, then select **LaserWriter 8.x Driver** and **Printer Descriptions**.

2. Install the driver:
 - a. In the *PhaserTools* folder on your hard disk, locate the alias to the *LaserWriter 8.x Installer*.
 - b. Double-click on the alias to open the installer application on the printer's CD-ROM
 - c. Follow the on-screen instructions to install the driver.
3. Open the **Chooser**.
4. Select the **LaserWriter 8** driver icon.
5. Click on the **Zone** your printer is in. See your network administrator if you have questions.
6. Select your printer from the list.
7. Still in the **Chooser**, click the **Setup** button to see a list of options.
8. The correct PPD file should be selected automatically.

If the PPD file is not automatically selected, a dialog box opens showing the location of the PPD files you have installed in the *Printer Descriptions* folder, in the *Extensions* folder, inside your *System Folder*. Click one of the following PPDs and click **Select**:

- Use *TKPH6001.PPD* with the standard version of the printer.
- Use *TKP600P1.PPD* with the printer's Extended Features option.

Note *If you are not sure which configuration of the printer you have, the printer's startup page lists this information under **Extended Features: Yes/No**.*

9. In the dialog box that appears, select the appropriate items under **Installable Options** then click **OK**.
10. Click the **Chooser's** close box.

Workstation users

The printer-control PostScript files that are on the Tektronix CD-ROM and the Printer Software for Windows diskette (PC format) can be used with UNIX and VMS workstations. These files let you set up your spooling system to select between media trays, print-quality modes, color correction modes and other features. UNIX workstation users can access utility files in the following ways:

- Install the files from the Tektronix Phaser 600 CD-ROM if your system includes a CD-ROM drive.
- Mount the PC diskette on the workstation (most workstations with 3.5-inch disk drives provide a device driver that allows you to mount a PC floppy diskette).
- Access the Tektronix anonymous ftp site on the Internet at **ftp.tek.com**.
- Download utility files from the Tektronix Bulletin Board Service (BBS).
- Access the Tektronix World Wide Web server on the Internet:
 - **http://www.tek.com/Color_Printers/** Home page
 - **ftp://ftp.tek.com/bbs/<platform>/600** Utility files

Installing the printer driver for OS/2 Version 2

Under OS/2 Version 2.0 printing is managed through printer object icons. Object icons represent a printer setup, and are associated with a port, a driver, and a queue, if appropriate. These object icons replace the earlier Print Manager functions. Normally, a printer object icon is installed during the initial OS/2 2.0 installation. A single printer object on the desktop may represent more than one printer. A printer object on the desktop is a “generic” object that can be configured to point to any printer by changing settings in the settings notebook for this object. You may *not* have more than one printer object pointing to the same I/O Port. Port designations for each printer object must be unique. Before new printers are installed, existing printer object assignments must be changed.

Note *IBM suggests that printer objects be named to represent available printer ports rather than printer names or printer drivers. This avoids the confusion of a specific printer name being associated with an object that is using a driver for a different printer.*

Check existing printer object port assignments before installing a new printer to be sure there is no conflict. Once you are familiar with existing printer objects (drivers and ports associated with these objects), you can install a new printer.

In the procedure below the printer remains associated with LPT1, and you will set up a new printer object for LPT2. Following are the steps to create the LPT2 PRINTER object:

1. Check all existing printer objects to be sure that they do not point to LPT2. Make any necessary changes to the settings for these printer objects.
2. Locate the original OS/2 Print Driver Diskettes (1-5).
3. Find and open the **TEMPLATES** folder and locate the **Printer Template**.
4. Using the mouse, point to the **Printer Template**, hold down the right mouse button, and drag the object onto the desktop and release the mouse button.
5. The **Create a Printer** dialog box will be displayed. In the name field, type: **LPT2 PRINTER**. *This is the only opportunity to assign this name and it cannot be changed.* The first 8 characters (except spaces) will display in all printer selection menus, so the printer will be listed as **LPT2PRIN**.
6. Scroll through the printer drivers listed to locate the proper Tektronix printer driver name. If it is listed, select it, otherwise, point the cursor to any other driver listed and click the right mouse button. Click **Install** from the menu options.

7. In the **Install New Printer Driver** dialog box, type **B:** and insert the Printer Diskette #1 in drive **B**. Click on **Refresh**. The system searches the diskette for driver groups and prompts you to stop the search or continue. When the PostScript driver (*PSCRPT.DRV*) appears, stop the search.
8. At this point, a list of possible PostScript printers are displayed for your selection. Using the scroll bars, move down through the alphabetical listing until you find the selection **PSCRIPT.Tektronix Phaser 340**. Click on the correct printer name and then click on **Install**. The system will install your printer driver. Click **OK**.
9. Close the **Install New Printer Driver** dialog box. Before leaving the **Create a Printer** dialog box, adjust the printer port time-out setting. Double-click on the port you have selected, in this example, **LPT2**. Change the time-out to **180** seconds. Then click **OK**.
10. To create the new printer object on the desktop, click on **Create**. A new printer driver object is placed on your desktop. Confirm and adjust the settings for this printer driver by launching an application program and performing the following steps.
 - a. Bring up the **Settings Notebook** by clicking the right mouse button on **LPT2 PRINTER**. Click on the arrow to the right of **OPEN**; click on **SETTINGS**.
 - b. Select the **Printer Driver Tab**. Confirm that the Tektronix Phaser 340 is selected (highlighted). Double-click on the Phaser 340 driver to configure the **Printer Properties**; this is where you can define printer paper sizes and orientation. These settings can be adjusted from within software applications as well. To get started, set **Forms** to **Legal-size** paper; this is the recommended setting. Next, select **Device Defaults**, set **Form** to **Legal** and set **Orientation** to **Landscape**. One of the most likely causes of printer errors is that the document and device defaults do not match.
 - c. Select **Options** and make sure that it is set to **Phaser 600**; if not, repeat the previous steps. While in this screen, set **Job and Wait** to **0**, if they aren't already. Select the **Output Tab**; ensure that the proper port is selected.
 - d. Select the **Queue Options Tab**. Activate a check for both **Printer Specific Format** and **Job Dialog Before Print**. Return to the **Settings Notebook** dialog box and close it.
 - e. If **LPT2 PRINTER** is not the only printer object on the desktop, then you may want to make it the default printer before opening a software application. To make a default printer, point the cursor to the **LPT2 PRINTER** object, click the right mouse button, click on **Set Default**, and select **LPT2 PRINTER**.

Configuring the printer's serial port for a PC

Use the front panel menu to modify the printer's serial port settings. By scrolling to the Serial Settings menu item, you configure the printer's serial port. You may set these parameters:

- Data rate
- Data bits
- Stop bits, parity
- Flow control
- LocalTalk enabled

Refer to the Chapter 9 topic, "Front panel menu" on page 9-2 for a diagram that shows how to navigate to the Serial Settings menu item.

Using *printcap* to configure a Unix workstation for the printer's serial port

The *printcap* file configures the workstation's **lpr** queues. The file is usually found in the workstation's */etc* directory. Use a null modem cable, since the printer is set up as a DTE device. For this example, the printer's serial port settings are as follows:

```
Speed:      9600
Flagging:   Software (XON/XOFF)
Data Bits:  8
Parity:     Ignore
```

To set up a *printcap* entry, perform the following steps:

1. Make a backup copy of the */etc/printcap* file.
2. Add to the *printcap* file a new print queue name and set the port parameters as needed. Add the following to the *printcap* file:

```
px:\
:br#9600:rw:\
:fc#00000374:fs#00000003:\
:xc#0:xs#0040060:\
:mx#0:sf:sh:\
:sd=/var/spool/px:\
:if=/var/spool/px/if:\
:lp=/dev/ttya:
```

px may be changed to whatever unique printer name you choose. The device driver name in **lp** may be different depending upon which serial port the printer is connected to and the device driver naming scheme for the workstation.

3. Create a directory called `/var/spool/px` and create a file in the directory called `if`. The content of the file should look like this:

```
#!/bin/sh
/bin/cat
```

4. Give the `if` file executable permission, type:

```
chmod +x if
```

If communication to the serial port uses 7 data bits, the value for `xs` changes as follows. All other setup parameters remain the same.

```
px:\
:br#9600:rw:\
:fc#00000374:fs#00000003:\
:xc#0:xs#0040040:\
:mx#0:sf:sh:\
:sd=/var/spool/px:\
:if=/var/spool/px/if:\
:lp=/dev/ttya:
```

5. To print a PostScript file, type:

```
lpr -Ppx filename
```

Configuring a Novell NetWare server for the printer

This is a brief overview of the steps you follow to configure a Novell NetWare file server and to set up a print queue to support the printer on a Novell network. The *PhaserShare User Manual* gives the step-by-step procedure you follow to perform this configuration. There are two methods, each using a different utility program, that you can use to configure the file server and set up print queues. In brief, this is what you will do:

1. Load the utility Advanced Configuration Tool (ACT) onto the file server through a workstation.
2. Log on to a file server as supervisor with supervisor privileges.
3. Run ACT and select **Quick Configuration**.
4. At this point, you will be able to see a list of available printers. The printer's print server name is displayed. The default name is TEKxxxxxx where xxxxxx is the last six hex digits of the printer's Ethernet address. If the printer is not displayed, refer to the Novell NetWare configuration topic in the *PhaserShare User Manual*.
5. Select a file server to be configured.
6. Select a queue to service the printer or create a new queue.

7. Save the configuration file.
8. Following this, you can select another file server and create more queues for the printer to service. You can have a total of 32 queues.
9. After all file servers have been configured, save the configuration file and restart the print server and the printer.

Alternatively, you can use a Novell 4.x Network Administrator utility called *PCONSOLE* to perform the same configuration. However, using *PCONSOLE*, you will not see and select the printer on the network as you did in Step 4. Instead, you must enter the print server printer name (TEKxxxxxx) as it is shown on the printer's configuration page. (Refer to the topic "Printing the configuration page" on page 9-4 for details on printing the configuration page.)

Configuring TCP/IP

This is a brief overview of the steps you follow to configure the host and the printer for a TCP/IP network. The *Phaser Share User Manual* gives the step-by-step procedure you follow to perform this configuration. You will first configure the host and then the printer.

Configuring the host

1. Add the printer name to the host table (*/etc/host*) and assign an Internet Protocol (IP) address to the printer's name.
2. Assign a print queue to the printer by editing the */etc/printcap* file.

Configuring the printer

1. Set the printer's IP address. This can be done through the printer's front panel. Alternately, you can create a RARP or BOOTP configuration file to automatically configure the printer's IP address (although it will not be stored in the printer's NVRAM).
2. Optionally, configure the printer's TCP/IP parameters:
 - **lpr**, the host access table (if the customer site uses **lpr**).
 - AppSocket, the printer language(s) supported by the printer (if the customer site uses AppSocket).
 - *syslog*, a system's log collect printer information for the network administrator.
 - *SNMP* (Simple Network Management Protocol), allows the system administrator to query and control the printer's status remotely.

Verifying the Printer and Host Connections

In this chapter, you verify that the host computer can send files to the printer. This chapter assumes that the printer and the printer drivers have been properly installed as explained in the previous chapter, “Installing the Printer and Drivers.”

Verifying printing from a PC

Direct DOS connection verification

Verify that the PC can communicate with the printer.

1. Power up the printer and the PC. If the PC is running under Windows, exit Windows so that the PC is operating under DOS alone.
2. At the DOS prompt, type (in lowercase) the following:

echo showpage > port:

Substitute *port:* with **LPT1:**, **LPT2:**, or **COM1:** etc. or whichever corresponds to the port the printer is attached to.

The printer should respond by picking, processing, and ejecting a blank sheet of paper; if this does not happen, check your cabling. Ensure that you have the port properly configured as explained in the Chapter 2 topic, “Connecting the printer” on page 2-19.

Windows 95 driver verification

Using the Windows Write application, verify that the PC, running under Windows 95, can print to the printer.

1. If it is not already running, start Windows 95
2. Launch a simple text program such as one of the Windows 95 programs Notepad or WordPad. (If Notepad or WordPad is not available, you can use any other text editor-type program.)
3. Type in a line of text such as **THIS IS A TEST.**

4. Click the **File** menu item and select **Printer Setup...** from the menu list. Select **Phaser 600** from the displayed list of available printer drivers. Click **OK**.
5. Click **File** and select **Print**. A print file will be transmitted to the printer.

Windows 3.1 driver verification

Using the Windows Write application, verify that the PC, running under Windows 3.1, can print to the printer.

1. If it is not already running, launch Windows by typing this command:

WIN

2. Launch the program manager by double-clicking the **Program Manager** icon.
3. Open the Accessories window by double-clicking the **Accessories** icon.
4. Double-click on the **Write** icon. (If Write is not available, you can use any other text editor-type program.)
5. Type in a line of text such as **THIS IS A TEST**.
6. Click the **File** menu item and select **Printer Setup...** from the menu list. Select **Phaser 600**, (whichever applies) from the displayed list of available printer drivers. Click **OK**.
7. Click **File** and select **Print**. A print file will be transmitted to the printer.

OS/2 connection verification

Note *The Print Screen function is controlled from within the OS/2 System folder.*

1. Open the **System** folder, then open the **System** object.
2. Click on the **Print Screen Tab** to view the Print Screen settings. Be sure that **Enable** has been selected. With Enable Print Screen selected, the following options are available:
 - a. You may print the contents of a window by pointing to that window and pressing **Print Screen**.

- b. You may print the full screen by first opening any window, placing the cursor on the desktop away from any open windows, and then pressing **Print Screen**. *Be sure that at least one window is open.*
- c. You may use Print Screen on any port (any available printer) by changing the default printer selection. (Point to any printer object, click the right mouse button, click on **Select Default**, and click on Phaser 600.) This is a simple way to be sure that all printers are set up correctly.

Novell NetWare verification

NetWare is a shell program running above DOS. Generally, in a Novell network, a file server, which looks and acts much like a PC computer, maintains queues for the print files created and sent for printing from other workstations on the network. The printer, in turn, finds all file servers with Phaser 600 queues and extracts its print files from them. You must determine if a computer can communicate a print file to the file server.

Generally, as outlined in the Chapter 2 topic, “Configuring a Novell NetWare server for the printer” on page 2-53, the file server and printer are configured during the printer installation using software such as Advanced Configuration Tool (ACT) or **pconsole**. The file server is given a name and configured with queues for the printer.

Send a print file to the printer

1. Log into a file server from a NetWare workstation.
2. Type:

CAPTURE NB NT Q=<queue name> L=1

where <queue name> is the name established by the network administrator of a queue the printer is to service, such as **TEK600**. **L=1** specifies port LPT1

3. Use any text editor to create the following two-line, text-only print file.

%!
showpage

4. Copy the print file to LPT1 using this syntax:

copy <file.nam> LPT1:

where <file.nam> is the name of the print file.

The printer should load and then eject a blank sheet of paper.

If the print file does not print, verify that:

- The printer has been set up to service the queue.
 - The password set for the printer (if one was set by the administrator), is the same as that used for the print server.
 - The Ethernet frame type that the printer is using is supported by the file server.
 - The correct printer language is being used by the printer to interpret the incoming print file; this is indicated on the printer's configuration page.
5. When you are able to send a print file to the printer, launch an application on one of the Novell-networked workstations and print to the printer's queue.

Using the Error Handler utility

If the PC does not print to the printer, reset the printer and then load the error handling utility into the printer's memory using the menu item **Printer Defaults — PS Error Handler**.

Alternatively, reset the printer and then download one of the Tek Error Handler utility files to the printer or enable the error handler from the front panel.

1. Locate the *TEKEHAND.PS* file in the *PHSR600* directory on the Printer Utility diskette.
2. Copy the file *TEKEHAND.PS* to the PC's hard disk or use the file from the diskette.
3. Use the DOS **COPY** command to send the file to the printer. For example:

COPY tekehand.ps LPT1:

If necessary, substitute the appropriate port for LPT1:

This loads the error handling utility into the printer's memory where it remains until the printer is turned off. Send a file to the printer as explained in the previous procedure. If an error occurs, the printer will print a page listing the error.

Front panel

These front panel features are found on the printer:

- A two-line, 24-character LCD
- Four push buttons
- Two LEDs

LCD. The LCD serves two purposes: displaying current image processor and print engine status information and displaying an interactive menu. Status information includes image processor status such as Ready, Receiving Data and Printing. Print engine status includes messages such as Load Media, Clear Internal Jam, and Ink Loader Low.

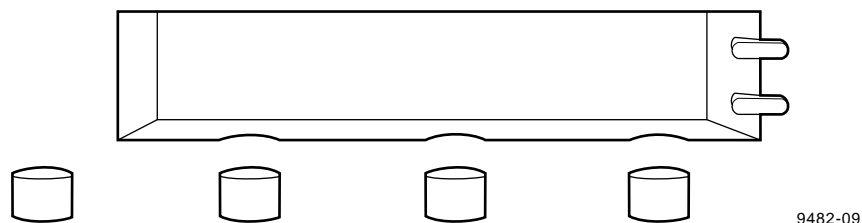
The interactive menu can only be entered while the printer is idle and ready. The interactive menu has two modes, review and modify. Customers can review and modify certain NVRAM, I/O ports and peripheral parameters. Using the front panel to review and change parameters is discussed in Chapter 9, “Checks and Adjustments.”

Buttons. Button 1, the left-most button, is an **Exit** key used to cancel or escape from an operation while in the interactive menu. The functions of buttons 2, 3 and 4 are defined by the particular menu or function being displayed on the LCD. The bottom row of the LCD labels the current function of each button.

In addition, pressing the buttons as you turn on the printer enables certain diagnostic modes.

- Pressing and holding Button 1, as you turn on the printer, skips power-up diagnostics.
- Pressing and holding Button 2, as you turn on the printer, executes extended diagnostics.

The Chapter 9 topic, “Resetting NVRAM” on page 9-34 explains how to use the front panel buttons to reset the NVRAM to its factory default values.



9482-09

Figure 3-1 Printer front panel

Verifying printing from a Macintosh

Selecting the printer via the Chooser

This procedure applies to both operating system version 6.0.7 (and higher) and system 7.0 (and higher).

Note *If the Mac is served by an Ethernet network or by both a LocalTalk and Ethernet network, ensure that the Mac's proper network port is enabled. Click and pull down on the **Apple** menu (in the upper-left corner of the screen) and select the item **Control Panels**. Click on the control panel item **Network**. From its dialog box, select the appropriate network port.*

1. Turn on the printer and the Macintosh, if they are turned off.
2. With the mouse, click and hold on the Macintosh's **Apple** menu (in the upper-left corner of the screen). Select the **Chooser** from the Apple's pull-down menu.
3. The Chooser dialog box is now displayed on the screen. On the left side of the dialog box are icons representing the printer drivers installed on the Macintosh. Select the driver icon **Phaser 600**, by clicking on it once. If the host and the printer are a part of a zone, you should first select the printer driver and then pick the zone that the printer resides in. The configuration page lists the zone the printer is currently installed in.
4. Displayed on the right side of the dialog box are a list of printers that the selected driver will print to. Select the newly installed printer **Phaser 600**. (If, for example, a Phaser 600 printer is already on the network with the name `Phaser 600`, then the newly installed printer will be named `Phaser 600-1`.)
5. Displayed on the bottom of the dialog box is the background printing option. Click the **OFF** button to turn it off. (If desired, this can be turned back on after the printer verification.)
6. Close the **Chooser** by clicking on the small box in the upper-left corner of the dialog box; the Phaser 600 is now your chosen printer.

You have now verified that the printer is on the network and is communicating with the Macintosh.

If you do not see the printer listed in the dialog box, then the printer is not communicating with the Macintosh. Check the printer's cable connection to the network. Also check the printer to see if its rear panel health LEDs are blinking. Ensure that the correct network is selected, in the event that the Macintosh is connected to more than one network (such as both LocalTalk and Ethernet). Refer to Chapter 6, "Troubleshooting" for more information about networks. More troubleshooting tips are included in the reference manual *Phaser 600 Drivers and Utilities Printing Reference*.

Printing the directory from a Macintosh

1. Make sure that you have an open window displayed on the screen (such as the hard disk drive's window).
2. At the Macintosh desktop, click and hold on the **File** menu bar item.
3. **For System 7 or higher:** Scroll down the **File** pull-down menu and select the item **Print Window...**

For System 6.0.7 to 6.0.8: Scroll down the **File** pull-down menu and select the item **Print Directory...**

4. A print dialog box appears on the screen. Click on the **Print** button in the upper right corner of the dialog box to send a file to the printer.

This verifies that the Macintosh and the printer driver can send a file to the printer. If the printer does not make a print, then there may be a problem with the printer driver. In this case, if possible, you should verify that the Macintosh can print to a different printer on the same network. Choose a different PostScript printer driver such as an Apple LaserWriter in the Chooser and then repeat Steps 2 and 3. If the file doesn't print, then the customer must diagnose and fix the problem on the Macintosh.

Verifying that an application communicates to the printer

This procedure verifies that an application installed on the Macintosh can print to the printer. Note that many applications require a special printer page description file (*APD*, *PDF*, *PDX* or *PPD* files) to print to a printer. These files contain information specific to a particular printer, such as page sizes, margins, and printing options. Refer to the Driver's and Utility diskette's *README* file for the latest information on which applications require which printer page description file. The printer page description files are provided on the Drivers and Utilities diskette.

1. Ensure that the correct driver is selected in the Chooser.
2. Start an application and select a file that contains text.
3. With an illustration or a page of text displayed, click and scroll down the **File** pull-down menu and select **Print...**

4. A print dialog box appears on the screen. Click on the **Print** button in the upper right corner of the dialog box to send a file to the printer.

If problems occur at this point, download the error handling utility to the printer as explained in the next procedure. Contact the Customer Support Hotline at 1-800-835-6100. Refer to the *Phaser 600 User Manual*. Each provides information on using the printer with specific applications.

Using the Error Handler utility

If the Macintosh does not print to the printer, reset the printer and then load the error handling utility into the printer's memory using the menu item **Printer Defaults — PS Error Handler**

Alternatively, reset the printer and then download one of the Tek Error Handler utility files to the printer or enable the error handler from the front panel.

1. Place the printer's Macintosh Printer Utilities diskette in the disk drive.
2. Select the **Phaser 600** printer in the **Chooser**.
3. Locate the Tek Error Handler file in the folder of utilities files.
4. Double-click the LaserWriter utility.
5. From the Utilities menu, select **Download PostScript file**. Select the file *Tek Error Handler* and download it to the printer.

This loads the error handling utility into the printer's memory where it remains until the printer is turned off. Send a file to the printer as explained in the previous procedure. If an error occurs, the printer will print a page listing the error.

Verifying printing from a workstation

Verifying and printing using the TCP/IP protocols

The Phaser 600 accepts files from networked UNIX and VMS workstations using TCP/IP communications. The printer supports BSD UNIX 4.3, AT&T's UNIX System V with BSD 4.3 **lpr** extensions, and DEC VMS with Tektronix PhaserSym software. The Phaser 600 conforms to Ethernet IEEE 802.3 network specifications. TCP/IP must be properly configured to use Phaser Link to control the printer from a web browser.

UNIX

1. To verify the host-to-Phaser 600printer (UNIX host) connection, execute the **ping** command from the host.
2. To print to the printer from the host, you must first have the printer's queue established. This is site-dependent and requires the aid of the site's network administrator. After the queue is in place you can proceed to the next step.
3. Send a print file to the printer using the following syntax:

lpr -P*<queue name> <file.nam>*

The queue name was established earlier in Step 3. The print file *<file.nam>* can be any PostScript print file. To keep things simple, send a simple file such as the one of the snippets included in the software diskettes: *config.ps* causes the printer to print out its configuration page.

If the page prints, then both the printer and the network connection are working correctly. If the print file cannot be sent, then a problem probably exists in the network set-ups for the printer. You and the network administrator should repeat the TCP/IP installation as outlined in the printer's Phaser Share user manual.

VMS

To print to the Phaser 600 printer in the VMS environment, you must have the symbiont PhaserSym running on the host. To print to the printer from the host, you must first have the printer's queue established. This is site-dependent and requires the aid of the site's network administrator. When the queue is in place, you can proceed to the next step.

1. To verify the VMS host-to-Phaser 600 connection, use the **NCP LOOP CIRCUIT** command from the host.
2. From the host, issue the **SHOW QUEUE /full** command to list all the available printer queues. Ensure that the Phaser 600's queue is listed.
3. Print to the printer by sending the command:

print/queue=<queue name> <file.nam>

where <queue name> is the printer's queue and <file.nam> is any PostScript file.

Using the Error Handler utility

If the workstation host does not print to the printer, reset the printer and then load the error handling utility into the printer's memory using the menu item **Printer Defaults — PS Error Handler**.

Alternatively, reset the printer and then download the Tek Error Handler utility to the printer.

1. Locate the *TEKEHAND.PS* file in the *PHSR600* directory on the Printer Utility diskette.
2. Copy the *TEKEHAND.PS* file to the workstation's hard disk or use the file from the diskette.
3. Make sure that the printer port is configured to receive PostScript, then send the file to the printer.

This loads the error handling utility into the printer's memory where it remains until the printer is turned off. Send a print file to the printer as explained in the previous procedure. If an error occurs, it will print a page listing the error.

Key Operator Training

This chapter covers the last portion of the Tektronix Service Option S0 installation: Training the printer's key operator. The steps you follow here place an emphasis on encouraging the key operator to read and use the printer's user manual to operate, clean, and care for the printer.

Printer controls and indicators

Front panel LEDs: Explain the meanings of the front panel LEDs.

- Show where these indicators are explained in the user manual.

Front panel LCD: Explain the layout and use of the front panel LCD. Explain how to use the front panel buttons and how they correspond to the display.

Error reporting: Explain how error conditions are displayed on the front panel.

- Show where error conditions are explained in the user manual.

Printer rear panel connections

Network connections: Explain the different types of PhaserShare cards that provide printer connectivity.

- Show where these connections are explained in the user manual and where to find more information about expanding their printing system with other network options, cables, and accessories.

Loading consumables

Paper/transparencies: Demonstrate how to load a roll of paper. Also demonstrate how to load a sheet of manually fed media.

- Emphasize to the customers not to touch the printing surface of the transparency media; handle it by the edges only. Fingerprints affect print quality.
- Explain to customers that they should not bend the media (especially transparency film) too sharply. Otherwise, print quality may be affected and jams may occur inside the printer.
- Demonstrate trimming the media using a razor knife and the cutting guide.
- Show where media loading information is explained in the user manual.

Ink sticks: Demonstrate how to load an ink stick.

- Emphasize to customers to use *only* Phaser 600 printer ink sticks. The printer's warranty will be voided if non-Tektronix ink sticks are used. Also emphasize that they should not use ink sticks that have large pieces missing and not to load any small broken pieces.
- Show where ink stick handling and loading instructions are explained in the user manual and on the ink stick card shipped with each ink stick box. Emphasize that ink sticks must be kept clean; contaminated ink sticks will eventually clog filters inside the printhead, requiring it to be replaced. Ink sticks should remain in their closed packaging until loaded in the printer's ink loader.

Cleaning

Explain how keeping the printer clean can ensure the highest-quality prints. Emphasize how dirt and dust can affect print quality and paper-pick reliability.

- Stress the importance of using 90% or higher isopropyl alcohol, not rubbing alcohol.
- Explain the contents and use of the cleaning kit.
- Show how to use the user manual to locate proper cleaning procedures. Demonstrate the use of the front panel menu to initiate cleaning routines.
- Warn the use of sharp edges inside the printer; particularly the x-axis belt and the timing fence.
- Show the location of the paper feed rollers inside the printer.

- Show the location of the paper exit release lever and the surfaces that will require cleaning inside the exit cover.

Clearing paper jams

Media jam locations: Show the possible locations for media jams: inside the top cover, under the back-tension blade, at the stripper fingers, at the fuser/exit.

- Show the location of the jam-clearing information in the user manual.
- Demonstrate how to move the printhead back to its home position, if it should be located behind the drum when a jam occurs. Stress that a jammed media should not be removed until the printhead is safely in its home position.

Affecting print quality

Increasing RAM memory: Explain the advantages of using more RAM in the printer to improving print times.

Using TekColor color corrections: Explain that different color correction modes are available and where to find more information in the user manual.

Explain how fusing (hot, cold or none) affects print quality and durability on different media.

Moving the printer

Printhead restraint: Explain the importance of powering down the printer using the power switch and installing the printhead restraint (shipping block) before moving or shipping the printer. Failure to properly lock the printhead can result in serious damage to the printer.

- Show where this is explained in the user manual.
- Allow the inks in the printhead to solidify (about 15 minutes) before moving or tilting the printer.
- Demonstrate how to empty the waste bin.

Warranty information

Review the warranty information with customers to ensure that they are aware of the printer's warranty and the duration of its coverage.

Supplies ordering

The printer is shipped with the latest version of the supplies information sheet; it lists all the available supplies for the printer, as well as printer accessories, such as software and printer stands, that customers may be interested in. Additionally, some supplies are listed in the user manual.

United States: Customers can call toll-free at 1-800-835-6100 (ask for the Color Printing Supplies Order Desk) to place a supplies order. Open Monday through Friday, 6:00 am to 5:00 pm (PST). Shipments are made within 24 hours.

Outside the United States: Contact your nearest Tektronix dealer.

If you need help

Customer Support Hotline

If customers encounter problems while using their printer that cannot be resolved using the user manual, they can call Tektronix' Customer Support Hotline for help. The Hotline can answer technical question regarding using the printer, ranging from printing from application software to technical specifications.

United States and Canada: Customers can call **1-800-835-6100** toll-free (ask for the Customer Support Hotline). Open Monday through Friday 6:00 am to 5:00 pm (PST).

Service support

If the printer needs service, customers should contact their Tektronix service representative at **1-800-835-6100** in the United States. Customers should be prepared with the printer type, serial number and, if applicable, print samples revealing the problem.

Accessing the printer's web page

PhaserLink, the Tektronix implementation of a World Wide Web server inside the printer, allows a customer to communicate to the printer using a web browser. With PhaserLink, a customer can view and set printer and networking parameters. A homepage built into the printer links the printer to other homepages such as the Tektronix World Wide Web home page.

To view the printer's homepage, the printer must be connected to a network supporting TCP/IP protocols. Refer to the *PhaserShare Network Cards and Software User Manual*.

Electronic Bulletin Board Service

Tektronix supports an electronic bulletin board service (BBS) for customers with a modem; they can connect to the bulletin board to download the latest versions of Tektronix drivers and software. To access the BBS 24 hours a day, 7 days a week, call **(503) 685-4504**. Use 9600 baud, 8 bits, 1 stop bit, and no parity.

Tektronix color printer support is also available through on-line services

- World Wide Web: http://www.tek.com/Color_Printers/
- Tektronix anonymous ftp server: ftp.tek.com/Color_Printers
- Automatic File Server: color_printer_info@tek.com
- Technical support: support@ColorPrinters.tek.com
- America Online: Keyword: Tektronix
- Compuserve Go Tektronix

Using the automated fax systems

As an alternative to the Customer Support Hotline, and to provide up-to-date information quickly, Tektronix has set up HAL (Highly Automated Library) and EuroHAL, two interactive, automated fax systems. These automated fax systems provide Macintosh, PC, and workstation users with the latest technical hints and tips (like color adjustments), solutions to common technical problems, and application notes for software problems (such as CorelDRAW! and QuarkXpress).

Customers may call HAL or EuroHAL from anywhere in the world. The fax systems are available 24 hours a day, seven days a week.

Use HAL to order a catalog or individual documents in the U.S.A. and Canada

If customers have a fax machine and a touch-tone voice telephone, they can order a HAL catalog, listing all of the information offered by HAL, by calling **(503) 682-7450** (direct) or, in the U.S. and Canada, call **1-800-835-6100**.

1. Before calling, instruct customers to write down the area code and telephone number for customers fax machine. HAL will ask customers to key this number through the keypad on their voice telephone. If they are calling from outside the United States or Canada, they'll need to know the international access code to reach their country from the United States. Without a complete fax number, HAL cannot call their fax machine.
2. Call only from a touch-tone voice telephone.
3. Follow through the voice-prompted menu.
4. Order individual documents by entering the desired document's number as listed in the HAL catalog. Enter the number by using the telephone's keypad.
5. Customers can order up to three documents per call.
6. The HAL catalog or documents that customers request are faxed to them in a matter of minutes.

Use EuroHAL to order a catalog or individual documents in Europe

EuroHAL includes many documents, some in English and some in other European languages. If a localized version of the document is available, EuroHAL will send it in that specific language. Otherwise, it will send English documents.

If customers have a tone-dial telephone and a fax machine, they can use EuroHAL. If customers' telephones have star (*) and hash mark (#) keys, then they can probably use tones; ask your local telephone supplier if unsure.

If customers' telephones do not have these keys or have a dial, they will need to buy a *tone dialer* from their local telephone or electronics shop. This small box is held to the phone and will send the standard tones that are needed to talk to EuroHAL.

To use EuroHAL, dial one of the numbers listed in the following table.

Austria	00 44 1908 681 839	Italy	09 44 1908 681 839
Belgium	00 44 1908 681 839	Norway	0 95 44 1908 681 839
Denmark	00 44 1908 681 839	Spain	07 44 1908 681 839
Finland	00 44 1908 681 839	Sweden	0 09 44 1908 681 839
France	05 90 81 86	Switzerland	00 44 1908 681 839
Germany	0120 819 220	United Kingdom	01908 681 839
Holland	09 44 1908 681 839	other countries	+44 1908 681 839 (where + is your country's International Access Code)

7. EuroHAL answers and asks which language customers want to use.

For English	Press 1
For French	Press 2
For German	Press 3
8. The first time customers use EuroHAL, they should order a catalog; this lists all the documents that are available and is continually updated.
9. EuroHAL asks customers for their fax machine number. If calling from outside the UK, customers must add their country code first, as shown in the following table.

Country	Country code	Customers area code and fax number	Press # when finished
Austria	00 43	area code fax number	#
Belgium	00 32	area code fax number	#
Denmark	00 45	area code fax number	#
Finland	00 358	area code fax number	#
France	00 33	area code fax number	#
Germany	00 49	area code fax number	#
Holland	00 31	area code fax number	#
Italy	00 39	area code fax number	#
Norway	00 47	area code fax number	#
Spain	00 34	area code fax number	#
Sweden	00 46	area code fax number	#
Switzerland	00 41	area code fax number	#
UK		just enter customer fax number	#
Other countries	00 xx	area code number	#

Tektronix Color Printer Information Server

Unix and VMS workstation utility files included with the printer on a PC diskette let customers set up the printer to select between media trays, print quality modes, color correction modes and other features. If customers don't have the means of transferring these files from the PC diskette, they can request files from the Tektronix Color Printer Information Server, an automatic file serving program on the Internet that responds to requests for files.

Send electronic mail requests for files to the following address:

color_printer_info@tek.com

To receive the list of information available on the server, type the following at the **Subject** prompt:

send index

To examine the full index for any library, type:

send index from *library-name*

To request a single file from a directory, type:

send *filename* from *library-name*

To determine file size, type:

send list of *filename* from *library-name*

Theory of Operation

Overview

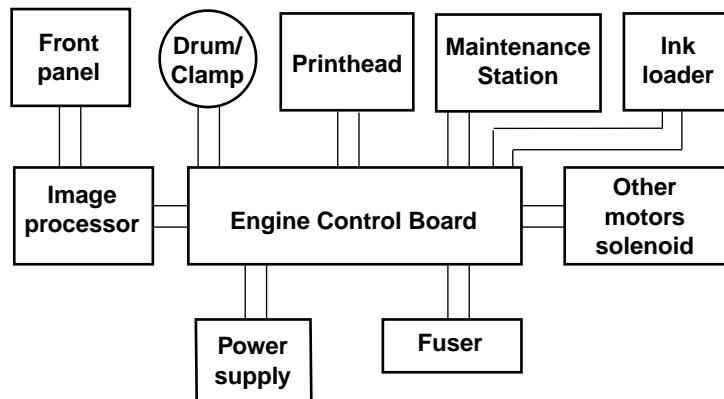
This chapter covers the theory of operation of each subsystem within the printer:

- Functional block diagram
- Printhead maintenance cycle
- Print process in operation

Functional block diagram

The printer is made of eight major blocks:

- Printhead
- Drum/clamp
- Ink loader
- Maintenance station
- Fuser
- Power supply
- Engine control board
- Image processor board



9482-10

Figure 5-1 Overview of the printer

All printer functions are centered around the engine control board. All DC voltages are routed through the engine control board to all other devices.

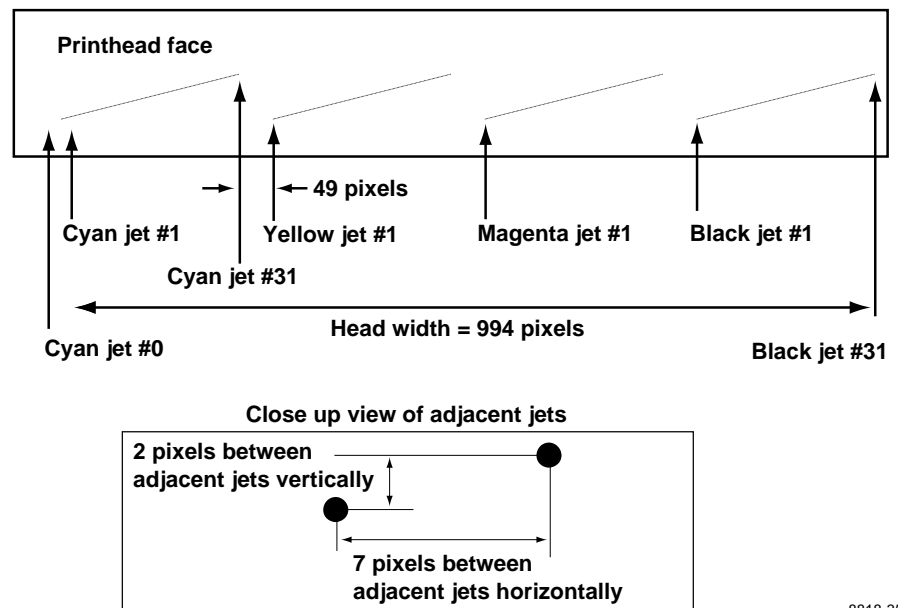
Printhead

The printhead is the heart of the printer. It is the device that actually places ink onto paper. The printhead contains the reservoirs for the ink it uses as well as a series of piezo-electric devices that squirt ink onto the paper.

The printhead features 124 jet nozzles to force ink out of the printhead onto paper. The printhead has four banks of nozzles:

- 31 cyan
- 31 yellow
- 31 magenta
- 31 black


Each bank of nozzles are arranged in diagonal rows. A vertical distance between any two adjacent jets is two pixels. Given that a row of jets is 31 jets in height, the printhead can print a swath 62 pixels in height by printing 31 pixel lines on a forward pass and then printing the interleaving 31 lines on the return pass of the printhead. Variations on this interleaved printing scheme are used to actually print in the printer's two print modes: Standard and Enhanced. Cyan jet #0, shown in the illustration, is a nonfunctional jet that is only used as a reference point for hardware and software development.



8818-35

Figure 5-2 The printhead and its jet nozzles

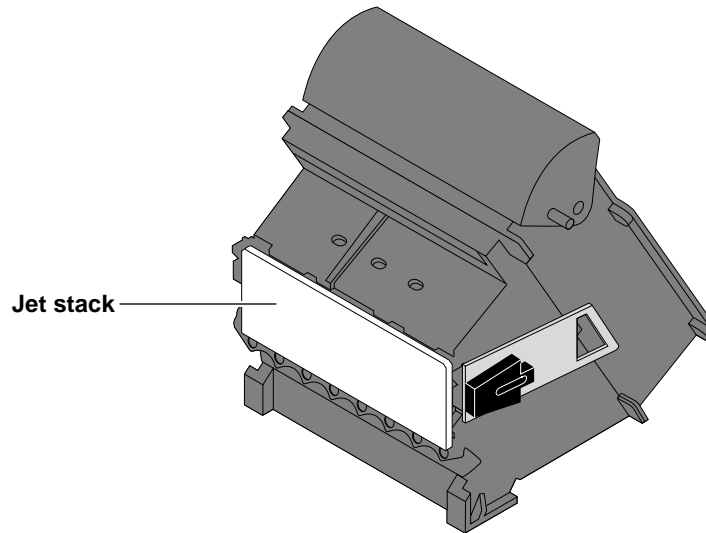The core of the Phaser 600 printhead is the “jet stack” — a bonded pack of 14 etched stainless steel plates. The active element in the jet stack is the piezo-electric crystal array that, when energized, flexes to force a drop of ink out of a jet.



8818-36

Figure 5-3 The printhead's jet stack

To drive the piezo crystals on the back of the jet pack, two drive voltages are used: positive refill cycle voltage (ranging from + 68 to + 102 volts), and a negative eject cycle voltage (ranging from -68 to -102 volts). Each printhead will have its own specific \pm high voltage settings marked on the back of it. A voltage waveform of particular amplitude and duration is used to drive the piezo crystals to eject each drop of ink. Two waveforms are available: the standard waveform and the alternate, high-altitude waveform. The high-altitude waveform is optimized for the atmospheric conditions placed upon the printhead during printing.

The printhead also features four ink melting chambers, one for each color. In each chamber the ink is heated into liquid form to 115° C (268° F) and channeled to the jet stack where it can be printed onto paper. A temperature of 135° F (300° F) is maintained at the jet stack.

Phaser 600 ink

A soluble dye is used with a paraffin-like wax base (amide) to create the inks. The ink is non-toxic and does not require any special environmental considerations.

Heat of 115° C (268° F) is used to liquefy the solid ink aqueous water-based ink systems must be protected from heat). The ink's vaporization rate is very low, and, if a change did occur due to prolonged periods of no printing, no crystals are formed that could clog the printhead; only a slight discoloration may be noticed.

The printhead's ink flow from the supply chamber to the nozzle is significantly different than aqueous printers. The ink in the Phaser 600's printhead flows past the piezo crystal and then to the ink jet orifice (nozzle).

Regarding air bubbles, the Phaser 600, by design, draws air into the system every time you turn it off: as the liquid wax cools, it shrinks, leaving pockets of air in the printhead.

The surface tension of solid ink (in its liquid state) is considerably lower than the aqueous systems. Because of this fact, air bubbles pass through the printhead using a simple vacuum purge cycle. Aqueous systems, on the other hand, use complex purge cycles (driving the piezos at different frequencies) to move air bubbles out of the printhead.

Print modes

There are two print modes: Standard and Enhanced.

Standard mode

Standard mode is the fastest of the color modes and is the default printing mode. It should be used for images with light colors, text and lines, and small areas of fully saturated colors: saturated colors will exhibit a banding effect. When printing solid fills, the printhead ejects ink at a 8.5 kHz rate. Standard mode can print an image on B-size (A3) media in about 2:15 minutes.

During Standard mode printing, the paper is advanced vertically the equivalent of 31 pixels between each horizontal pass of the printhead across the paper.

Enhanced mode

Enhanced mode provides less banding on fully saturated or non-dithered colors. It provides a high quality image for most applications. When printing solid fills, the printhead ejects ink at a 4.25 kHz rate. The printer steps the paper through at half the rate of Standard mode. An image on B-size (A3) media takes about 4:30 minutes to print.

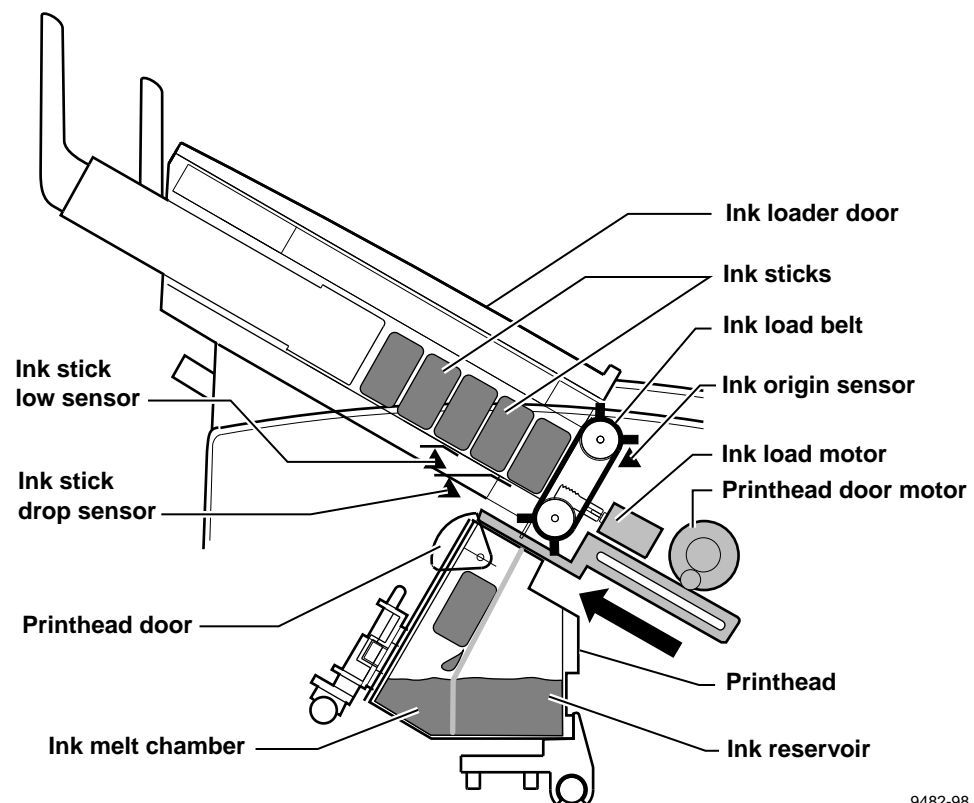
During Enhanced mode printing, the paper is advanced vertically the equivalent of 15 pixels between horizontal passes of the printhead across the paper (every fourth pass is advanced 17 pixels). This minimizes the "banding" that may otherwise appear during Standard mode printing.

Ink loader

The ink loader allows the printer to automatically load ink sticks into the printhead as they are required to correct an ink low condition.

When an ink-low condition is noted, the following sequence takes place:

- The printhead shuttles left to the ink load position.
- The printhead door motor energizes to open the printhead door.
- The ink feed motor for the appropriate ink stick energizes to drive a belt featuring paddles that push one ink stick down into the printhead.
- The ink drop sensor detects when an ink stick is pushed into the waiting printhead.
- The four origin sensors detect the position of each of the ink load belts so the paddles of each belt will be in the proper position to push the next ink stick into the printhead.



9482-98

Figure 5-4 The ink loader

Maintenance station

Like ink-jet printers, the printer requires a maintenance station to keep the printhead jets working. The printer's maintenance station performs four basic functions:

- Removes air bubbles from within the printhead after power up
- Removes ink and dust particles from the printhead's faceplate
- Maintains meniscus control by preserving the anti-wetting properties of the printhead's faceplate; it keeps ink droplets from forming around the nozzles which causes dot placement errors.
- Collects waste ink from maintenance cycles: purge and jetting.

To accomplish these tasks, the maintenance station uses the following components to carry out its tasks:

- Air pump: vacuum on inlet side, and air knife (pressure) on the output side.
- Purge chamber: When pressed against the printhead's faceplate and a vacuum is applied, it causes ink to be drawn through the printhead to clear air-bubbles or remove clogged jets.
- Cam pin: It controls the air-valve (open or closed) and movement of the maintenance station (against or away from the printhead).
- Air-valve: It allows or removes vacuum from the purge chamber.
- Air knife: Using a stream of air, the bulk of the ink on the faceplate is moved to the drip plate.
- Drip plate: It directs hot liquid ink from the maintenance station or printhead to the waste drawer.
- Waste bin: It collects waste ink for the user to dispose.
- Wiper (not shown): The wiper removes the remaining ink or debris (dirt or dust) from the faceplate.

The wiper is used to remove remaining ink or debris left on the faceplate from an air knife operation. More importantly, it preserves the anti-wetting properties of the printhead's faceplate by keeping ink droplets from forming around the nozzles which will cause dot placement errors.

The wiper works much like a windshield wiper on a car. Since paper dust or other debris can build up on the wiper element, it requires cleaning periodically.

Note When servicing a printer, it's recommended that you replace and clean the wiper. Be careful not to scratch it when you install it.

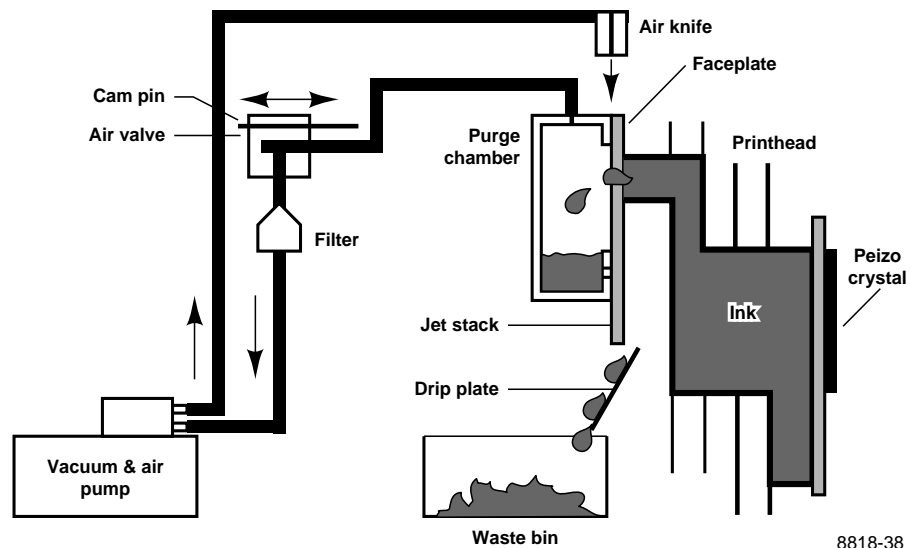


Figure 5-5 The maintenance station

Maintenance station cam

A special cam on the end of the drum has two tracks used to control the locking of the waste bin and positioning of the maintenance station. The left-side raised track is used to control the waste bin lock. When the drum is rotated counterclockwise more than one revolution, the waste bin lever is forced out of the center of the track which lifts the lever and unlocks the waste bin. Rotating the drum clockwise locks the waste bin drawer. The right-side track is used by the maintenance station's cam pin to position the maintenance station against or away from the printhead, as well as operate the air valve.

To perform the maintenance cycles, the drum will rotate counterclockwise to three different positions: Air knife, wipe, and purge.

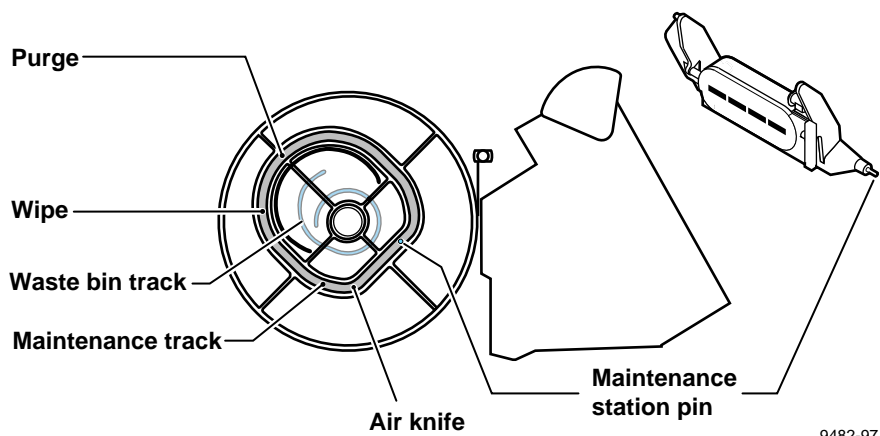


Figure 5-6 The maintenance station cam

For example, to perform a purge cycle:

- The drum is rotated counterclockwise to move the cam to the purge position which forces the maintenance station against the faceplate and allows the cam pin to move towards the drum following a deeper channel in the maintenance track which closes the air valve.
- The vacuum pump is started and performs a 4- or 5-second purge.
- The drum is then rotated clockwise to move the cam pin up a ramp in the track to open the air valve and remove the vacuum.
- The drum continues to rotate clockwise to move the purge chamber away from the faceplate.
- Ink from the purge chamber runs out of the cutouts in the gasket onto the drip plate and into the waste bin.

Maintenance cycles

The printer performs a cleaning cycle when the customer selects the **Clean Head** menu item. The cleaning consists of these processes:

- Vacuum purge: 4 seconds or 5 seconds, depending on how many prints were made after the last purge. If it is less than three prints, then a 4-second purge is performed.
- Air knife while the printhead moves away from the maintenance station.
- Air knife while the printhead moves toward the maintenance station.
- Wipe while the printhead moves away from the maintenance station.
- Air knife while the printhead moves toward the maintenance station.
- 7-second jetting to clear the nozzles of contaminated ink.

Fuser

After ink is deposited on the media it must be fused. Fusing increases the diffusion of ink droplets into the media and improves appearance and durability of the image. Using the printer driver, users have the option of hot fusing, via a built-in heater element, cold fusing and no fusing at all, depending on the media being printed on and user preferences.

The fuser consists of a flat steel plate, with two heater elements located on top, and a fuser wheel attached to a belt-driven shuttle. The fuser wheel travels the length of the steel plate. During fusing the fuser wheel travels laterally across the printed surface of the print, flattening the ink droplets into the media as it does. A pass of the fuser is performed at the same time that the printhead is performing a print pass. The fuser is positioned in a left-side or a right-side standby position, off the print, while the print is advanced for the next pass. The fuser wheel is about 8 mm (0.33 ins.) wide. Given that a pass of the printhead is not more than 2.5 (0.1 in.) mm wide, the fuser travels over each swath or band of printing at least twice, once left to right and once right to left.

An exit sensor detects that the print properly exited the fuser. If not, a fuser jam is reported.

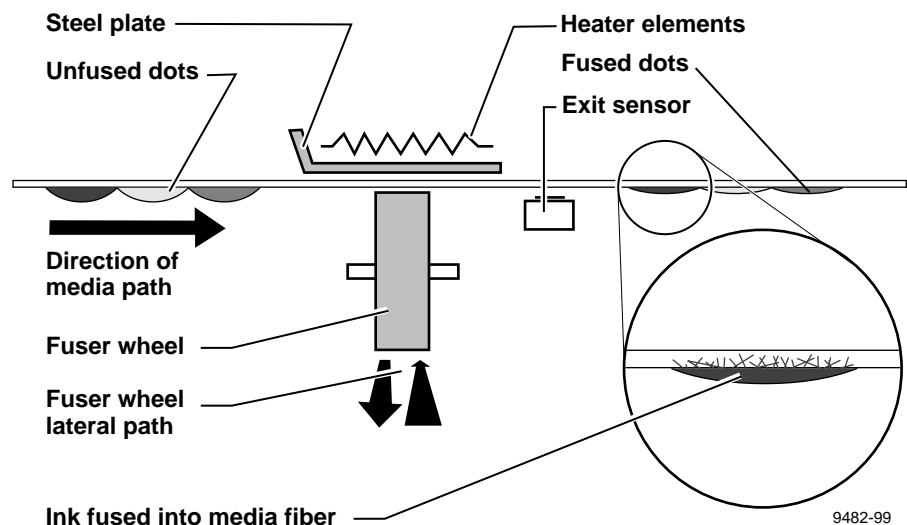


Figure 5-7 The fuser

An oiler wheel, impregnated with a lubricant, is in constant contact with the fuser wheel. The oiler wheel provides an oil film on the fuser wheel to keep to the ink on the print from adhering to the wheel.

The fuser shuttle also contains the cutting blade used to cut a finished print from the roll of media. The cutter blade is raised into its cutting position by forcing the fuser shuttle to the far-right extreme of its travel. The blade is lowered when the shuttle reaches the far-left extreme.

Power supply

The power supply provides the DC power source for the printer's electronics and motors. It also provides the power for the printhead's heaters and piezo-electric crystals.

- **+5 volts.** +5 volts powers the printer's digital logic circuits.
- **+12 volts.** +12 volts runs the printer's fan, stepping motors, ink loader motors and solenoids.
- **-12 volts.** -12 volts is used for the print's comparator circuits.
- **+40 volts.** +40 volts drives the X-axis, Y-axis, and fuser motors, heaters and air pump.
- **+HV and - HV.** These adjustable voltages drive the printhead's piezo-crystals elements.

There are no field adjustments necessary on the power supply except for printhead drive voltages.

Engine control board

The engine control board is responsible for data processing of information provided by the image processor board and of the inputs from the printer's sensors.

The engine control board features comparators to check for over-temperature conditions and for sensing the input from the printhead's left and right paper edge sensors.

The engine control board contains the drivers for the X-axis, Y-axis and fuser motors, the printhead heaters, and the fans.

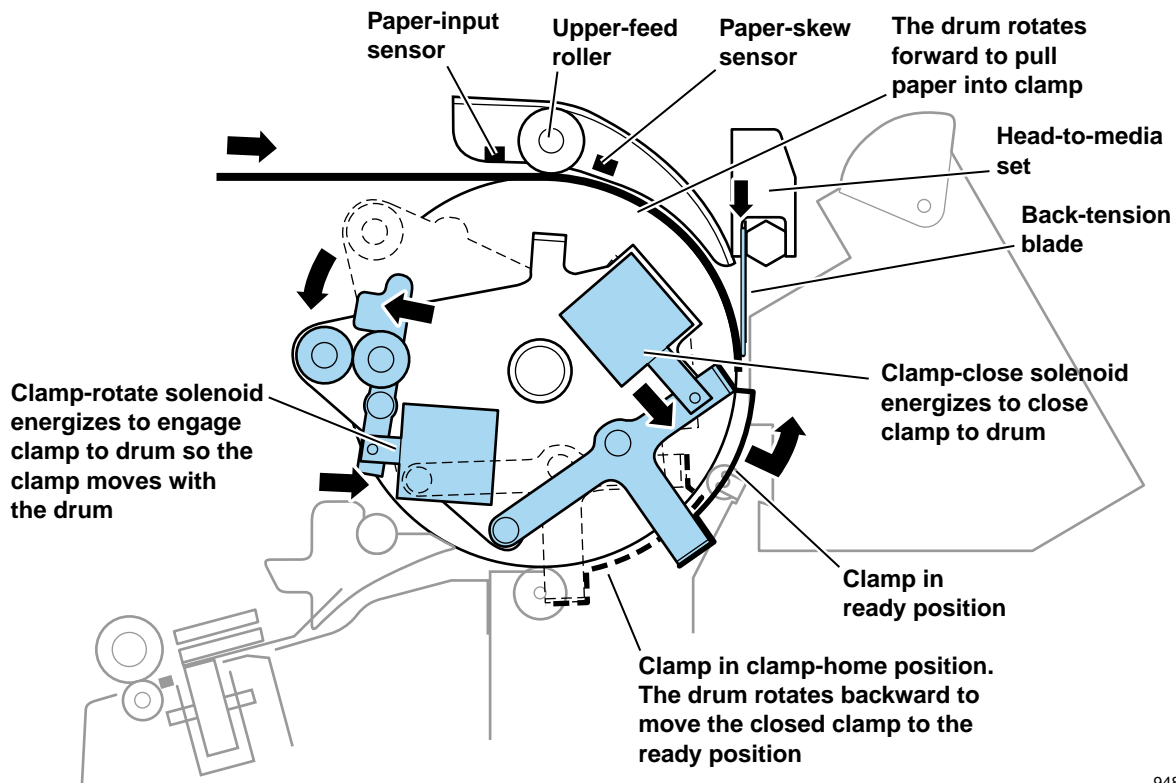
Lastly, the engine control board contains the A/D converters for controlling the printhead temperatures, monitoring power supply output, ink levels in the printhead and the fuser's temperature.

Print process in operation

Media positioning

The print process is preceded by the printer positioning and measuring the roll or sheet of media currently installed. When the paper input sensor detects a sheet of media inserted up to the upper feed rollers, the clamp-close solenoid are energized to close the spring-loaded clamp against the drum. The clamp-rotate solenoids then energized to engage the clamp to the drum. Next, the Y-axis motor drives the drum in the reverse direction to position the clamp (engaged to the drum) in the ready-to-clamp position. The clamp-ready sensor detects when the clamp is in this position. Then the clamp-close solenoids are de-energized to open the clamp and the clamp-rotate solenoid are de-energized to release the clamp from the drum.

With the clamp in the ready position, the drum rotates forward to pull the media through the upper-feed rollers and paper guides to insert the leading edge of the paper in the open clamp. The three paper skew sensors, mounted on the paper guides, determine if the paper feeds into the paper path squarely. After waiting long enough for this to occur, the clamp-close solenoid are energized to close the clamp against the drum, clamping the leading edge of the paper. Again, the clamp-rotate solenoids energized to engage the clamp to the drum and the Y-motor rotates the drum to position the paper in the print position.



9482-104


Figure 5-8 Loading and positioning media to be printed

At this point, the X-axis motor energized to position the printhead in front of the head-to-media set portion of the back-tension blade. The head-to-media motor energizes to drive a shim between the media and the printhead pushing the printhead slightly away from the drum. The tailpiece on the printhead “locks-in” and hold the printhead in this position. This sets the printhead at the optimum head-to-media distance (about 32 mils) for printing. This action assures the printhead will always be the same distance from the media surface regardless of the thickness of the media.

Next the X-axis motor drives the printhead across the width of the drum. Paper-edge sensors on the printhead, detect the left and right edge of the media informing the image processor of the width of media currently installed in the printer. Following this, the Y-axis motor reverse to “unload” the media by driving the media backward until the leading edge of the media is again at the point where it was first inserted at the upper feed rollers. This way, new media can easily be exchanged for the currently installed media

Printing

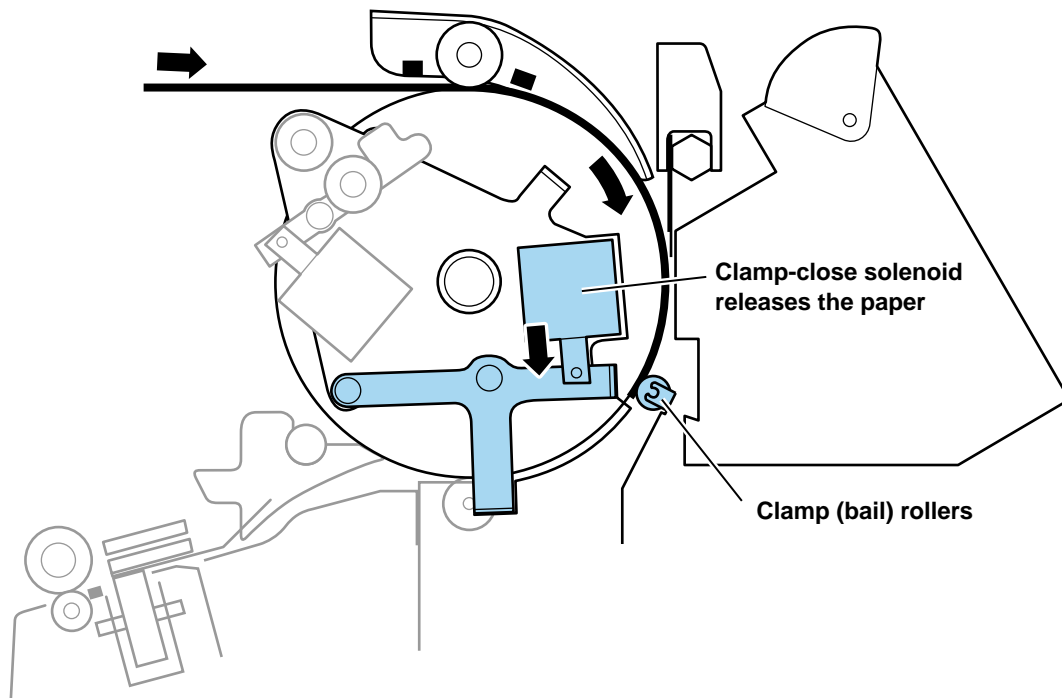Printing begins with the same process described in the media positioning except the media is not unloaded. Also the clamp-close solenoids remain energized to hold the leading edge of media to the drum. The drum incrementally steps forward to allow the shutting printhead to print the image in swaths upon the paper. As the drum rotates far enough that the paper clamp reaches it home position, and the leading edge of the paper is now under the clamp rollers, the clamp-close solenoids de-energize to release the leading edge of the paper. The Y-axis motor continues to rotate the drum, moving the friction-fed media, as the printhead prints.




9482-105

Figure 5-9 Printing the paper

Fusing and cutting

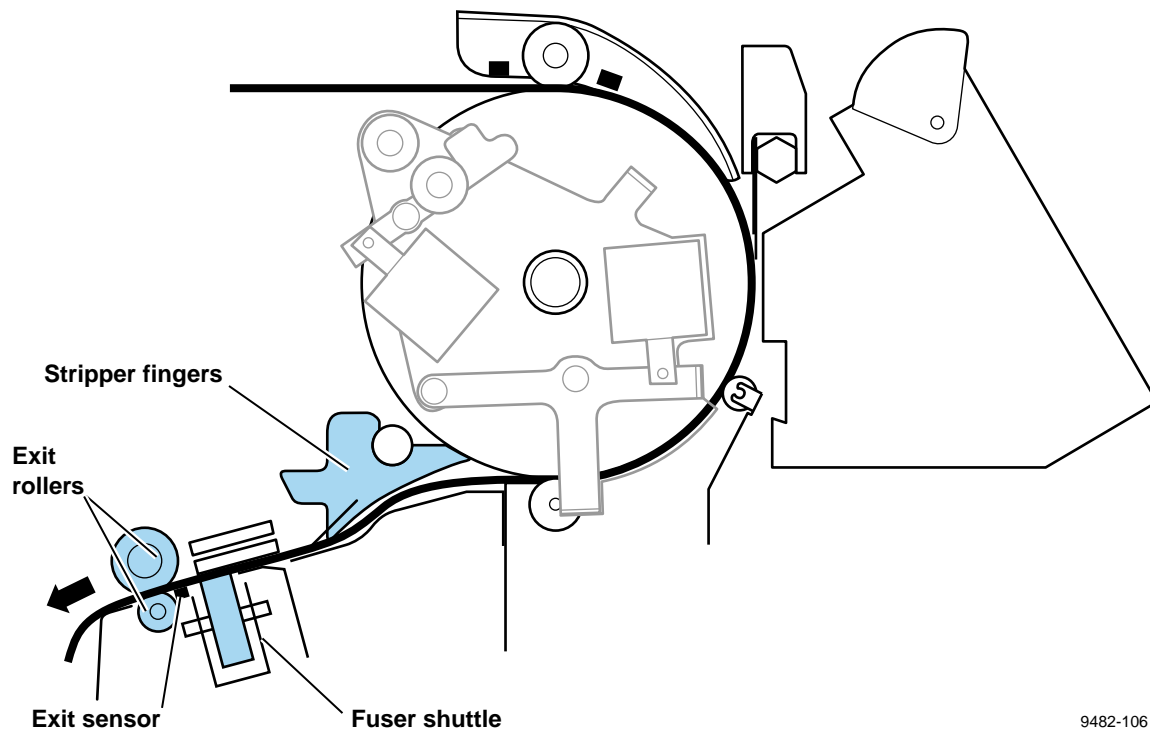As the print advances far enough, the stripper fingers force the leading edge of the paper off the drum and into the fuser. As the media passes through the fuser, the fuser shuttle is driven back-and-forth across the print. With roll-red media, as the fusing completes, the fuser shuttle is driven to the extreme right of its travel, this raises the fuser shuttle's cutting blade. Then the fuser shuttle is driven to the left, cutting the print from the roll. As the fuser shuttle reaches the left end of its travel the cutting blade is lowered. The exit motor energizes to pull the print out of the printer. The Y-motor reverse to draw the paper remaining in the paper path back to the start position at the upper feed rollers.



9482-106

Figure 5-10 Fusing the print

Troubleshooting

This chapter discusses troubleshooting the printer. Troubleshooting is discussed with two approaches:

- A step-by-step verification procedure that systematically confirms that particular components of a printer are properly functioning until a problem is found.
- A symptom/cause scheme that lists particular printer failures and error codes and their possible causes.

System power-up sequence

The following lists the chain of events that occur when you turn on a printer. You can follow this list as one means of determining if the printer is operating correctly.

Power switch turned on:

- Front panel LCD and LEDs turned on then off.
- Power-on self-tests (POSTS) performed on electronic systems and the results displayed on the front panel.
- Both front panel LEDs blink twice and the LCD blanks out.
- The Error LED turns off and the front panel indicates "Initializing...".
- Head maintenance motor runs until the stop is found in the head maintenance cam gear.
- Ink loader's printhead cover motor energizes.
- Fuser motor drives the fuser shuttle right and left along the fuser track.
- Head-to-media motor ran to ensure it is in its home (raised) position.
- The drum is check to ensure it is in its home position.
- The print engine board SRAM I/O is checked

- The print engine board flash memory is checked
- The printhead NVRAM checksum is checked.
- The printer continues initializing by energizing its heaters.
- The air pump is turned on and an air knife cycle performed on the printhead.
- The X-axis motor is ran to shuttle the printhead along the X-axis rails.
- The drum motor is energized to move the paper clamp to its raised position.
- The paper clamp solenoids energized to close the paper clamp.
- The drum rotates to lower the closed paper clamp.
- The paper clamp solenoids de-energized to open the paper clamp.
- The Error LED turns off and the display indicates the printer is warming up and cleaning the printhead.
- The printer continues to heat the printhead to its normal operating temperature.
- A printhead cleaning cycle is performed once the printhead reaches its normal operating temperature.

Once the cleaning cycle completes, the print engine is initialized.

Print engine troubleshooting

This topic is a step-by-step procedure for systematically verifying particular aspects of a printer's operation. Following this procedure should lead to the cause of a printer's failure.

Verifying image processor operation

1. If the printer does not power up, or does not initialize, or the printer initializes but the motors do not run properly, go to the later topic, "Verifying power supply operation" on page 6-4.
2. Observe that the Ready message is displayed on the front panel. If it does not, go to the later topic, "Verifying power supply operation" on page 6-4.
3. Verify that the image processor's health LED is flashing. If it is not, replace the image processor board.
4. Turn off the printer. Attach a PC running PC-based diagnostics to the printer's serial port; refer to the later topic "PC-based diagnostics" on page 6-26. Turn on the printer.
5. Select the menu test **System Verify — Test Print**.
6. After the print is made, remove the PC.

If the printer prints a test pattern, then the printer's image processor board and print engine are working correctly. The printer's problem resides with the host computer-to-printer connection, or the host computer. Refer to the appropriate topics in Chapter 3, "Verifying the Printer and Host Connections." (Note that since the PC diagnostics operates only through the service serial port, the possibility also exists that the hardware of any of the other hosts interface ports could be non-functioning, and could be the source of the print failure. In this case, the printer should be able to print from another port, except the non-functioning port.)

If the printer does not print a test pattern, then a problem exists with the printer's image processor board or the print engine. Proceed with the next topic, "Verifying print engine operation by using its test print" on page 6-4.

Verifying print engine operation by using its test print

1. If not already on, turn on the printer. If the printer does not begin initializing, go to the topic, “Verifying power supply operation” below.
2. Once the **Power** light is on (not blinking) and the front panel displays **Ready**, press the **Menu** button and scroll to the **Startup page**. menu item and then press **Print**. The printer should print out a test print.

If the printer prints a test page, then the print engine is working correctly. If the printer does not print a test print, then a problem exists with the print engine. Proceed with the topic, “PC-based diagnostics” on page 6-26.

Verifying power supply operation

Required tools

- Phillips #1 screwdriver
- Volt-ohm-meter (VOM)

The power supply is divided into two sections: the AC section used for heaters and the DC section for control logic, printhead drivers and motors. Verifying the power supply involves five steps:

- Checking for proper AC voltage.
- Testing DC output voltages.
- Inspecting the power supply fuses.
- Testing for a shorted DC output supply which shut down the power supply.
- Testing for a shorted motor which shuts down the power supply.

Inspecting the power supply fuses

The power supply features one 10 A, 250 VAC rated fuse.

1. Turn off the printer and unplug the power cord from the printer.
2. Measure the fuse with an ohmmeter to verify it is functioning.

Measuring power supply voltages

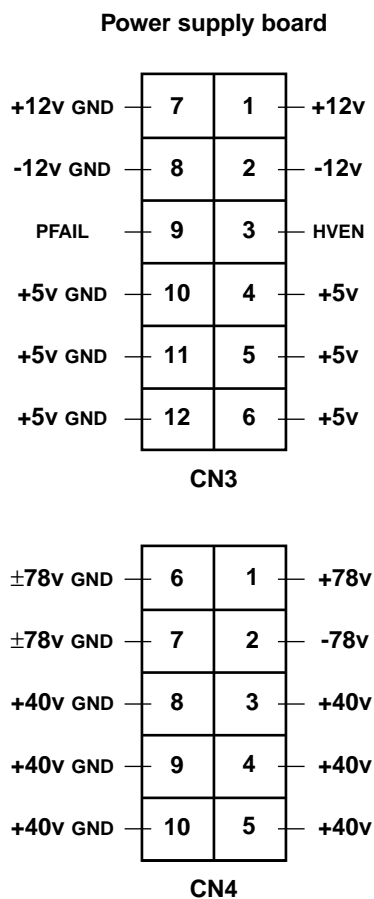
1. Turn off the printer and unplug it from its power outlet.
2. **AC Input:** With the VOM set to measure AC voltages, measure the power being supplied to the printer. It should measure between 85 to 132 VAC (110 VAC nominal) or 180 to 264 VAC (220 VAC nominal).

3. DC Output: Refer to Appendix C, “Wiring Diagrams” for more details on other voltage test points.

- +5 VDC \pm 0.25
- +12 VDC \pm 0.6
- -12 VDC \pm 0.6
- +40 VDC \pm 0.4
- +78 VDC \pm 2% (adjustable from 68 to 102 VDC)
- -78 VDC \pm 2% (adjustable from -68 to -102 VDC)

If you do not measure the expected DC voltages, proceed to the next step, “Inspecting the power supply fuses.”

If the +5 VDC, \pm 12 VDC, \pm 78 VDC voltages measure correctly proceed to the topic “Testing for a shorted DC supply” on page 6-6.



9482-12

Figure 6-1 Measuring the DC voltages (test points)

Testing for a shorted DC supply

1. Turn the printer off.
2. Disconnect the two wiring harness, CN3 and CN4, connecting the power supply to the engine control board.
3. Turn the power supply back on.
4. Measure the DC output test points. If the DC voltages measure OK, the power supply is being shorted out, proceed to the next procedure, "Testing for a shorted motor". If the DC voltages are incorrect, then the power supply has failed; replace the power supply.

Testing for a shorted motor

An over-current condition in the +12 volt or +5 volt supplies will shut all DC outputs. An over-current in the HV+, HV-, -12 volt or +40 volt supplies only shuts down the affected supply.

Note *A short-circuited DC output will shut down the power supply for 5 minutes. It will not start until 5 minutes have elapsed.*

1. Turn the printer off.
2. Reconnect the wiring harnesses removed in the previous procedure.
3. Disconnect the AC motors: Y-axis motor, X-axis motor, and fuser motor by disconnecting J112 from the engine control board.
4. Disconnect the stepper motors: exit motor, head maintenance cam gear motor, head to media motor and the ink loader motor by disconnecting their individual wiring harnesses from the junction boards. The wiring diagrams in Appendix C show this connections.
5. Turn on the printer again to see if it does not overload now that the motors are disconnected from the power supply. The cooling fans will rotate if the +5 and +12 volt supplies are operating correctly.

If the power supply is functional, move to the procedure, "Testing motor and solenoid resistances" on page 6-7.

If the motors, fans and solenoids are working properly, but the power supply still does not function, replace it. Refer to the Chapter 8 topic, "Power supply" on page 8-55.

Measure for a +5 volt short at J101 pins 1 and 3. If a short is found, replace the engine control board.

Measure for a +12 volt short at J101 pins 1 and 6. If a short is found, replace the cooling fan.

Testing motor and solenoid resistances

1. Turn off the printer and disconnect the power cord.
2. With a VOM set for measuring resistance, test each motor's windings for correct resistance (disconnected from the printer). Rotate the motor's drive shaft slightly while taking the measurement. Also carefully inspect each motors wiring harness to ensure it is not damaged and shorting out to the chassis.

Table 6-1 Motor and solenoid resistances

Motor or solenoid	Resistance (approximately)
X-axis motor	Pin1 to 2 — 10 to 30 ohms
Y-axis motor	Pin1 to 2 — 3 ohms
Fuser motor	Pin1 to 2 — 5.5 ohms
Exit motor	Pin 1, 2 to 3, 4, 5 or 6 — 10 to 15 ohms
Head maintenance cam gear motor	Pin 1, 2 to 3, 4, 5 or 6 — 27 to 33 ohms
Head-to-media motor	Pin 1, 2 to 3, 4, 5 or 6 — 27 to 33 ohms
Ink stick load motor	Pin 1, 2 to 3, 4, 5 or 6 — 27 to 33 ohms
Printhead door open motor	Pin 1, 2 to 3, 4, 5 or 6 — 27 to 33 ohms
Clamp rotate solenoids	10 to 15 ohms
Clamp close solenoids	10 to 15 ohms

In general, if you measure any abnormally low resistance from a motor winding to ground while the motor is installed (and its wiring is not damaged), replace that motor.

Media jams and the paper path

Required tools

- Phillips #1 screwdriver
- VOM

Jams fall into the following four categories:

- Media-based problems
- Paper-loading errors
- Paper-feeding errors
- Paper-ejecting errors

Media-based problems

1. Check that the correct type of media is being used.
2. Inspect the paper for bent, torn or folded corners as well as damaged or skewed edges. Ensure the leading edge of the roll is squarely cut and is not damaged. Check the ends of the roll for dents.
3. Ensure that the correct media is correctly loaded on the supply roller.
4. Ensure the correct weight and stiffness of paper is being used.

Paper-load errors - entrance jams

Paper-load errors occur when the media is improperly clamped. An entrance jam is declared if the media input sensor cannot detect the leading edge of the media. A load error is also declared if the skew sensors detect the leading edge is skewed more than 5 mm (0.2 in.) from parallel with the X-axis.

1. Ensure that the media fits properly on the supply roller. Ensure the leading edge is squarely cut and aligns with the edge guide mark on the printer.
2. Clean the upper feed rollers. Paper dust can coat the pick roller and affect its ability to grip the paper and pull it into the printer.
3. Check that the drum is being rotated. If it is not, go to the topic, "Testing for a shorted motor" on page 6-6. Otherwise, go to Step 4.
4. Refer to the later topic, "PC-based diagnostics" on page 6-26. Use the motor and solenoid test to check the operation of the paper load system.

Print feed jams -- internal jam error

Paper feed jams, noted as internal jams, occur if the left or right of the paper is less than 8 mm (1.3 in.) from the respective end of the drum, or the left or right edge of the media cannot be detected at all by the printhead's left and right paper-edge sensors. Media shorter or narrower than 17.75 cm (7 inches) causes an internal jam.

During X-axis initialization

1. Look for an obstruction on the X-axis rails. Ensure the printhead is not striking one of the ink loader flags.

During clamp initialization

1. Check the operation of the paper clamp. Ensure that it is securely clamping the paper and pulling the paper as the drum rotates.
2. Inspect the clamp stopper to ensure it has not been bent and therefore incorrectly operating the clamp.

During media loading

1. Check the paper-eject path for obstructions.
2. Ensure the leading edge of the media is straight and square. Check the roll holder for a loose endcap.
3. Ensure that roll media is correctly loaded on the roll holder with the adjustable end on the left end of the roll.
4. Using diagnostics, ensure the skew sensors operate correctly.
5. Using diagnostics, check the left and right printhead sensors are operating correctly.

During printing

1. Check that the space between the drum and the clamp is correct when the clamp is in the ready position. Refer to the Chapter 9 topic "Paper clamp alignment" on page 9-11. Also ensure that the clamp is parallel with the back tension blade.
2. Check that the Y-motor drive belts are properly tensioned. Refer to the Chapter 9 topic "Y-axis motor belt and drum belt tension" on page 9-7.
3. Inspect the drum for shiny spots near the ends that could "fool" the printhead's paper edge sensors. Clean the drum.

Media skews passing through the paper path

1. Check if the media edges are damaged.
2. Check to see if the media is excessively curled. Curled media can get mistracked in the paper path.
3. Ensure the upper rollers contact the drum. Insert a piece of paper between each upper roller and the drum. Pull on the paper to gauge the pressure of each roller against the drum.
4. Clean the paper clamp. Ensure it is properly adjusted for clearance from the drum.
5. Clean the drum.
6. Examine the paper path; ensure it is clear of obstructions.
7. Ensure that the upper feed roller is clean so that it moves a sheet of media smoothly and evenly.
8. Check the rear and lower feed rollers. Also make sure that the front door is properly closed.
9. Clean all the printer rollers.

Fuser jam

A fuser jam occurs when the printer cannot cut the media; this is indicated by the fuser motor stalling.

1. Check that the cutter blade is installed and in good working order.
2. Is the loaded media appropriate for the cutting blade. Thick, hard media and some canvases should be cut by hand. Odd types or weights of media may not be suitable for the printer and may jam the fuser. Specifically, media over 0.5 mm. (0.020 in) thick or under 0.1 mm. (0.004 in.) thick is unsuitable for paper or film printing. For canvas, the range is 0.1 mm to 0.075 mm (0.004 to 0.003 in.)
3. Ensure that the fuser motor is properly tensioned and its belts are in good condition.
4. Check that the exit sensor is working correctly.
5. Check that the fuser door is properly latched.

Exit jams

An exit jam occurs when the media has not been detecting exiting the printer when it should have.

1. Ensure the media being used is in good shape, with not torn or ragged edges that could jam in the paper path.
2. Inspect the paper path for obstructions.
3. Check the alignment of the fuser to the lower roller guide. Refer to the Chapter 9 topic “Lower roller guide alignment” on page 9-9.
4. Ensure the exit motor and exit rollers operate correctly. Clean the exit rollers. Ensure the teeth on the exit motor gear are correctly meshing and are not broken.
5. Check that the exit sensor is working correctly.

Printing and print quality problems

Paper edges are rippled or wrinkled

1. If possible, you should feed the paper into the printer with the paper's grain parallel to the paper path (the direction the paper travels while it is fed through the printer). Most papers are labeled either short-grained or long-grained. In short-grained paper the grain is parallel to the short axis of the paper and the paper should be loaded in the landscape orientation. Conversely, in long-grained paper the grain is parallel to the long axis of the paper.

Large spots or blobs on the print

1. **If the spots are circular**, there is probably a blob of ink on the bail rollers or the bottom rollers. Clean the rollers.
2. Ink on the drum will often soil the back of a print.
3. **If the spots have long trailing smears** look for contamination on the back tension blade. Clean the blade.

The print appears as jagged swaths (bi-directional misalignment)

In this error the printing down the page has a jagged appearance (each swath is offset slightly from the previous swath) or a portion of the print is bi-directionally misaligned while other portions are correct.

1. The linear encoder (dot clock) strip is dirty. Lint or some other contaminant is occluding the strip and causing the printhead to misread its position. Carefully, clean the strip with a water-moistened cloth and allow the strip to dry.
2. Check the printhead-to-drum spacing (tailpiece adjustment) for proper operation and adjustment. See Chapter 9, "Printhead-to-media adjustment (tailpiece adjustment)" on page 9-15.
3. Also check the printer's bi-directional alignment as explained in the Chapter 9 topic "Bi-directional print convergence" on page 9-21. Ensure that the convergence is consistent from the top of the print to the bottom. If its not, the print may be slipping in the clamp.

The image is printed skewed on the paper

1. The paper did not get clamped squarely on the paper clamp, or it slipped out of the clamp. Clean the paper clamp.
2. Clean the paper feed rollers. Use an alcohol-dampened, lint-free cloth.
3. Ensure that the paper is properly loaded. During handfeeding, ensure that the paper feeds squarely into the printer's paper path.
4. Ensure that the paper is square-cut; some papers are not.

In a swath's vertical row of dots, one dot is offset from the others

1. Clean the printhead. Paper fibers on the printhead face may be deflecting a nozzle's jetted ink from its proper flight path.

Streaks or lines in the print parallel to the direction of paper travel

1. Check and clean the back tension blade, paper clamp and bail rollers.
2. Check the fuser and oiler wheel for proper operation.
3. Replace the engine control board.
4. The X-axis drive is not functioning correctly. If the X-axis drive does not slew the printhead smoothly and evenly during printing, vertical lines appear in the print. Replace the X-axis drive, if indicated.
5. Replace the X-axis drive assembly.

Streaks or lines in the print parallel to the printhead travel

1. Possible missing weak jet. Print the Service Test Print 2 “Weak Jet” to determine if a jet is not performing. Perform a printhead cleaning cycle to try to clean a clogged jet. If necessary, turn off the printer and allow the printhead to cool for 3 hours.
2. Check the y-axis belt tension. If the y-axis drive is not smoothly and consistently rotating the drum, horizontal bands or lines appear in the print.
3. Check the fuser for proper operation. Ensure that the fuser oiler wheel contains oil. A dry fuser can pull ink off of the print as it fuses it.
4. The Drum Step Compensation Adjustment, whose value is stored in NVRAM, should be within -30 to +30. The drum is either stepping too much or not enough for each pass of the printhead. Refer to the Chapter 9 topic “Drum step adjustment” on page 9-26.
5. Ensure that no wiring harnesses are interfering with the horizontal movement of the printhead.
6. Replace the engine control board.
7. Replace the carriage board.

Scratches in transparencies parallel to the paper path travel

1. Usually caused by foreign debris in the paper path. Inspect the paper path for foreign matter that could scratch transparencies.

White portion of print is colored

1. Clean the paper tension blade and the paper clamp. Also inspect and clean the fuser.
2. Perform a printhead cleaning cycle.
3. Check the connections to the carriage board.
4. Replace the engine control board.
5. Replace the printhead.

Color is uneven

1. Perform the Chapter 9 procedure, “Adjustments” on page 9-4.
2. Replace the printhead; this is explained in the Chapter 8.

Not printing

The printer processes a sheet of paper, but no image is printed on it.

1. No drive voltages to the printhead. Check for a loose connector leading to the printhead. Check the \pm HV outputs from the power supply.
2. Replace the engine control board.
3. Replace the printhead.
4. Replace the carriage board.

Printing too light or too dark

1. Perform the Chapter 9 procedure, "Adjustments" on page 9-4.

Image is offset or cut off

1. Check the application for the correct image sizing and orientation.
2. Ensure that media loaded matches what is expected by the application

Forward and reverse swaths of prints made in bidirectional mode do not align

1. Perform the bi-directional alignment test described in the Chapter 9 topic "Bi-directional print convergence" on page 9-21.
2. Ensure that the paper tension blade, paper clamp and drum are clean.
3. Run the service mode's convergence adjustment to check and correct an alignment problem.
4. Ensure that the printhead-to-media spacing is correctly set. See Chapter 9, "Checking and adjusting the printhead" on page 9-9.

Entire image appears fuzzy; dots feature many satellites

1. The printhead is too cold or too hot for printing. Either the thermistor in the printhead is faulty and the printhead must be replaced, or the engine control board is bad.
2. The printhead high voltage may be adjusted too high; refer to the Chapter 9 topic "Adjustments" on page 9-4.

Inconsistent printing

1. This failure is probably caused by an electronic failure. Possible causes are a poor electrical connection at the carriage board an engine control board failure or a poor ground. Also check the printhead drive voltage; see Chapter 9, "Printhead drive voltage adjustment" on page 9-15.

Blank lines or double lines across the entire image

1. Check that the Y-step adjustment is properly set, refer to the Chapter 9 topic "Drum step adjustment" on page 9-26.
2. Look for a mechanical problem with the Y-axis drum motor and pulleys. Ensure the toothed pulley belts are properly seated around the pulleys. Check for proper belt tension; refer to the Chapter 9 topic, "Y-axis motor belt and drum belt tension" on page 9-7.

In the test print, the colored fills are not horizontally level with each other

1. The printhead is tilted. Run the service mode's tilt adjustment, see Chapter 9, "Tilt adjustment" on page 9-24.

Severe banding in color fills

1. Ensure that the printhead tilt is correct.
2. Increase the printhead temperature slightly. See Chapter 9, "Adjustments" on page 9-4.

The image is not centered on the print when it should be

1. Ensure that the paper-edge sensors, mounted on each side of the printhead, are firmly seated.
2. Run sensor test using the PC diagnostics. Refer to the later topic "PC-based diagnostics" on page 6-26.

The fuser stalls

1. Check the fuser for obstructions. Ensure the cutter blade is correctly installed. Odd types or weights of media may not be suitable for the printer and may jam the fuser. Specifically, media over 0.5 mm. (0.020 in) thick or under 0.1 mm. (0.003 in.) thick is unsuitable for paper or film printing. For canvas, the range is 0.1 mm to 0.075 mm (0.010 to 0.030 in.)
2. Check the fuser belt tension as described in "Fuser belt tension" on page 9-6.

The print is wrinkled

1. Check the fuser for obstructions. Inspect the stripper fingers for damage that might snag a print as its fingers strip the paper off the drum into the fuser. Odd types or weights of media may not be suitable for the printer and therefore may wrinkle as they are processed.
2. A print with heavy printing on only one side of the print may wrinkle.
3. Ensure that the fuser is not excessively oiled. Run three to five sheets of paper through the printer.

Ink load errors

1. Clean the ink load chutes.
2. Test the sensors and motors using the PC-based diagnostics. Refer to “PC-based diagnostics” on page 6-26.
3. Check the ink load flags to ensure that they are properly positioned. Refer to the Chapter 9 topic “Ink loader sensor flag adjustment” on page 9-13.
4. Ensure the printhead is properly positioned to receive ink sticks. Refer to the Chapter 9 topic “Ink stick load position” on page 9-14.

Troubleshooting missing or deflected jets

Customer-performed steps to recover faulty jets

1. Run the **Utilities** menu item **Clean Head** to run a printhead cleaning cycle.
2. Print a test print (**Utilities** menu item **Test Print**) and examine it.
3. If the problem persists, run the **Clean Head** cycle again to run another cleaning cycle
4. Inspect the maintenance station wiper. It should be clean, straight, and have no nicks or cuts. A dirty or damaged wiper cannot properly clean the face of the printhead.
5. Clean the wiper with an alcohol-moistened foam swab. *Never scrape it with a tool or with your fingertip.* Following a printhead cleaning cycle the wiper is warm and the ink wipes off easily.

6. If the problem persist, a “freeze/thaw” cycle may remove the obstruction. Turn the printer off and allow it to cool for at least 3 hours. Then turn it on again. During the cycle, ink in the nozzles solidifies and is forced out by expanding ink when the ink is remelted. Purge three times after a freeze cycle, if necessary.
7. If the printer is located above 1350 m (4500 feet), use **Service Support** menu item **High Altitude** to select the alternate head drive waveform.

Service-performed procedures to recover faulty jets

1. Check for proper maintenance station vacuum seal. Check to see that the printhead is correctly positioned in its home position.
2. Run a clean head cycle and observe the operation. The maintenance station gasket should be in full contact with the printhead faceplate during the purge cycle. Inspect the air hoses.
3. Following a clean head cycle, move the printhead to the far left end of the rails (viewed from the front) so you can inspect the printhead faceplate. It should be clean with no ink droplets adhering to it. If not, the wiper element may need to be cleaned or replaced or the faceplate is damaged requiring the printhead to be replaced.
4. The air hose leading to the top of the maintenance station should be routed so that it does not pinch or bind with the sheet metal bracket. (Refer to the Chapter 8 topic, “Maintenance station.”)
5. Ensure the air pump runs during the cycle, if it doesn't, check its 40 VDC drive voltage. Replace the air pump if the voltage is correct. Under a running load, the 40 VDC supply measures about 24 volts.
6. As explained in Chapter 9, “Vacuum check” on page 9-32, measure the air pump's vacuum to ensure that it is correct.
7. You should hear a hiss (vacuum break) just before the maintenance station pulls away from the printhead face. If the hiss is absent, check to see if the printhead is improperly positioned due to an X-axis movement problem. Also ensure that the maintenance station gasket is in good shape. Check that the maintenance station cam pin is inserted into the groove of the head maintenance cam gear (so the gear movement pushes the maintenance station against the printhead faceplate).
8. Also inspect the maintenance station filter (which protects the air pump), to see if it is clogged with ink. (If it is clogged, you must replace it along with the maintenance station and tubing.) You can pinch the air hoses to feel if they are clogged with ink.
9. Check the connector connecting the printhead to the carriage board. If you suspect an electrical connection problem, clean the connector contacts and re-seat the connector.

10. An electrical failure in the umbilical cable between the carriage board and the print engine control board can cause a single jet to consistently fail.
11. As explained in the Chapter 6 topic “PC-based diagnostics” on page 6-26, select the menu item **Head & Ink Load — Fire Ink Jets...** to run series of low and high purges on the affected jets. Run a low purge for 30 seconds and then quickly run a high purge for 30 seconds. Repeat this sequence for 2 to 3 minutes.
12. Increase the printhead voltages to their maximum as explained in Chapter 9, “Adjusting for an aged printhead” on page 9-31 and repeat Step 11 and then make a test print to see if the jet is cleared.
13. If the problem persists, replace the printhead.

SCSI hard drive failure

1. Check the wiring harnesses leading to the SCSI drive.
2. Ensure the SCSI address jumper set on the SCSI drive is set to 4. The SCSI address of the internal hard drive is printed on the printer’s configuration page. On the hard drive, locate a set of jumper pins labeled A0, A1 and A2. Only A2 should have a jumper installed; this sets the SCSI to 4.
3. Ensure no external hard drive uses SCSI address 4.
4. Replace the hard drive. Upon power-up the image processor automatically checks, and if necessary, initializes the internal hard drive.

Error codes and messages

Engine board LEDs

Engine error codes can be read either at the front panel or at the print engine control board. The error code is displayed as a numeric value on the front panel. A log of error codes is viewable in the menu item **Service Support — Fault History** (fault 1 is the most recent). If, for any reason, the front panel is not operating, you can interpret the current error code from a series of LEDs on the engine control board.

Table 6-2 Engine board LEDs

LED	Numeric value	Example	Indicated error
1	1	● (lit)	1
2	2	○ (not lit)	0
3	4	○	0
4	8	●	8
5	16	●	16
6	32	○	0
7	none	※	Total = 25. Error code 25 Leds 7 and 8 are health LEDs that sequentially flash to indicated to proper operation of the engine board CPU
8	none	※	

Print engine error codes

Table 6-3 Engine error codes reported to the front panel

Code	Descriptions	Possible causes
1	unused	
2	Bus trap error	Engine control board CPU. Replace the engine control board.
3	Address trap error	Engine control board CPU. Replace the engine control board.
4	Illegal instruction	Engine control board CPU. Replace the engine control board.
5	Divide by zero	Engine control board CPU. Replace the engine control board.
6	CPU failure	Engine control board CPU. Replace the engine control board.
7 to 9	unused	Engine control board CPU. Replace the engine control board.
10	Line 1010 Emulator (opcode error)	Engine control board CPU. Replace the engine control board.

Table 6-3 Engine error codes reported to the front panel (cont'd.)

Code	Descriptions	Possible causes
11	Line 1111 Emulator (opcode error)	Engine control board CPU. Replace the engine control board.
12 to 15	unused	
16	Interruption failed	Test or replace the power supply. Replace the wiring harness between the power supply and the engine control board. Replace the engine control board.
17	Watch dog time-out	Test or replace the power supply. Replace the wiring harness between the power supply and the engine control board. Replace the engine control board.
18	Power supply failed	Failure of +5, +40 or \pm HV supplies. Test or replace the power supply. Replace the wiring harness between the power supply and the engine control board. Replace the engine control board. The \pm 12 volt supplies are not checked by the engine control board.
19	unused	
20	Flash ROM checksum error	Engine control board failure. Replace the engine control board.
21	Memory card checksum error	Engine control board failure. Replace the engine control board.
22	SRAM I/O test failed	Engine control board failure. Replace the engine control board.
23 to 24	unused	
25	Printhead over-temperature	Check the carriage board wiring. Replace the printhead. Replace the carriage board. Replace the engine control board
26	Over current X-axis	The motor is drawing more than 7.2 amps. Check or replace the motor and its wiring harness. Replace the engine control board.
27	Over current fuser	The motor is drawing more than 7.2 amps. Check or replace the motor and its wiring harness. Replace the engine control board. Check that the fuser carriage moves freely.
28	Over current Y-axis	The motor is drawing more than 7.2 amps. Check or replace the motor and its wiring harness. Replace the engine control board.
29	Out synchronous x-axis	The movement of the X-motor is impeded. Check or replace the motor and its wiring harnesses. Replace the engine control board.
30	Out synchronous fuser	The movement of the fuser motor is impeded. Check or replace the motor and its wiring harnesses. Replace the engine control board. Check that the fuser carriage moves freely.

Table 6-3 Engine error codes reported to the front panel (cont'd.)

Code	Descriptions	Possible causes
31	Out synchronous Y-axis	The movement of the Y-motor is impeded. Check or replace the motor and its wiring harnesses. Replace the engine control board. Check that the paper clamp is not jammed, keeping the drum from rotating.
32	In position time-out X-axis	The movement of the X-motor is impeded. The motor failed to be in the expected position. Check or replace the motor and its wiring harnesses. Replace the engine control board.
33	In position time-out fuser	The movement of the fuser motor is impeded. The motor failed to be in the expected position. Check or replace the motor and its wiring harnesses. Replace the engine control board.
34	In position time-out Y-axis	The movement of the Y-motor is impeded. The Y-axis motor or clamp failed to be in the expected position. Check the paper clamp sensors. Check or replace the motor and its wiring harnesses. Replace the engine control board. Check that the paper clamp is not jammed, keeping the drum from rotating.
35	Encoder failed X-axis	Readings are not being received from the motor. Ensure the printhead shipping restraint has been removed. Check or replace the motor and its wiring harnesses. Replace the left junction board. Replace the engine control board.
36	Encoder failed fuser	Readings are not being received from the motor. Check or replace the motor and its wiring harnesses. Replace the left junction board. Replace the engine control board.
37	Encoder failed Y-axis	Readings are not being received from the motor. Check or replace the motor and its wiring harnesses. Replace the left junction board. Replace the engine control board.
38	Printhead heater time-out	Printhead failed to reach its operating temperature. Check its wiring. Replace the printhead. Replace engine control board.
39	Reservoir heater time-out	Printhead failed to reach its operating temperature. Check its wiring. Replace the printhead. Replace engine control board.
40	Melt heater time-out	Printhead failed to reach its operating temperature. Check its wiring. Replace the printhead. Replace engine control board.
41	Head heater on too long	Printhead failed to turn off its heaters. Check its wiring. Replace the printhead. Replace engine control board.
42	Reservoir heater on too long	Printhead failed to turn off its heaters. Check its wiring. Replace the printhead. Replace engine control board.
43	Melt heater ion too long	Printhead failed to turn off its heaters. Check its wiring. Replace the printhead. Replace engine control board.

Table 6-3 Engine error codes reported to the front panel (cont'd.)

Code	Descriptions	Possible causes
44	HR-head heater A/D failed	Failure of the A/D circuits. Check the printhead and carriage board wiring. Replace the engine control board.
45	LR-head heater A/D failed	Failure of the A/D circuits. Check the printhead and carriage board wiring. Replace the engine control board.
46	Reservoir heater A/D failed	Failure of the A/D circuits. Check the printhead and carriage board wiring. Replace the engine control board.
47	Melt heater A/D failed	Failure of the A/D circuits. Check the printhead and carriage board wiring. Replace the engine control board.
48	Power supply A/D failed	Failure of the A/D circuits. Replace the engine control board.
49	Ink level time-out	Empty level of ink in printhead has not changed 11 minutes after ink sticks were added. Check the printhead wiring. Replace the printhead. Replace the carriage board. Replace the engine board.
50	Ink load failure	An ink stick was not sensed dropping into the printhead. Check the ink stick drop sensor and the ink low sensor. Check the ink loader motor assembly. Replace the ink loader motor assembly. Replace the left junction board. Replace the engine control board.
51	Ink feeder failure	The ink loader is not sensed installed in the printer. Ensure the ink loader assembly is properly installed. Check the ink loader installed sensor. Check the ink loader motor assembly. Replace the ink loader motor assembly. Replace the left junction board. Replace the engine control board.
52	Overload failure X-axis	Check or replace the motor. Replace the engine control board.
53	Overload failure fusers	Check or replace the motor. Replace the engine control board.
54	Overload failure Y-axis	Check or replace the motor. Replace the engine control board.
55	Fuser heater 1 time-out	The right side of the fuser is not reaching its expected temperature. Check its wiring. Replace the fuser. Replace the engine control board.
56	Fuser heater 2 time-out	The left side of the fuser is not reaching its expected temperature. Check its wiring. Replace the fuser. Replace the engine control board.
57	Fuser heater 1 A/D failure	Failure of the A/D circuits. Replace the engine control board.
58	Fuser heater 1 A/D failure	Failure of the A/D circuits. Replace the engine control board.
59	unused	
60	NVRAM checksum error	Replace the engine control board.
99	SCSI Hard Drive Failure	Check the hard drive connections. Replace the hard drive.

Table 6-3 Engine error codes reported to the front panel (cont'd.)

Code	Descriptions	Possible causes
100	Dot Clock Check Failure	The print engine did not successfully complete a scan of the dot clock encoder strip. Ensure the strip is clean and properly in place and the sensor under the carriage board is in position to read the strip. Check the X-axis motor for proper operation. Check or replace the carriage board. Replace the engine control board.
101	X-Axis Origin Check Failure	Check the X-axis motor for proper operation. Ensure the X-axis belt is properly tensioned. Check or replace the X-axis motor. Replace the engine control board.
102	Fuser Origin Check Failure	Check the fuser motor for proper operation. Ensure the fuser belt is properly tensioned. Check or replace the fuser motor. Replace the engine control board.
103	Y-axis Origin Check Failure	Ensure the drum rotates properly. Check the clamp position sensors at the right end of the drum to ensure they are in place. Check the tension of the Y-motor belts. Replace the Y-motor. Replace the engine control board.
104	Paper Clamp Origin Check Failure	Ensure the drum rotates properly. Check the clamp position sensors at the right end of the drum to ensure they are in place. Check the clamp solenoids for proper operation. Check the tension of the Y-motor belts. Replace the Y-motor. Replace the engine control board.

Image processor diagnostics

Full verification test

Verification Tests are a subset of the tests available in the Image Processor Service Mode discussed below. The Verification Tests are those individual Service Mode tests not requiring operator intervention or any consumables. These tests take up to 5 minutes (depending on optional memory installed) to complete. To enter this mode:

- Press and hold down front panel switch 2 during power up or reset until VERIFYING is displayed on the front panel.
- At the beginning of each test a message is sent out the RS232 port and to the front panel to indicate which test is about to start. The RS232 port is configured for 9600 baud, 8 bits of data, no parity and 2 stop bits.

When the Verification Tests have completed, the test suite restarts and execute repeatedly until power is turned off. If an error is detected, the test with the error will execute in a loop until power cycled or reset. Also with each error an error message will be sent out the RS232 port and displayed on the front panel.

Image processor Service Mode

The Service Mode Tests isolate defective FRUs (image processor board, RAM SIMMs, Extended Feature (font) SIMM, Network Card (Smart Card, or print engine). The Service Mode tests are set up in several sections, DRAM Test Group (to check the optional memory SIMM), IP Board Test Group, the Font SIMM, the Smart Card, and the individual engine diagnostics. The DRAM and IP Board Test Groups operate in a continuous loop mode.

Tests can be viewed by using switches 2 or 3 (*prev* and *next* on the front panel display, respectively) to scroll to the desired test, and switch 4 (*start/stop* on the front panel display) to initiate the test. If no error is detected, tests will repeat until switch 4 is pressed again. For group tests the entire test suite is repeated. If an error is detected, the test failure is displayed on the LCD display and the failed test is continuously repeated.

To start the Service tests, press switch 3 and hold it down during power up or reset until "Initializing Service:" is displayed on the top line of the front panel. The second line indicates which switches scroll through the menu, or select the specific test group or individual test displayed.

The test groups are:

- Kernel -- select the Kernel group from the front panel.
- I/O -- select the I/O group from the front panel.
- RAM -- select the RAM group from the front panel.
- PWA -- select the PWA group from the front panel.
- IP Board Test -- select the IP Board Group.
- Engine -- select the Engine group from the front panel.

Note Notice you can use Test 1a to reset the image processor's NVRAM.

Table 6-4 Image Processor Service Mode tests

Test	Function
10	CPU Interrupt
11	Instruction ROM Checksum
13	NVRam Acknowledge
19	NV Register Write Read
1a	NV Clear (Zero entire device)
1b	PROM Data Read
1c	Font ROM Checksum
21	Centronics Register Write Read
22	Centronics LoopBack (external)
23	TC8576 CTS verification
24	TC8576 External Loopback
25	SCSI Interrupt
26	SCSI Register Write Read
27	Centronics to SCSI loop around. Ensure front panel wiring harness is correctly installed.
2d	SmartCard
2e	16550 Internal Loopback
2f	16550 External Loopback
34	DRAM Refresh
36	SIMM1 Data Paths. Ensure an 8 Mbyte SIMM is installed in connector SIMM 1.
37	SIMM1 Adrs Paths
38	Extended SIMM1 Data Paths
39	Extended SIMM1 Adrs Paths
3a	SIMM2 Data Paths
3b	SIMM2 Adrs Paths
3c	Extended SIMM2 Data Paths. Ensure a 16 Mbyte SIMM or 32 Mbyte RAM SIMM is installed in the SIMM 2 connector.
3d	Extended SIMM2 Adrs Paths
40	Front Panel LCD Test
41	LCA Configuration
42	LCA Reg Write Check
43	FIFO Empty Check
44	FIFO Half Check
45	FIFO Full Check
46	FIFO Loopback I B 47 Clock Test
68	SmartCard Installed?
99	Dump EEprom to DRAM

PC-based diagnostics

The PC-based diagnostics allow you to interactively test and check the operations and functionality of the printer. The diagnostics are provided on a 3.5 inch floppy diskette. All of the diagnostic tests are started from the PC.

The PC diagnostics were developed to run on a PC. The following procedure discusses using the diagnostics with an Apple® PowerBook® running PC emulation software, as this is the portable computer in use by the field service organization.

Requirements

- Printer serial cable adapter (level shifter), part number 174-3493-00.
- For PCs use a serial null modem cable, part number 012-1313-00. For Apple computers, use serial adapter cable part number 012-1498-00.
- Apple® PowerBook® 540c or 5300c/ce running SoftWindows® in MS-DOS mode. An IBM PC or PC-clone or compatible i86 operating environment, preferably a 386 or 486; 286-based PCs are intolerably slow.
- At least 640 kbyte of RAM. About 2 Mbytes of disk space to store the diagnostic program and its test suite.
- A mouse is optional, but is not supported by the user interface.
- MS-DOS environment, version 3.1 or newer. This may be SoftWindows® on a Mac, or Windows DOS or MS-DOS on a PC.

By convention, the diagnostic files are installed into a single directory (for ease of removal and updating):

C:\600DIAGS\<version number>\

is the default.

The following procedure discusses using the diagnostics with an Apple PowerBook running SoftWindows, as this is the portable computer in use by the field service organization. SoftWindows should be set to the *Preferred size* of 10 Mbytes, assuming your PowerBook has enough RAM.

Starting the diagnostics

1. Turn off the printer and the computer from which the diagnostics will be run. Connect the serial port of the computer to the special diagnostic, 5-pin serial port of the printer; use the special serial cable adapter. (Pin 1 is the left-most pin of the five-pin connector, looking at the back of the printer). Note the Pin 1 polarity mark on the cable adapter's connector. The serial cable must be plugged into the diagnostic serial port before the printer is turned on in order to start the printer in "service mode."

In the case of a Macintosh, plug the serial cable from the printer into the Mac's serial port marked "Modem."

2. Turn on both the printer and your computer. In the case of a Apple PowerBook, select AppleTalk Inactive from the file PowerBook control strip menu.

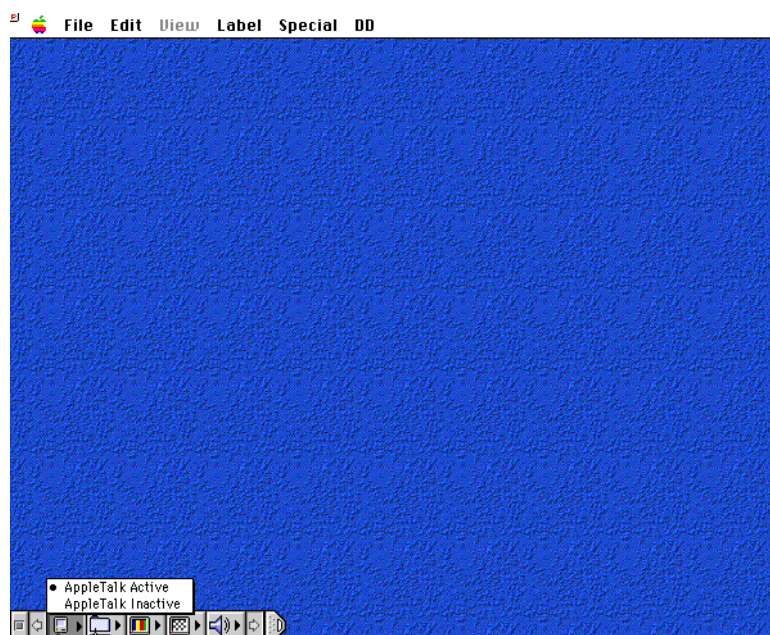


Figure 6-2 Turning off AppleTalk

3. Configure SoftPC's *PC Serial Ports*. Set **COM1** to the *Modem Port*. Flow control does not need to be checked.
4. In the same pull down menu, set *PC Memory* to **Expanded Memory of 0 MB** and an **Extended Memory of 1 MB**.

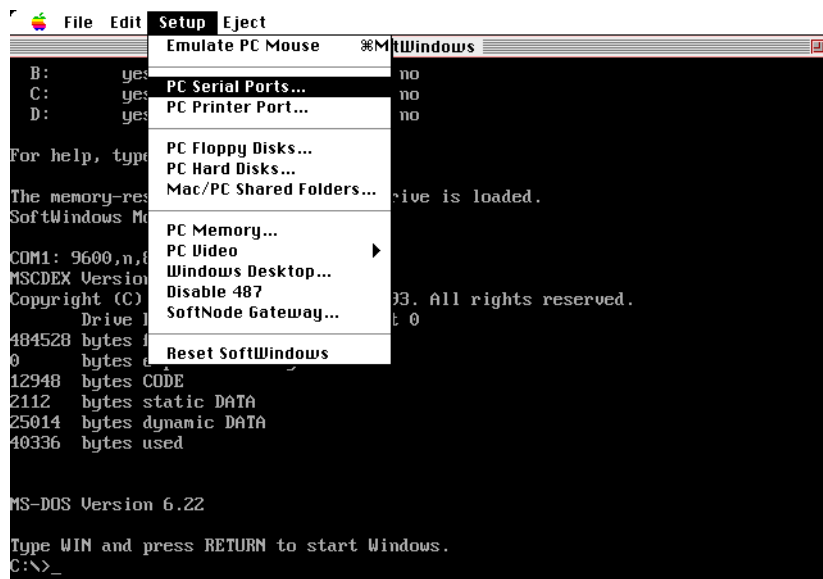


Figure 6-3 Configuring SoftPC's Serial Port

5. To install the diagnostics from the diskette onto your computer: type: **A:INSTALL<return>**.
6. Connect to the directory containing the desired version of diagnostic software.
7. Launch the diagnostics program by typing **DIAGS**. Once launched, the program repeatedly attempts to communicate with the printer. The link status indicator, in the bottom-right corner of the screen, reads "NO" until this link is established; once communication is established, it reads "ok."

If the status does not change to "ok," then make sure the serial cable is properly installed and that the program is using the correct serial port (usually this is COM1:) and the correct baud rate (19.2K baud).

8. Once communication with the printer is made, the diagnostics display the following screen on the computer:

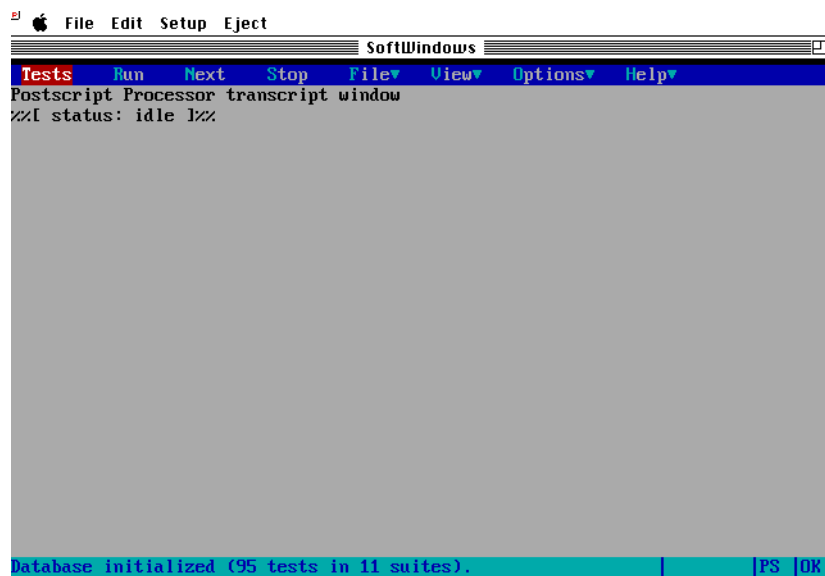


Figure 6-4 PC-based diagnostics screen display

The start-up screen features the following elements:

- A conventional-looking Menu Bar across the top of the screen; all diagnostic functions are accessible via this menu.
- The middle of the screen is a blank gray area; this is a 23 x 80 character “tty” in which all interaction takes place with the tests when they are running.
- The bottom line of the screen gives feedback about the state of the system; it’s divided into three fields:
 - The left-most is the largest field, and it is the “message” field; it contains descriptive text summarizing the operation of tests in progress and of the diagnostics program itself.
 - Next is the completion indicator. When downloading test files to the printer, this field indicates the progress of the operation with a percentage complete display “n%” (where n is 0 to 100). When running a lengthy series of tests, a display “n of N” indicates the test progress.
 - In the very bottom-right-most corner is a tiny field which indicates the status of the communication link between the PC and the printer. It says “ok” when the link is working and “NO” when communication is lost.

Selecting tests

Press **Alt-T (Option T — Mac)** to activate the test selection window.

Use the following keys to navigate the lists of tests. The left column, Test Suites, lists the groups of test. The center column is the individual tests within a selected test suite. The right-most column “Status” indicates if a test is selected. You can select a single test, a series of tests, or all the tests in a test group.

In the Test Suites column:

- **Up/Down arrows** – move the Test Suite selection highlight up or down on the screen. At the top and bottom of the screen, it causes the list to scroll if there are more tests in that direction on the list.
- **Tab** – Activates a suite of tests. The individual tests of the selected test suite are displayed in the Individual test column. The tests are preceded with a letter of the alphabet; you can select a test by pressing the Option key and the letter preceding the test.
- **PgUp/PgDn** – move the display of tests one screen-full at a time. The highlight generally stays in place on the screen, so this also changes the highlighted test.

In the Individual Test column:

- **Up/Down arrows** – move the Individual Test selection highlight up or down on the screen. At the top and bottom of the screen, it causes the list to scroll if there are more tests in that direction on the list.
- **Space bar** – toggles the Status of the currently highlighted test: to “Selected” if the test is unselected and to unselected if it is already selected.
- **Alt-S (Control S — Mac)** – toggles the Status of all tests in the Suite which contains the currently highlighted test: all to Selected if the currently highlighted test is not selected and all to unselected if it is anything else. The status of the other tests in the suite are immaterial.
- **Alt-A (Control A — Mac)** – toggles the Status of ALL tests. Like Alt-S, the new setting for all tests is based on the currently highlighted test, regardless of the individual settings of the other tests.
- **Alt-R (Control R — Mac)** – select the currently highlighted test opens the Run window to prepare to execute the currently selected tests.

- **Alt-H (Control H — Mac)** – Opens a small Help window which serves to remind the functions that are available. Escape or Enter removes the Help window.

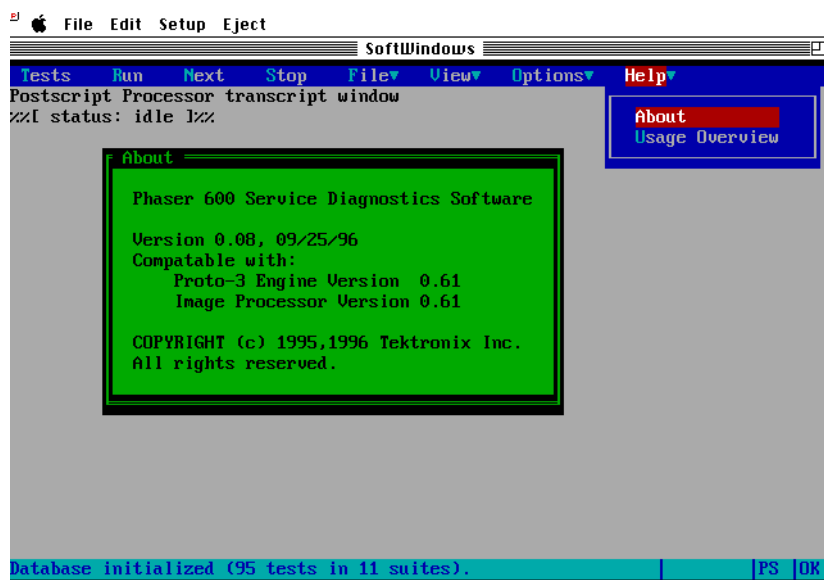


Figure 6-5 The diagnostics global help screen

- **F1** – Brings up a more complete description about the currently highlighted test.
- **Esc and Enter (Return)** – either key causes the replaces the selection screen with the current tty window. Any currently selected test remain selected.

Running tests

A print engine test is performed by the printer’s processor. The test is downloaded from the diagnostics to the processor. When a downloadable test is selected, it takes a few moments to download the test. While the test is downloading, the message bar indicates this fact and the completion indicator shows how much of the file has been loaded.

- 1. Press the **Return** key to enter the test group selection window.
- 2. Use the arrow keys to scroll through the list of tests suites. Press the **Tab** key to select a test suite.

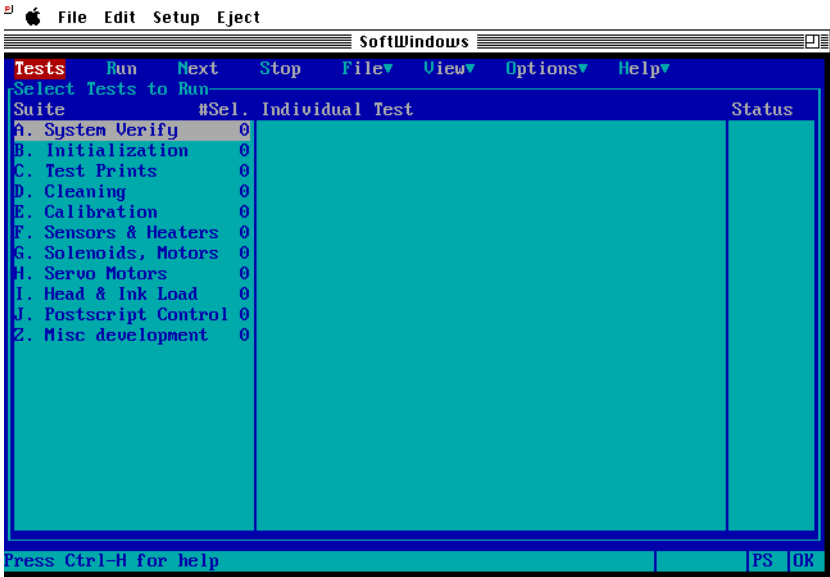


Figure 6-6 The Test Suite list

Once you select a test suite, the individual tests of that suite are displayed.

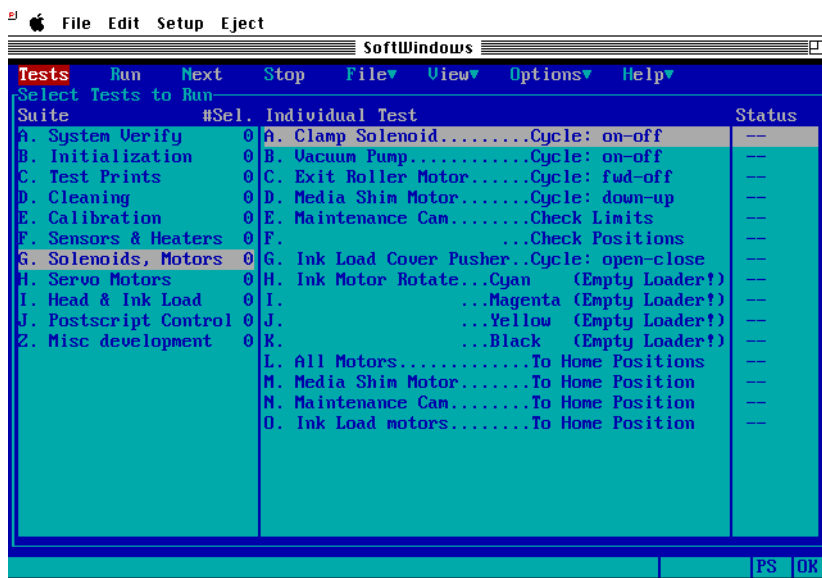


Figure 6-7 The Individual test within a selected test suite

3. Press the space bar to select or deselect a test. You can select as many tests as you like.
4. Once selected, press **Ctrl-R** to start the test(s). Depending on the test, a screen may be displayed to modify how the tests run.

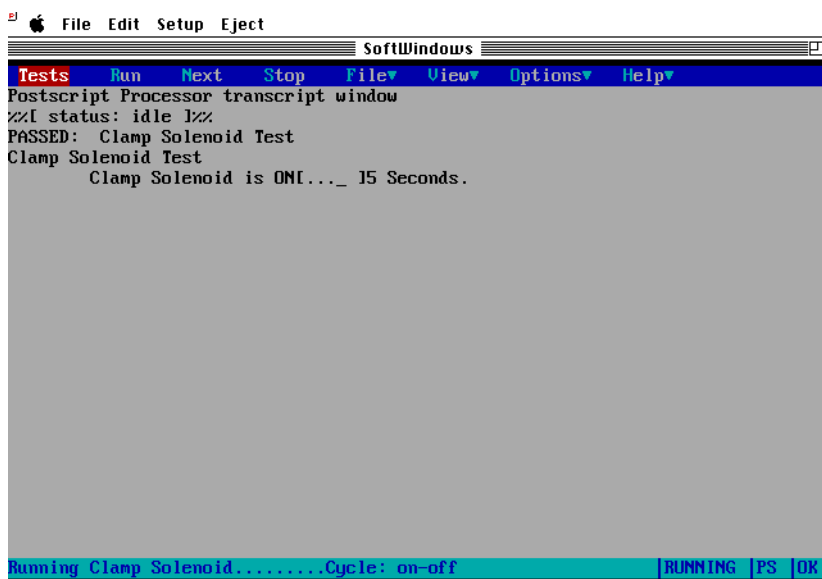


Figure 6-8 Running a test

The solenoid test, shown above, allows you to selectively actuate a printer solenoid. After the test runs, a summary of the test results is displayed.

If necessary, you can press the F1 key while highlighting an individual test to display a help message that describes the test.

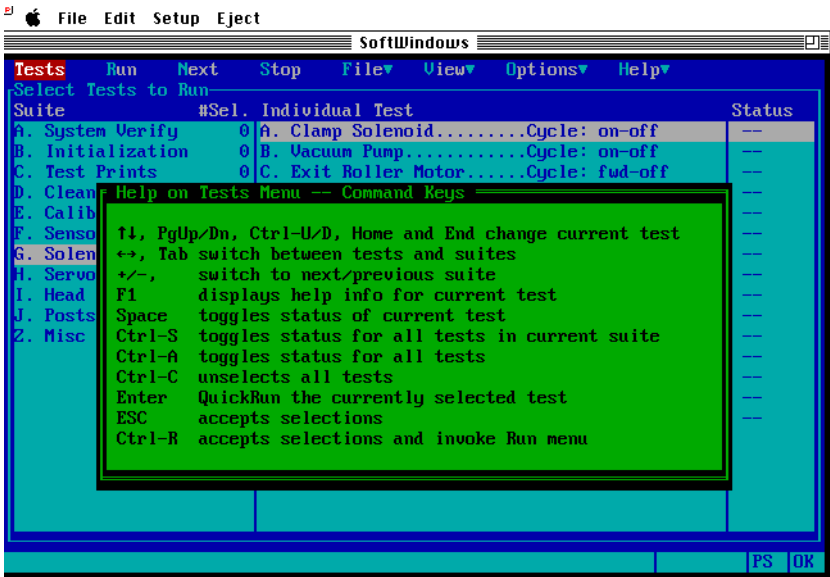


Figure 6-9 An Individual Test help screen

The Sensor Test shows you the real-time state of the printer's sensors. You can manually interrupt the sensors to determine if they operate correctly.

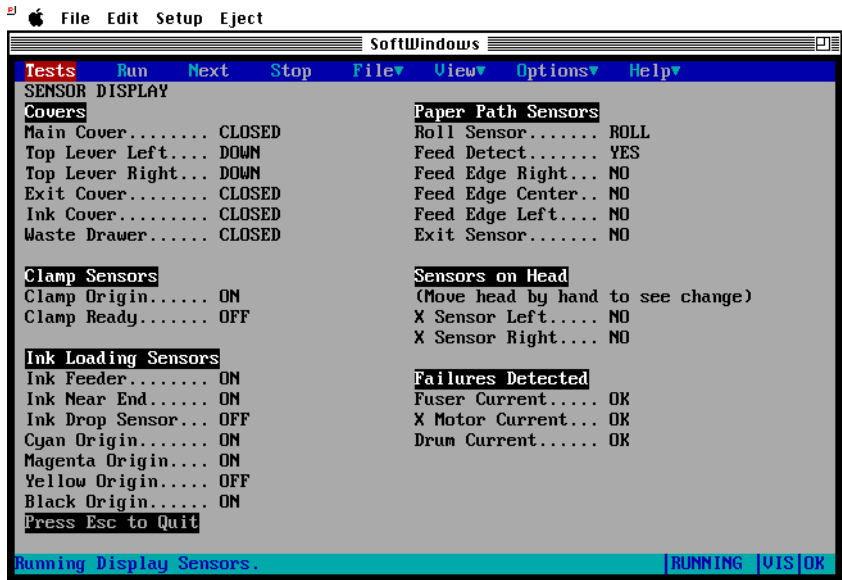


Figure 6-10 Sensor Test summary

The Servo Motor Tests let you know if a motor motion occurred within its expected time frame. The test reports if the motor passed or failed.

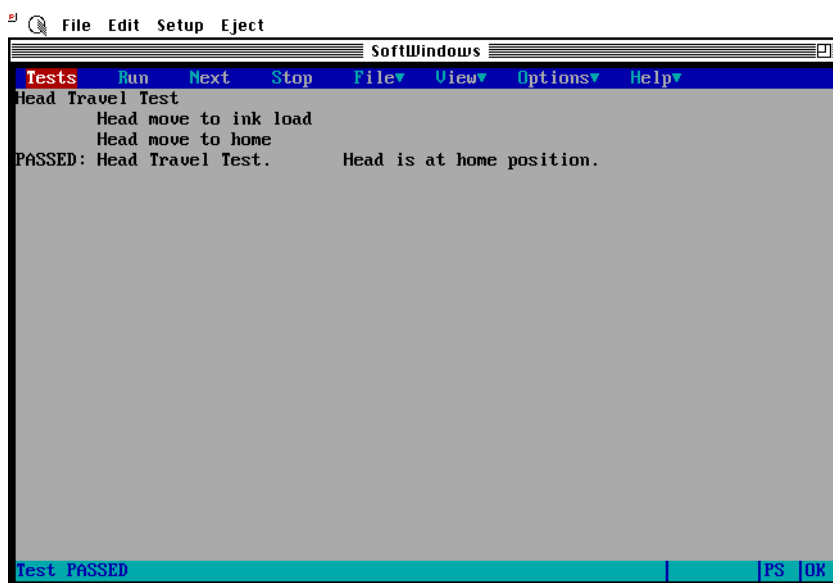


Figure 6-11 Test result of a Servo Motor Test

The Heater and Ink Levels Tests let you select, start and observe the operation of the printers heaters and determine if they are operational. The test displays the real-time temperature of active heaters. A graphic illustrates if the heater temperatures are within tolerance.

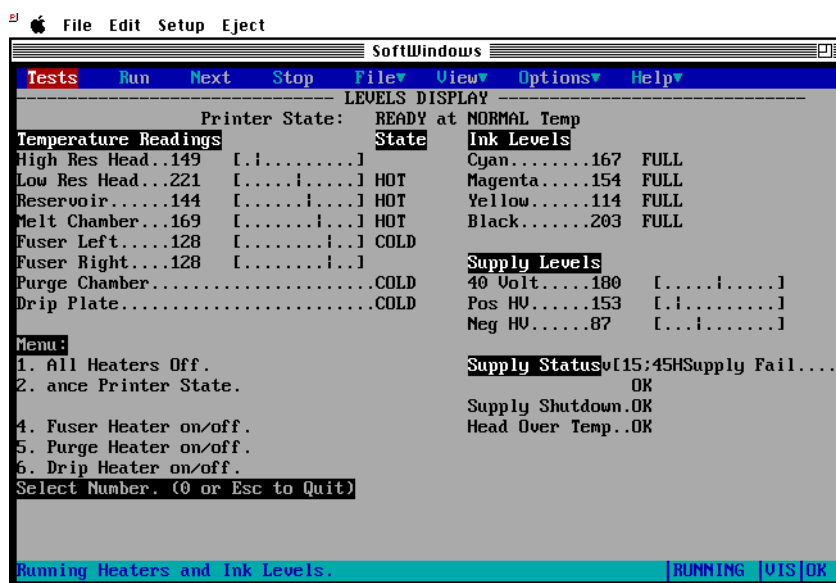


Figure 6-12 The Heater and Ink Levels Test

Saving and restoring test selections

The current test selection may be saved to a file and later restored, including the completion status of tests which were run earlier. The result of loading a saved test selection file is exactly the same as if the settings were re-specified manually. It provides a way to pre-select tests for particular audiences.

Default file name extensions for saved test selections is **.TSV**.

Saving and restoring other settings

Any user-configurable setting that the program knows about is saved in a configuration file called *DIAGS.INI* and persists from session to session. Presently there is a short list of configurable items, but any program setting you makes need only be done once.

The diagnostic pull-down menus summary

All of the functionality in the user interface is accessible from the menu bar. Some of the functions are additionally available via “accelerator” key (Alt- key) synonyms. The following discusses the pull-down menus, as they appear, left to right.

Test Command (Alt-T)

Opens the test selection window.

View Menu

Provides for changing various screens and major modes of operation for the program.

- “PostScript Processor” – switches to the processor window to show results of test running on the processor.
- “Erase Screen” – erases all the characters from the currently selected window; it has no affect on the test running.
- “Printer Info.” – brings up a window summarizing information about the printer currently connected to the diagnostics.
- “Debug” Check List Item – enables or disables a trace of all I/O between the user interface and the 29K; it is off by default.
- “Test Stats” – lists the status of the last test sequence to run

Run Command

Executes a test sequence.

Next Command

Stops the currently running test and immediately starts the next test.

Stop Command

Stops the currently running test and stops the sequence in progress.

File Menu (Alt-F)

This menu controls the saving and loading of test selection sequences, described above.

- **New** – creates a new test selection sequence (deselects all tests and erases their previous completion codes).
- **Open** – opens an existing, previously saved file.
- **Save** – saves the current test selections in the “current” file. If the selection sequences is new (never been saved) the user is prompted to specify a file name.
- **save As** – saves the current test selections in a particular file.
- **eXit (Alt-X)** – exits the diagnostic program.

Options Menu

Provides for customizing of program operation. This menu contains some sub-menus.

- “Communications” – provides for changing the baud rate of the link and for changing the communication port used. The default baud rate is 19.2 k.

Help Menu

The system includes limited On-line help. Most of the really useful help pertains to the tests themselves and is available via the **Edit** menu.

- **About** – gives the program version and other statistics about its operation.
- **Usage overview** – gives the user an overview of the system and explains running the first test.
- **F1** – describes an individually highlighted test.

Problems and solutions

Power problems

Table 6-5 Power problems

All front panel indicators remain off.	Check to see if the printer is plugged in. Check the line power fuses inside the power supply.
The printer does not initialize upon power-up.	Check the power on/off switch. Check the power supply for proper harness wiring. Are all wiring harness properly installed?

Macintosh printing problems

Table 6-6 Macintosh printing problems

Image never prints. Printer acts as if it is receiving data, but nothing comes out of printer or it goes back to "Ready" mode without printing image.	<p>Make sure that the correct Phaser 600 icon was selected in the Chooser. Try printing the job again.</p> <p>In the Chooser, switch background printing to <i>off</i>. Try printing the job again.</p> <p>Download the Error Handler utility and try printing the job again. (Refer to the Chapter 3 topic "Using the Error Handler utility" on page 3-8.) If an error page is printed after printing the job again, call the Customer Support Hotline for further assistance. Please have the error page in hand.</p> <p>If available, try printing to a black-and-white PostScript printer (such as an Apple LaserWriter). If the file does not print on the black-and-white PostScript printer, this may mean that the problem may be application- or network-related.</p>
Image prints in black-and-white.	<p>In the Print dialog box, make sure the Color/Grayscale option has been selected.</p> <p>Make sure that the Phaser 600 icon was selected in the Chooser. Try printing the job again.</p> <p>Check the version of your LaserWriter driver to ensure that it is version 6.0.7 or higher. Earlier versions of the driver do not support color PostScript.</p> <p>The application may require special instructions to print. Check in the <i>Phaser 600 Color Printer User Manual</i>.</p>
Image is rotated 90 degrees.	In the application's Page Setup , make sure that the image is selected to print in portrait or landscape orientation. If the problem persists, reset NVRAM; refer to the Chapter 9 topic "Resetting NVRAM" on page 9-34.

PC DOS printing problems

Table 6-7 PC DOS printing problems

<p>Image never prints. Printer acts as if it is receiving data, but nothing comes out of printer, or the printer goes back to "Ready" mode without printing image.</p>	<p>Make sure that the computer is communicating with the printer.</p> <p>At the DOS prompt, type the following in lowercase letters: echo showpage > port: (substitute LPT1:, LPT2: or COM1, etc., for port:)</p> <p>The printer responds by sending a page through the print cycle and ejecting a blank page. If this does not happen, check your cable, or try a different parallel cable. If using the serial port, refer to the serial port configuration.</p> <p>Ensure that the print file ends with a "CTRL-D" character. CTRL-D indicates the end-of-file, which the printer responds to by closing host-to-printer communications and then processing and printing the file. Use a text editor to open and examine the file. On-screen, a "CTRL-D" character appears as a "◆" character.</p> <p>Check and add, if necessary, the following line to the <i>AUTOEXEC.BAT</i> file: mode = LPT1,,p (If your port is not LPT1, substitute LPT2: or COM1: for the correct port). This turns on printer retry indefinitely.</p> <p>Is the printer in PostScript mode? Check this by sending the file <i>TESTHPGL.PLT</i> (located on the Tektronix Utilities diskette, <i>HP-GL</i> directory) to the printer.</p> <p>At the DOS prompt, type the following DOS command: COPY TESTHPGL.PLT LPT1: (If your port is not LPT1, substitute LPT2: or COM1: for the correct port).</p> <p>The PC responds with 1 FILE COPIED. If this file prints stating that the printer is in HP-GL mode, then the printer needs to be changed back to the PostScript mode. Use the utility located on the Tektronix diskettes to change language emulation. Refer to the <i>Phaser 600 Color Printer User Manual</i> for complete instructions.</p> <p>Download <i>TEKEHAND.PS</i> file located on the Tektronix Utilities diskette. At the DOS prompt, type the following DOS command: COPY TEKEHAND.PS LPT1: (If your port is not LPT1, substitute LPT2: or COM1: for the correct port).</p> <p>Alternately, enable the error handler from the front panel using the menu item Printer Defaults — PS Error Handler.</p> <p>The PC responds with 1 FILE COPIED. The printer now has a PostScript error handler present which remains resident until power is cycled on the printer. Resend the image file that was not printing.</p> <p>Any PostScript errors encountered by the printer are recorded on a printout. Call Tektronix Customer Support at 1-800-835-6100 for more assistance (save the print with the error message).</p>
---	--

Windows printing problems

Table 6-8 Windows printing problems

<p>Image never prints. Printer acts as if it is receiving data, but nothing comes out of printer or the printer goes back to "Ready" mode with out printing image.</p>	<p>Perform the same troubleshooting ideas suggested in the previous topic "PC DOS printing problems."</p> <p>Under the printer's setup options, set RETRY = 850</p>
<p>Blue color on the screen is printing too purple.</p>	<p>Many applications describe color as percentages of a video display screen's primary colors: red, green, and blue (RGB). When a printer translates these RGB colors into its own primaries of cyan, magenta, and yellow (CMY), blue is often printed as purple.</p> <p>To adjust blue from within Microsoft Windows: Within the Tektronix PostScript Windows driver you have an option, Vivid Color, that alters to blue colors that are appearing purple.</p> <p>To Access this option, select: Printer Setup Options Printer Features Media Selection</p> <p>You are now at the TekColor Options window; select Vivid Color.</p> <p>This TekColor Options window can also be accessed through the Windows Control Panel item Printers.</p>
<p>Printing from Windows produces the message "Problem writing device LPT1: Cancel or Retry".</p>	<p>Option #1:</p> <ol style="list-style-type: none"> 1. Select Printers, and click Configure. 2. Change the port selection from LPT1 to LPT1.OS2. The MODE command disables DOS timeouts. The LPT1.OS2 selection forces Windows to print through DOS instead of directly to the printer. <p>Option #2: The solution above does not allow users to spool documents using the PrintManager. To use the PrintManager as well as correcting time-out problems, edit the following line in the <i>win.ini</i> file:</p> <pre>TransmissionRetryTimeout=45 to: TransmissionRetryTimeout=850</pre> <p>In Windows 3.1:</p> <ol style="list-style-type: none"> 1. Follow the above instructions for issuing the MODE command in DOS. 2. Start Windows. 3. Select the Control Panel from the Main menu. 4. Select Printers 5. Select the appropriate printer and click on Connect. 6. Uncheck the Fast Printing Direct to Port box.

Workstation printing problems

Table 6-9 Workstation printing problems

Image never prints. Printer acts as if it is receiving data, but nothing comes out of the printer or the printer goes back to “Ready” mode without printing an image.	For serial or parallel printing. Ensure that the print file ends with a “CTRL-D” character. CTRL-D indicates the end-of-file, which the printer responds to by closing host-to-printer communications and then processing and printing the file. Use a text editor to open and examine the file. There is a utility file that you can use to tag or remove a CTRL-D to the end of a print file. TCP/IP and Novell protocols do not accept CTRL-D with the print files. Refer to the network user manual.
---	--

Front panel indications

Table 6-10 Front panel indicators and their meanings

Media indicates none loaded when it is.	If there is media in the roll, then check the roll media input sensor (on the paper guide/ cover).
--	--

Image processor hard and soft error indicators

Hard errors are image processor self-test failures that prevent the printer from printing a page. Hard errors cause the rear panel LEDs to stop blinking and remain *on* or *off*. Hard errors are also any error that occurs during service mode.

Soft errors are errors that occur during the normal power-up self-test that, while limiting the printer, would not stop the printer from printing its startup page. A message regarding the soft error would then be printed on the startup page (even if the startup up page had been turned off). Soft errors include failures of the expansion SIMMs, as well as the SCSI, serial, LocalTalk, parallel, and Ethernet ports and their cabling or connections.

Cleaning and Maintenance

Cleaning hints

- Power can remain **ON** while cleaning.
- Use isopropyl alcohol that is at least 90% pure (99% yields the best results).
- Cleaning Kit (016-1400-00) includes the following items:
 - Cleaning tool
 - Foam cleaning swabs
 - Lint-free cleaning cloth
 - Empty bottle for isopropyl alcohol

You can separately order a pack of 10 pre-soaked alcohol cloths (006-7824-00)

Quick cleaning

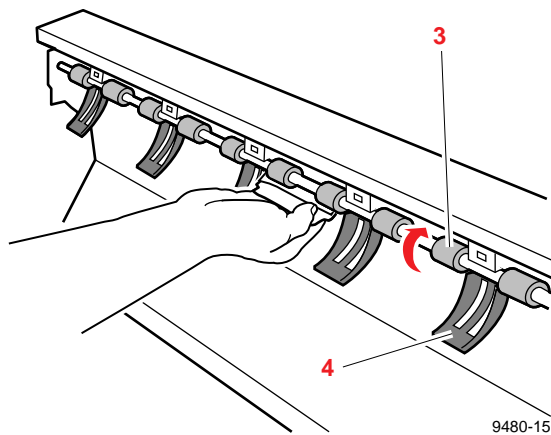
As a general rule, you will get the best results from your printer if you perform these quick cleaning procedures once a week or, as indicated in these instructions, according to how much media you have used.

Feed rollers and paper guides

Clean the drum, feed rollers and paper guides after you have used approximately 80 large-size prints such as ANSI E, Arch E, ISO A0 or JIS B1.

1. Open the top cover.
2. Moisten a lint-free cloth with 90% pure isopropyl alcohol (or use a pre-soaked alcohol cloth).

3. Wipe each of the feed rollers. Using your hand, rotate each roller to clean its entire surface.




4. Wipe each of the paper guides.
5. Close the top cover.

Drum

Clean the drum after you have used approximately 80 to 100 large-size prints such as ANSI E, Arch E, ISO A0 or JIS B1.

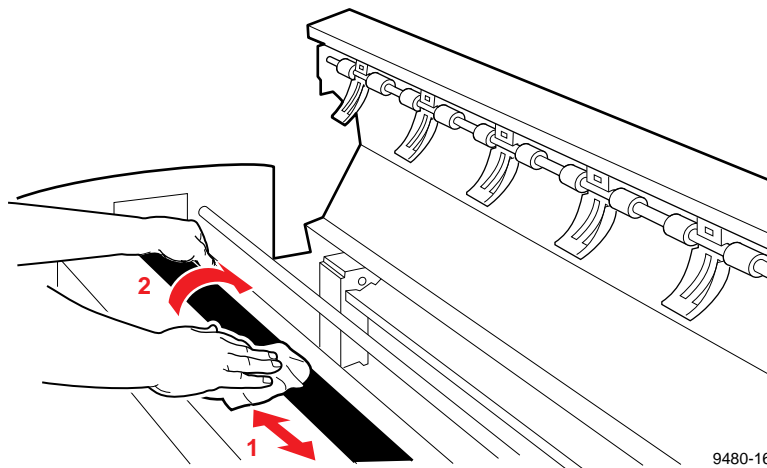1. Using a large, lint-free cloth soaked with isopropyl alcohol (or a pre-soaked alcohol cloth), wipe the entire length of the drum to remove any dust or wax residue.
2. Using your hand, rotate the drum toward the back of the printer to expose and clean more of the drum; clean its entire surface in this manner.



Back tension blade and paper clamp

Clean the back tension blade and paper clamp when you notice streaks on your print.

Setting the front panel for cleaning

1. On the printer's front panel, press the **Menu** button; the printer displays this message:

```
Help Pages
<-----> Menu
```

2. Press the arrow button (--->) until you see this message:

```
Utilities
<-----> Menu
```

3. Press the **Menu** button; the printer displays this message:

```
Test Print
<-----> Menu
```

4. Press the arrow button until you see this message:

```
Clean Paper Clamp
<-----> Select
```

5. Press the **Select** button. This places the printer in a "neutral" position:

- Fuser shuttle is positioned to the right for easy access.
- Back tension blade is loosened.
- Paper clamp is raised.
- The front panel displays: Open Top Cover.

Cleaning the back tension blade

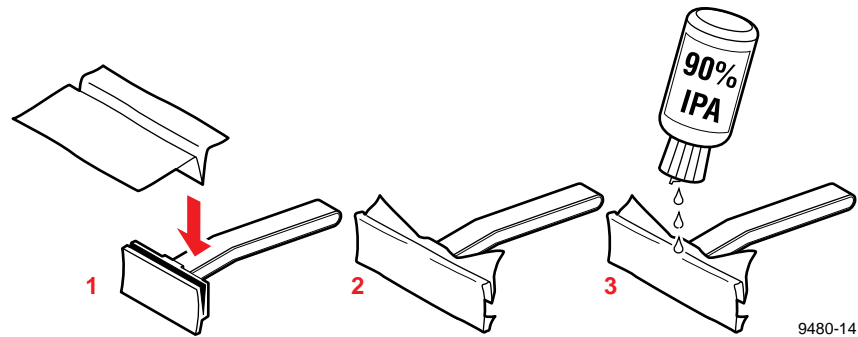
Warning *The back tension blade, the steel belt behind it, and the paper clamp are very sharp. Make sure that you use the cleaning tool and keep your hands away from the blade and belt.*

Note *For better visibility, you can pull the printer away from the wall to access it from behind. If this is not possible due to space limitations, you can use a mirror to see exactly where you are cleaning with the tool.*


1. Moisten a lint-free cloth with 90% pure isopropyl alcohol (or use a pre-soaked alcohol cloth).

2. Insert the cloth into the cleaning tool:

- If the cloth has not been folded, fold it in half; insert the folded edge of the cloth into the “V” opening of the cleaning tool.



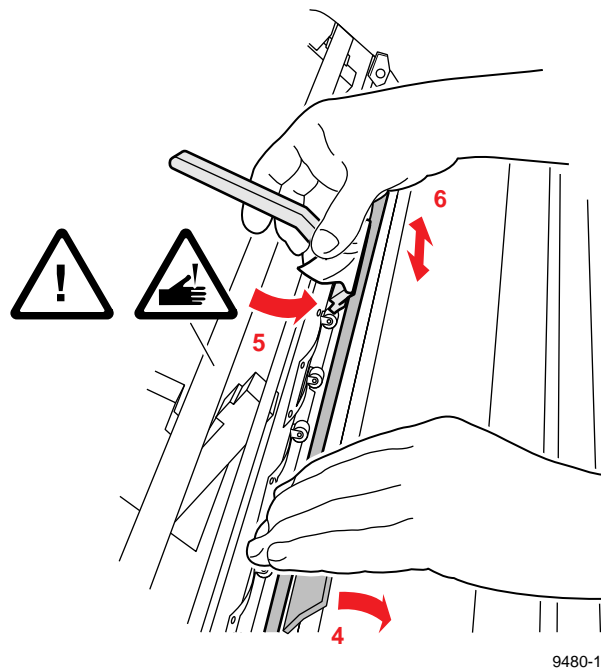3. Pull forward on the back tension blade's blue handle and hold it in that position; this lifts the blade away from the drum.
4. “Hook” the tool under the blade; it notches onto the rail to serve as a guide, cleaning the front and back of the blade at the same time.
5. Clean one section of the blade by wiping back and forth 3-4 times with pressure.
6. Switch hands to clean the other end of the blade.




Note If the blade is especially dirty, you may need to add more alcohol to the lint-free cloth or use a new cloth.

Cleaning the paper clamp

Caution Make sure that you have set the printer's front panel to **Clean Clamp**; this allows easy access to the parts of the printer that need to be cleaned.

1. Using a lint-free cloth that has been moistened with 90% pure isopropyl alcohol and inserted into the cleaning tool, place the "V" opening of the tool over the paper clamp.
2. Clean the blade by wiping back and forth 3-4 times with gentle pressure. Clean a small section at a time and repeat the process until the entire blade is clean.

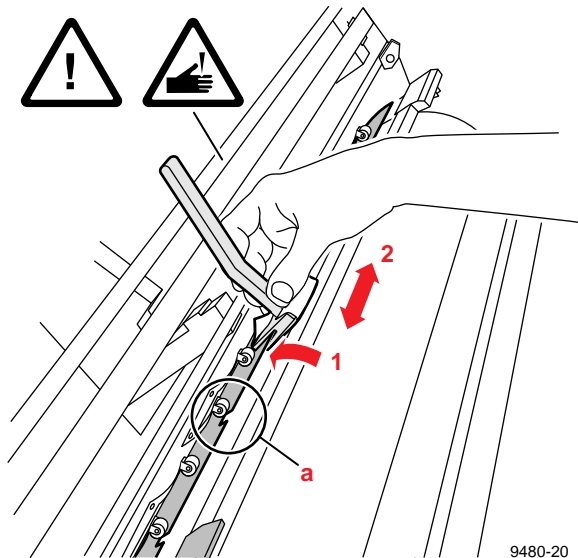Note The paper clamp is more flexible than the back tension blade; when cleaning the blade, do not use as much pressure as in the previous procedure.



9480-20

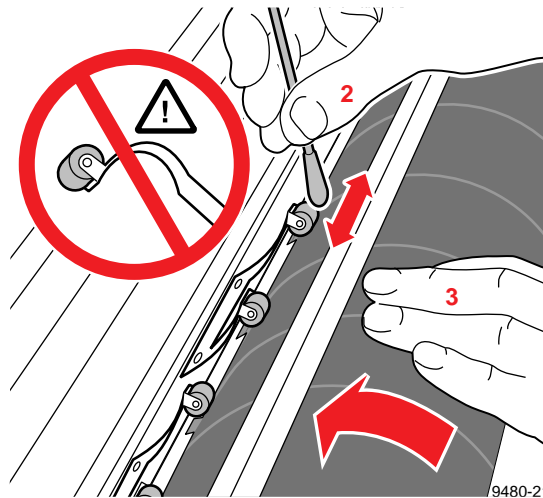
Clamp rollers

The 14 clamp rollers are located behind the drum. Clean them after you have used approximately 500 large-size prints such as ANSI E, Arch E, ISO A0 or JIS B1.

1. Use a foam swab from the cleaning kit that has been moistened with 90% pure isopropyl alcohol.
2. Rotate the drum to rotate the clamp rollers, cleaning each roller with the swab.

Caution Do not pull the rollers away from the drum. The metal that attaches it to the printer is very flexible and can be permanently bent.

3. Repeat Step 2 for each of the 14 rollers.



Fuser shuttle and exit rollers

When you notice streaks parallel to the direction of fusing in the prints, you can do the following:

- Clean the fuser shuttle and clean or replace its components
- Clean the exit rollers

The fuser kit contains these replaceable parts:

1. **2 foam oiler wheels**
Replace when you notice ink buildup on the fuser wheel.
2. **2 fuser wheels**
Replace after printing 500-600 large-size prints such as ANSI E, Arch E, ISO A0 or JIS B1.
3. **2 cutters**
Replace if paper cuts appear jagged

Setting the front panel

1. On the printer's front panel, press the **Menu** button; the printer displays this message:

```
Help Pages
<----      ---->      Menu
```

2. Press the arrow button (--->) until you see this message:

```
Utilities
<----      ---->      Menu
```

3. Press the **Menu** button; the printer displays this message:

```
Test Print
<----      ---->      Menu
```

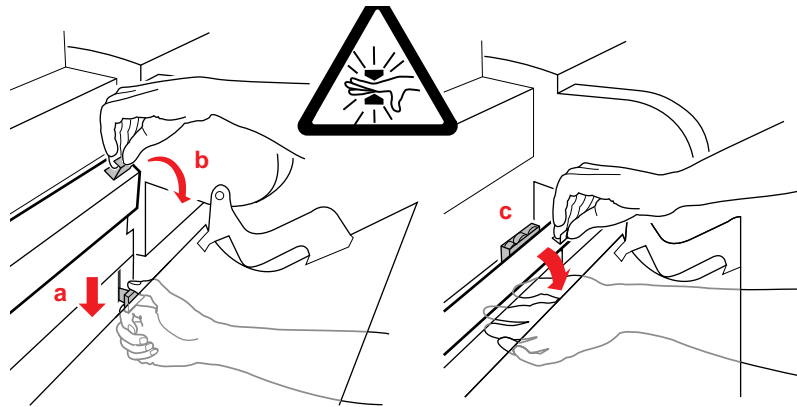
4. Press the arrow button until you see this message:

```
Change Fuser or Cutter
<----      ---->      Select
```

5. Press the **Select** button. This moves the fuser shuttle to the right side of the printer for easy access.
6. The front panel displays: Open Top Cover.


Exposing the fuser shuttle

1. Open the paper roll cover.
2. Remove the paper roll.
3. Open the exit cover:
 - a. Push the blue lever (on the lower right side of the printer, the side closest to the front panel) **DOWN**.
 - b. Hold the exit cover and rotate it down.
 - c. The fuser shuttle is visible on the far right inside the printer.




Removing the fuser's components

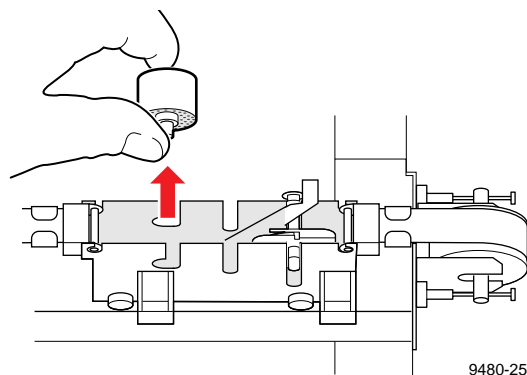1. Remove the foam oiler wheel by lifting it out of the printer.



9480-25

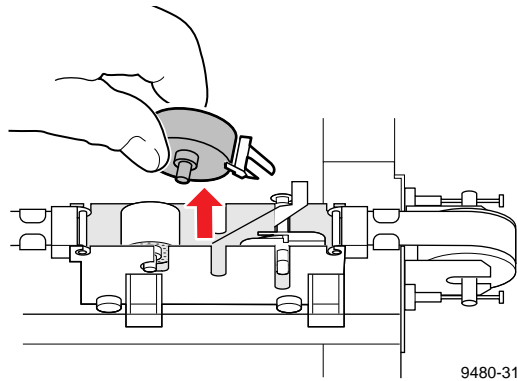
2. Remove the fuser wheel.



3. Remove the cutter:

Warning *The cutter blade is sharp. To avoid injury, always handle it by its shaft or yellow protective cover.*

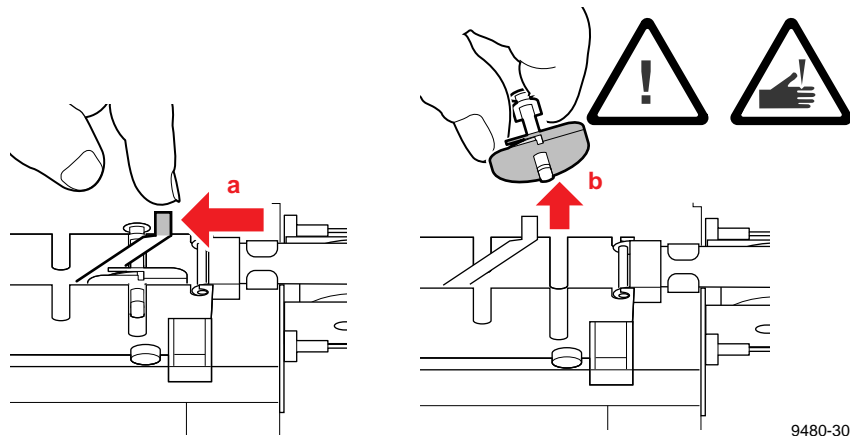
- a. Slide the lever on the cutter to unlock it.
- b. Lift the cutter out of the printer.




4. If you are replacing the fuser's components, dispose of the old components as normal office waste.

Cleaning the fuser shuttle

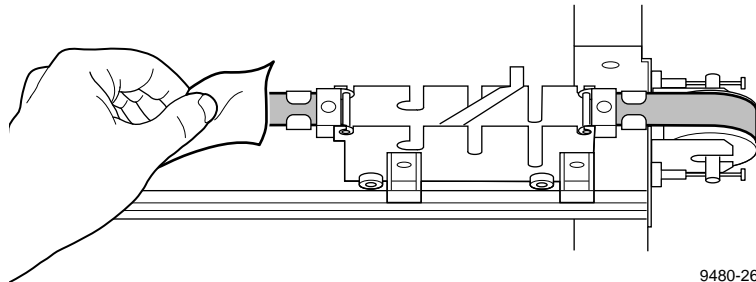1. If you have a small vacuum, use it to remove the paper dust.
2. Clean the fuser belt (near the foam oiler wheel) with a lint-free cloth.




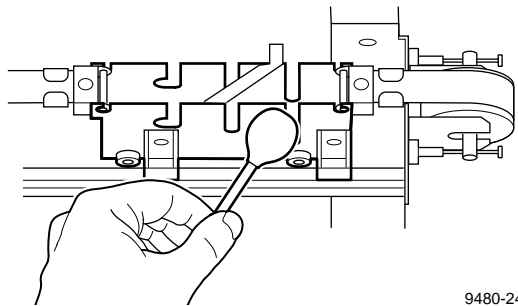3. Wipe the fuser shuttle with a foam swab that has been moistened with 90% isopropyl alcohol.



Caution Be careful not to get any alcohol on the front and rear rails of the fuser shuttle. It is oiled for smooth travel and the alcohol will remove the lubricant.

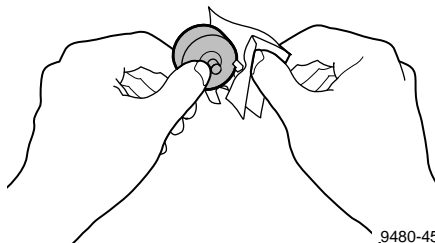
4. If you are *not* replacing the fuser wheel, wipe it with a *dry*, lint-free cloth.




Cleaning the shuttle rails and exit rollers

Clean the exit rollers and shuttle rails whenever you clean the fuser shuttle or replace its components.

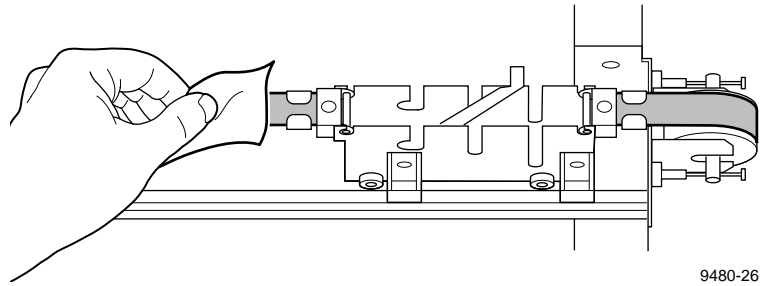1. Using a dry, lint-free cloth, wipe the shuttle rail and the “shelf” under the rubber belt. Remove all oil, wax, and dust.



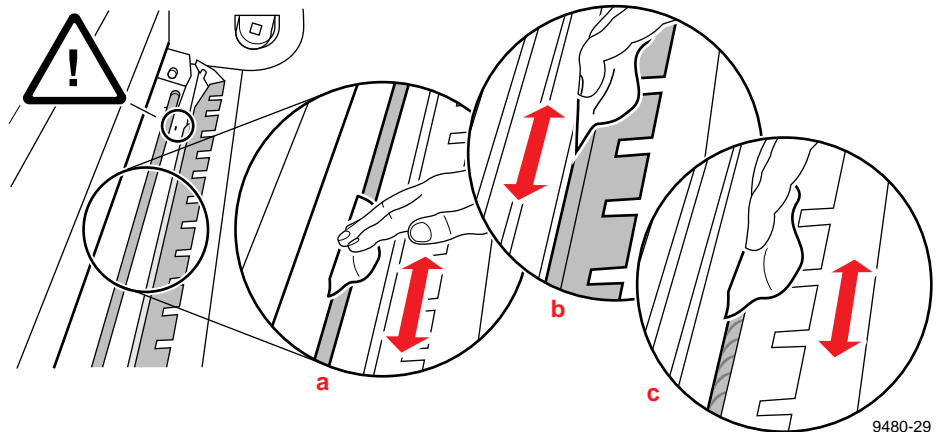
2. Using an alcohol-moistened lint-free cloth, clean these parts:
 - a. Wipe the metal exit roller thoroughly to remove any chaff build-up; turn the roller to clean its entire surface.
 - b. Wipe the metal “teeth” to remove dust and ink.
 - c. Wipe the rubber exit roller thoroughly; turn the roller to clean its entire surface.



Inserting the fuser's components


Whether you are inserting new components or re-inserting the existing ones, follow these steps:

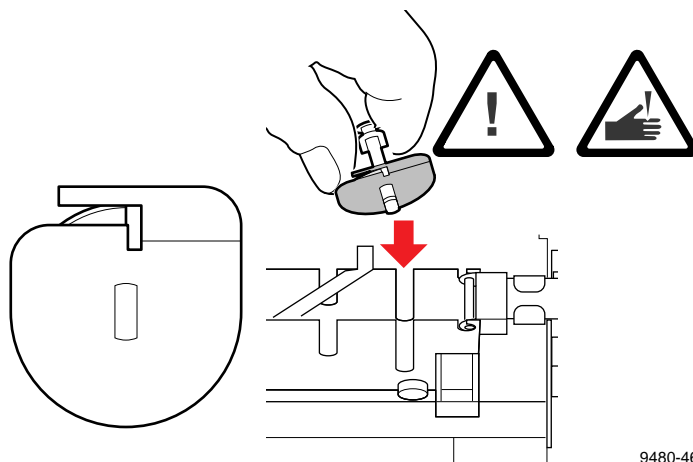1. Inserting the cutter blade into its slot on the fuser shuttle, making sure that the exposed blade is facing up, as shown:




9480-46

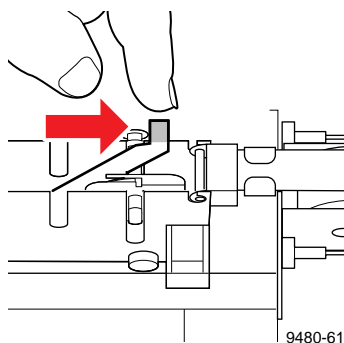2. Secure the cutter by sliding the locking lever.




9480-61

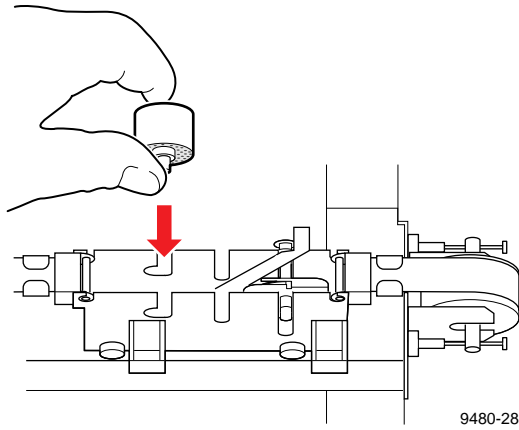3. Insert the foam oiler wheel into its slot on the fuser shuttle.



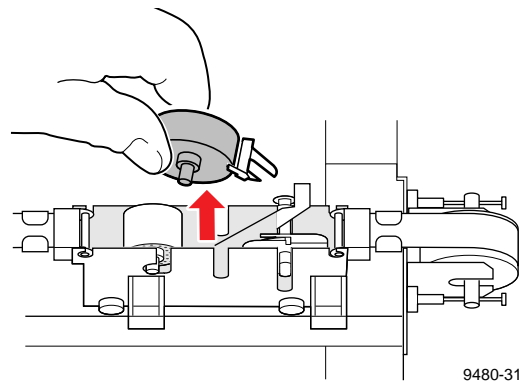
4. Insert the fuser wheel into its slot on the fuser shuttle.



Clearing an ink jam

If an ink stick falls over in the loader

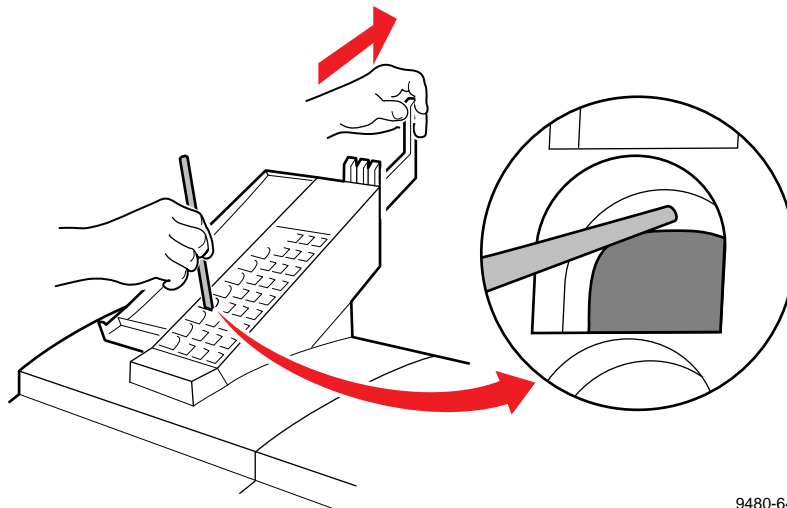
- Slide the keyplate up to reveal the ink sticks.
- Raise the slider of the affected ink stick.
- Use a pen or pen-like object to insert into opening and rotate the ink stick to the “up” position.



9480-64

If an ink stick doesn't drop completely

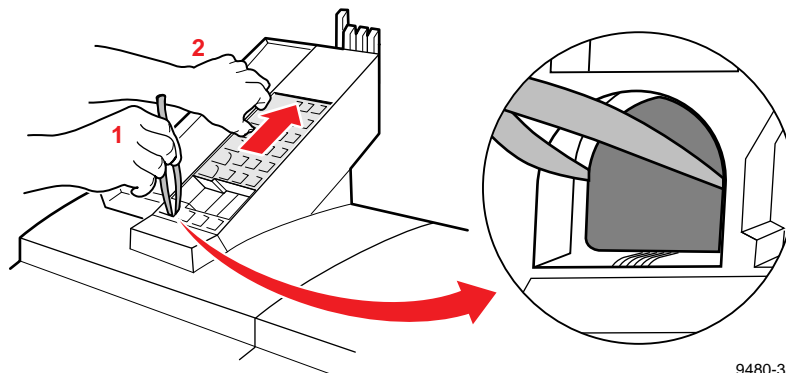- Use tweezers to pull the ink stick out of the printhead *or* use a pen or pen-like object to push the ink stick into the printhead.



9480-33

Cleaning the printhead and head wiper

If your prints have missing dots in a vertical row or a missing horizontal line, first clean the printhead, using the front panel menu function:

1. Press the **Menu** button on the front panel.
2. Press an arrow button (--->) until the front panel displays this message:

```
Utilities
<---  --->  Menu
```

3. Press the **Menu** button.
4. Press an arrow button until the front panel displays this message:

```
Clean Head
<---  --->  Select
```

5. Press the **Select** button.
6. Press an arrow button until you see this message:

```
Test Print
<---  --->  Print
```

7. Press the **Print** button; the Test Print demonstrates the condition of the printhead jets.

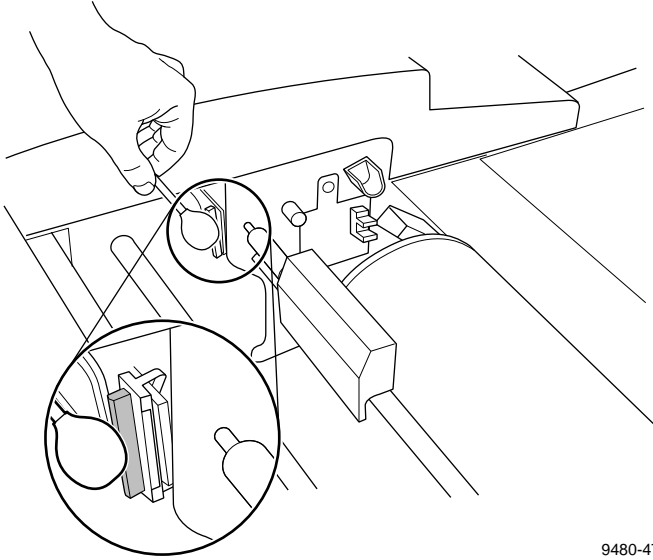
If this does not clear the problem, clean the head wiper manually, using the following procedure:

1. Make sure that the Ready message appears in the front panel; then open the top cover.

Warning *The printhead is hot. Do not touch it.*

2. Use an alcohol-dampened swab to clean the head wiper.

Caution *Never scrape the head wiper with a tool or your fingertip because you could damage it. Clean the head wiper with an alcohol-dampened swab only.*



9480-47

3. Close the top cover.
4. Make a test print from the front panel.
5. If the problem does not clear, replace the printhead.

Repacking and moving the printer

Before you begin

1. Empty the waste bin as described below; then turn the printer off.
2. Let the printer cool down for 7 minutes before you move it so that the ink has time to solidify.

Cables and media

1. Remove the power cord and any network cables.
2. Open the paper cover and lift out the paper roll.
3. Remove the paper roll from the holder and repack the paper roll in its original shipping box.
4. Re-insert the empty paper roll holder into the printer; close the paper cover.

Ink loader

1. Open the ink loader cover and remove any unused ink sticks.
2. Use an alcohol swab to clean inside the ink loader.
3. Detach the ink loader from the printer and repack it in its original shipping box.

Emptying the waste bin before moving the printer

The printer locks the waste bin in place until it needs emptying. However, you can use the **Utilities — Unlock Waste Bin** menu item to unlock the waste bin so that you can empty it before the front panel message prompts you to do so.

1. When the printer is on and the Ready message appears in the front panel, access the Utilities menu by pressing the **Menu** button, then an arrow button until you see this message:

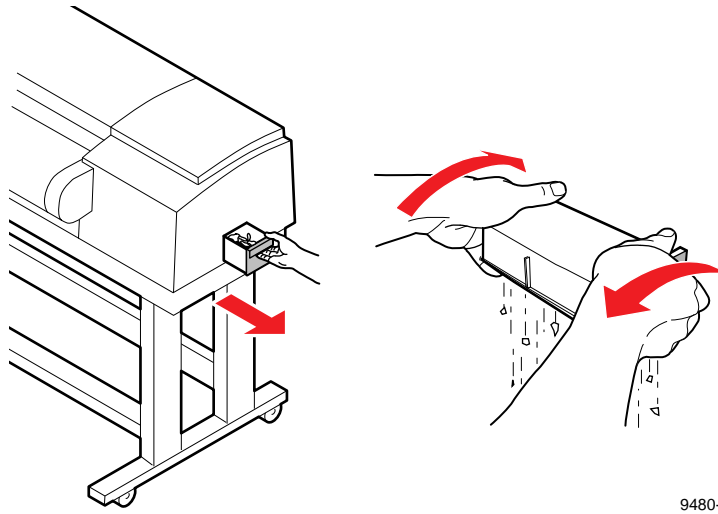
```
Utilities
<---    --->    Menu
```

2. Press the **Menu** button.
3. Press an arrow button until you see this message:

```
Unlock Waste Bin
<---    --->    Select
```

4. Press the **Select** button to unlock the waste bin.

5. Empty the waste bin, then re-insert it into the printer.



9480-13

6. Press the exit button on the front panel until the Ready message appears in the display.
7. Turn off the printer.

Clean-up

1. Wipe off any dirt, dust, or oil in and around the printer.
2. Close all doors and secure them with adhesive tape.
3. Repack any other accessories in the original Tektronix shipping box(es).

Repack the printer

4. Re-insert the shipping block (printhead restraint) to secure the printhead. Reverse the steps shown in the illustration “Removing the shipping block” on page 2-11.
5. Detract the leveling legs under the printer; this allows clearance for the printer to move freely on its wheels.
6. Attach the pallet ramps to the pallet.
7. Carefully guide the printer onto the pallet.

Warning *Because of its size and weight, always use two people to move the printer off or onto the ramps. Failure to do so may injure a person or damage the printer.*

8. Secure the printer to the pallet with the original packing materials.
9. Repack the printer in the original Tektronix shipping box.

Caution *To keep your warranty valid, you must first empty the waste bin, remove the ink sticks from the ink loader, detach the ink loader, replace the shipping block on the printhead, then ship the printer in its Tektronix shipping box with the appropriate packing materials. Call Tektronix at 1-800-835-6100 or call your nearest Tektronix dealer if you need a replacement box. Also, if you are returning the printer for service, call Tektronix or your nearest Tektronix dealer for a return authorization number.*

Inspection

Rollers: Replace the rollers when you see any of the following defects:

- Flat spots.
- Out of roundness.
- Cracked rubber.
- Loss of traction (tackiness) causing pick or feed failures.

Gears: Replace gears that show any signs of wear or breakage. Look for these problems:

- Thinned gear teeth.
- Bent or missing gear teeth; check especially where a metal gear drives a plastic gear.
- Fractured or cracked gears.

Belts: Inspect the belts for wear. There are nine rubber belts in the printer: Look for these problems:

- Loose rubber particles below the belts indicate a worn belt.
- Missing teeth in the belts.
- Cracking or moderate fraying; a small amount of fraying is inevitable, so look for other signs of wear before replacing the belt.

Lubrication

Tools and supplies required

- Light oil
- Grease 006-7997-00

In general, all of the printer's bearings and motors are lifetime factory-lubricated. However, over time and under certain extreme operating conditions, oil and grease may dry out, causing squeaks and rumbling noises in the printer. Look for fine metal particles — a clear sign of an old or worn bearing. Replace the bearing or the assembly it is a part of.

A drop of oil or grease on a noisy bushing will quiet a noisy printer. Too much lubrication can get into the paper path and attract dust, so apply lubrication sparingly.

Lubricate the following only when needed:

- **Bushings:** Apply a drop of light oil to a bushing if it is noisy or running dry.
- **Maintenance station cam gear:** This gear requires only a small amount of white grease for noise reduction purposes. Apply grease sparingly so that it does not fling off of the gears when they turn. You need only to apply a dab of grease to a single gear and the grease will migrate throughout the entire gear train.

Apply grease to the cam pin in the cam gear's pin groove.

- **White (nylon) plastic bearings and cams:** No lubrication required.

Field Replaceable Unit Disassembly/Assembly

Required tools

- Magnetic tip screwdriver — 8.5 in. 003-0293-00
- Magnetic tip screwdriver — 2 in.
 - Extension tip 003-1388-00
 - #1 POSIDRIV® tip 003-0335-00
 - #9 TORX® tip
- Flat-blade screwdriver
- Needle-nose pliers
- Phaser 600 Tool Kit 650-3531-00
- Tweezers 003-0236-00
- Tension scale 003-0762-00
- Head-to-media spring tool 003-1491-00
- Test pattern generator 067-1433-99
- Rheolube grease (gears) 006-2037-00
- Velocite 10 Lubricating Oil (rails) 006-7056-00
- Anti-static mat 006-7056-00
- Replacement cable ties 343-0549-00
- Volt-ohm-meter such as a Tektronix DM252/4 Multimeter
- Magnifying lens such as Micronta (Radio Shack) Cat# 63-851
- Metric Allen (hex) wrenches

Printer cabinet

Tools required

■ 4 mm hex wrench

■ #1 POSIDRIV® screwdriver

Roll cover

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the roll cover and remove the media roll.
3. With a 4 mm hex wrench, remove the two screws and their standoff posts, one at each end of the cover, securing the cover to the printer frame. Note that the right standoff features a shoulder to correctly align the roll cover to the printer frame.

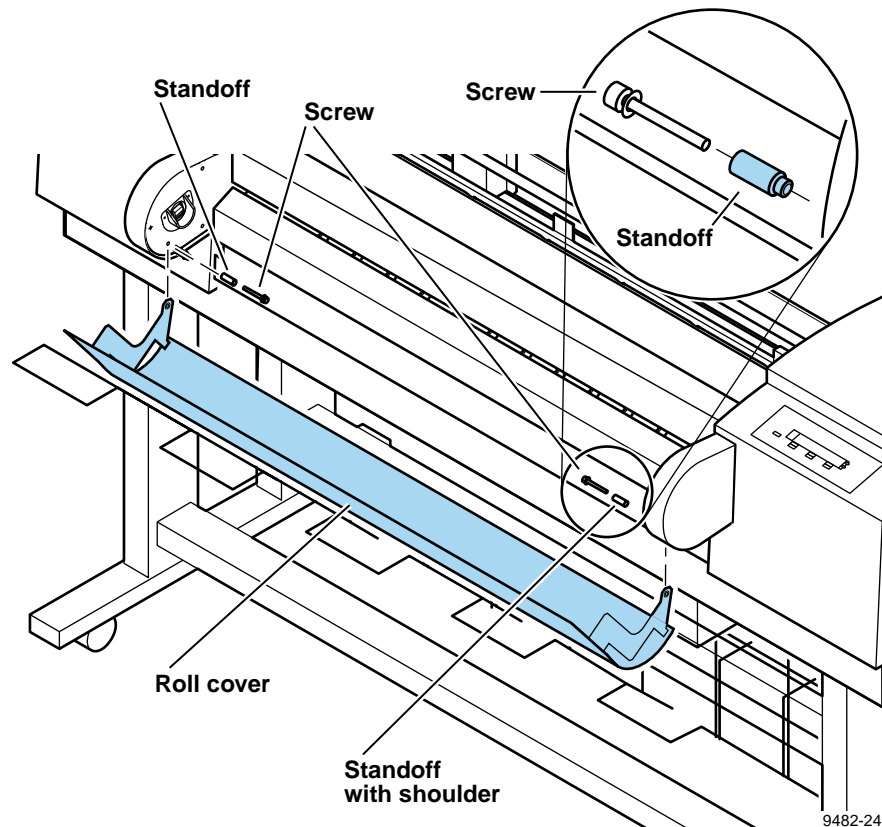


Figure 8-1 Removing the roll cover

Reverse these steps to reinstall the roll cover. Support the weight of the cover while you thread the screws into the printer frame.

Left cover

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove all the ink sticks from the ink loader.
3. At the rear of the ink loader, remove the screw securing the ink loader to the printer cabinet. Lift and remove the ink loader.
4. Remove the three screws securing the left roll cover end cap. Remove the end cap.
5. Remove the four screws securing the left cover in place. Spread the bottom of the cover and lift to remove it.

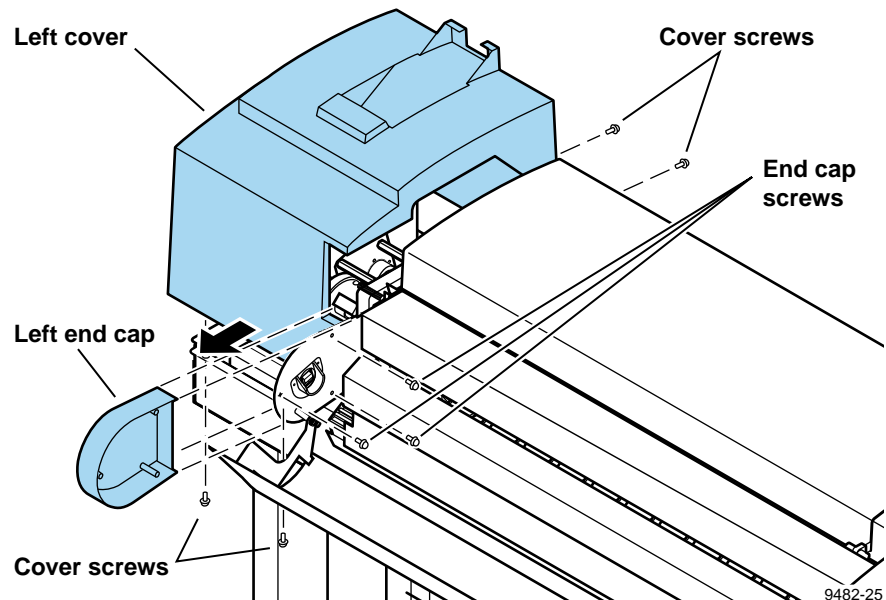



Figure 8-2 Removing the left cover

Reverse these steps to reinstall the left cover.

Right cover

1. Remove the waste bin using the menu item **Utilities — Unlock Waste Bin**.
2. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
3. Remove the three screws securing the right roll cover end cap. Remove the end cap.
4. Remove the four screws securing the right cover in place. Spread the bottom of the cover and lift to remove it.
5. With the cover raised, disconnect the front panel ribbon cable from the front panel on the inside of the right cover. Also, free the ribbon cable from the inside of the right cover.

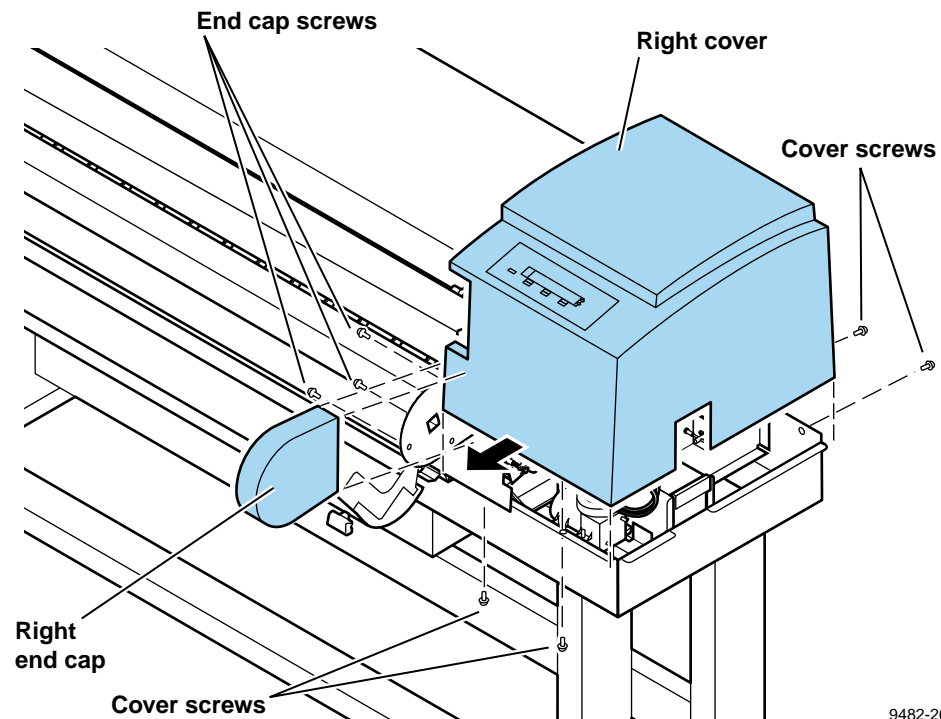Note *The ribbon cable features enough extra length to remain connected to the front panel while the right cover is removed to assist troubleshooting the printer.*



9482-26

Figure 8-3 Removing the right cover

Reverse these steps to reinstall the right cover.

Top cover

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the top cover.
3. Remove the inner plate (9 screws) from the inside of the top cover.
4. Disconnect the ribbon cable from the top cover's interconnect board.
5. Close the top cover.
6. At the rear of the printer remove the rear plate held in place by 10 screws.
7. Remove the four screws securing each top cover hinge to the printer frame. Unlatch the top cover. Lift and remove the top cover.

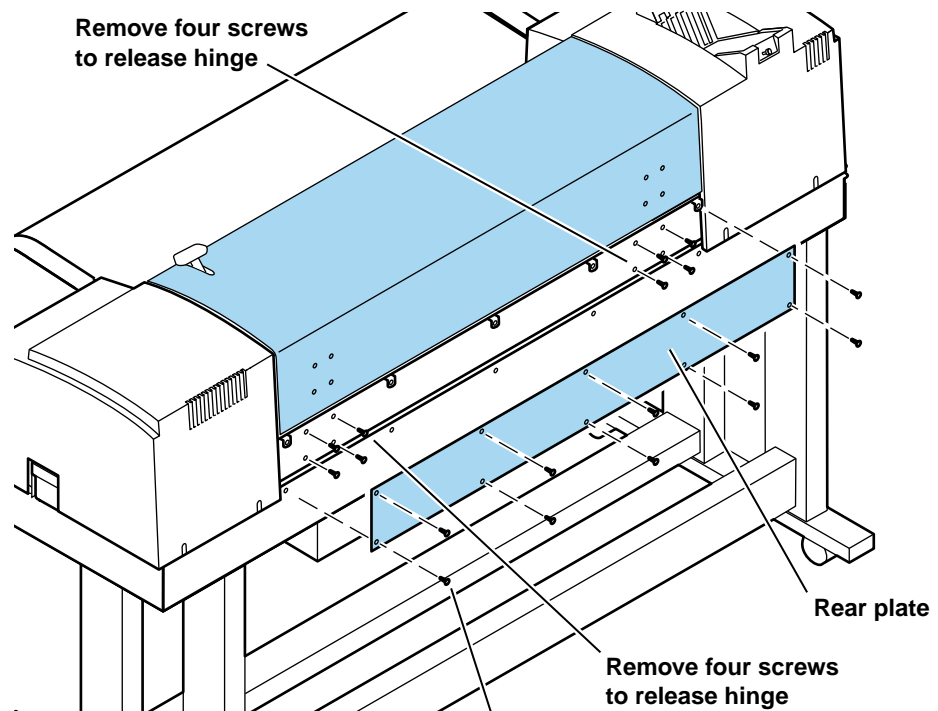


Figure 8-4 Removing the top cover

Reverse these steps to reinstall the top cover. Make sure the cover open switch "clicks" before the top cover is about 1 cm (0.3 in.) from shutting.

Motors

Fuser motor

Tools required

- #1 POSIDRIV® screwdriver
- 3 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier procedure, “Left cover” on page 8-3.
3. At the left end of the printer frame, disconnect the fuser motor’s wiring harness.
4. With a hex wrench remove the two screws securing the fuser motor to its bracket. Free the fuser motor’s drive belt and remove the motor.

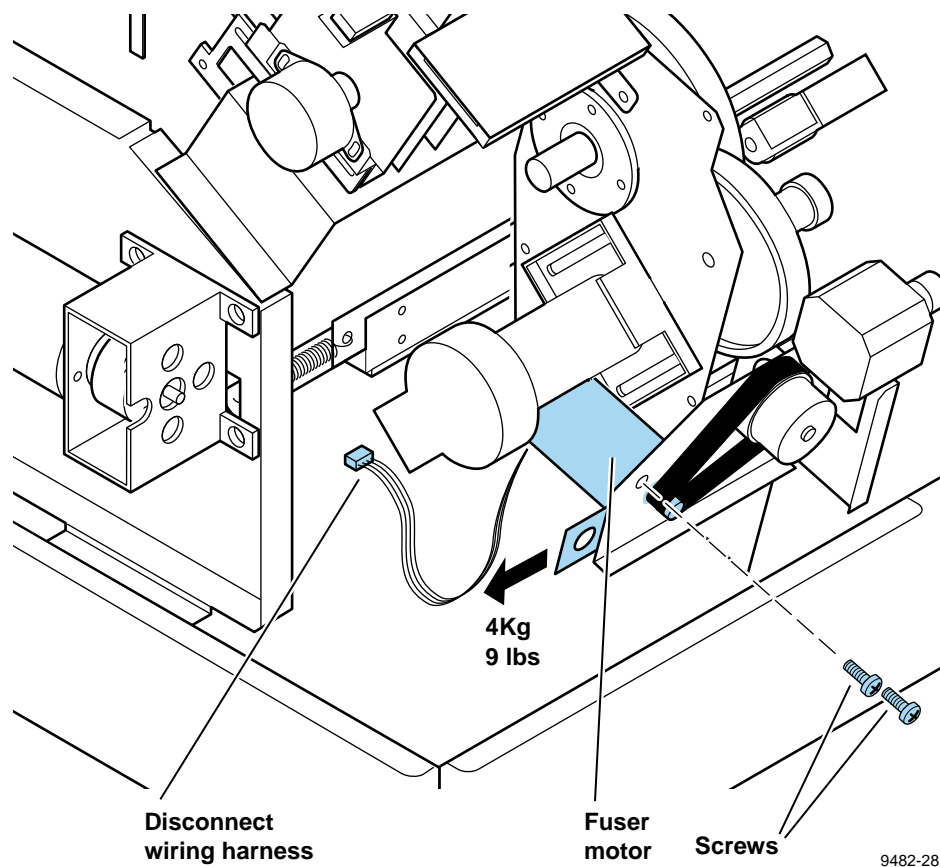


Figure 8-5 Removing the fuser motor

Reverse these steps to install the fuser motor. Tension the fuser motor belt to 4 kgs (9 lbs) as detailed in the Chapter 9 topic, “Fuser belt tension” on page 9-6.

X-axis (printhead) motor and X-axis belt

Tools required

- #1 POSIDRIV® screwdriver
- Flat blade screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.
3. Remove the left cover as explained in the earlier procedure, "Left cover" on page 8-3.
4. At the right end of the printer frame, loosen the printhead belt tension screws.


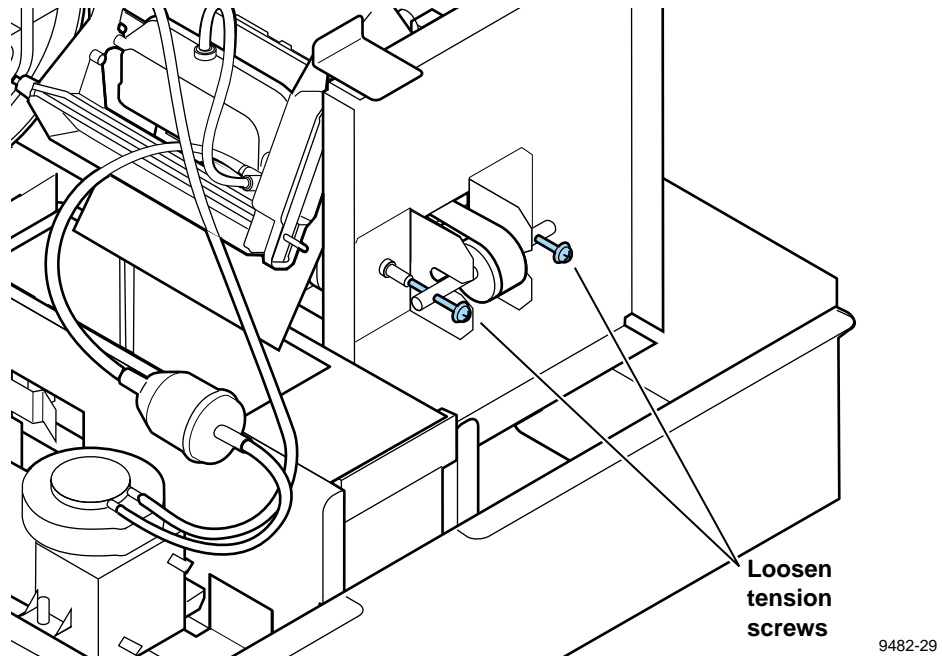


Figure 8-6 Loosening the printhead belt

X-axis motor

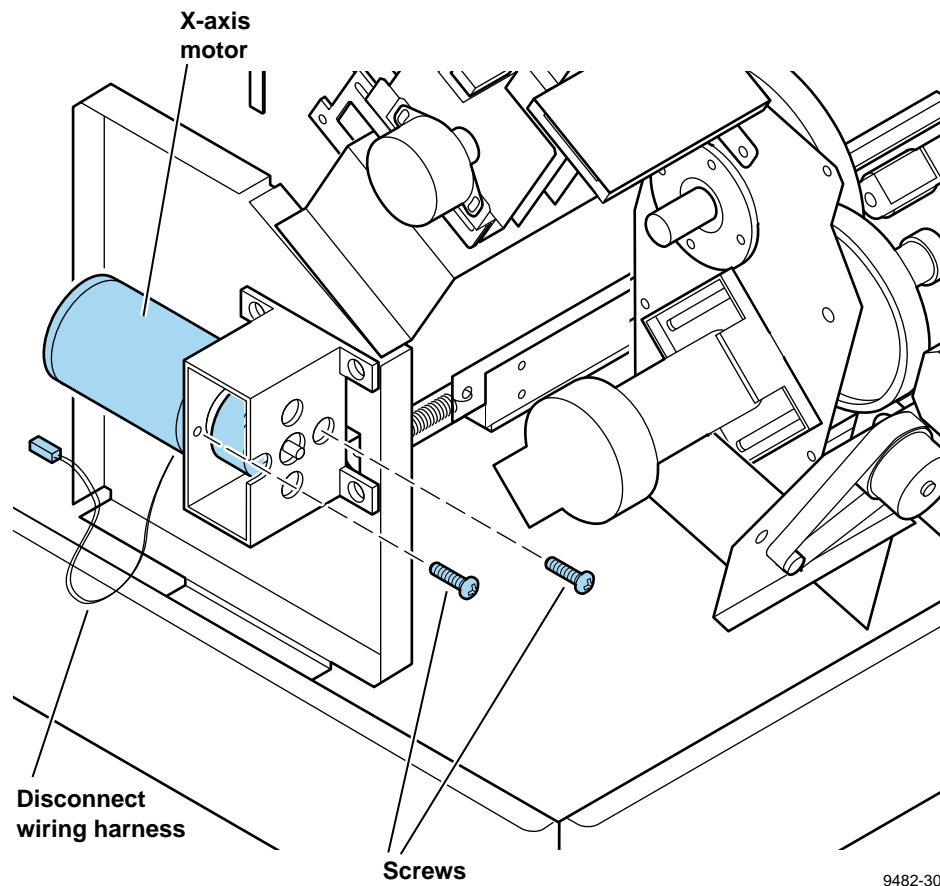5. Disconnect the X-axis motor's wiring harness.
6. At the left end of the printer frame, remove the two screws securing the X-axis motor to its bracket. Remove the motor.



9482-30

Figure 8-7 Removing the X-axis (printhead) motor

X-axis (printhead) belt

7. Remove the two screws securing each end of the X-axis belt to the carriage board.

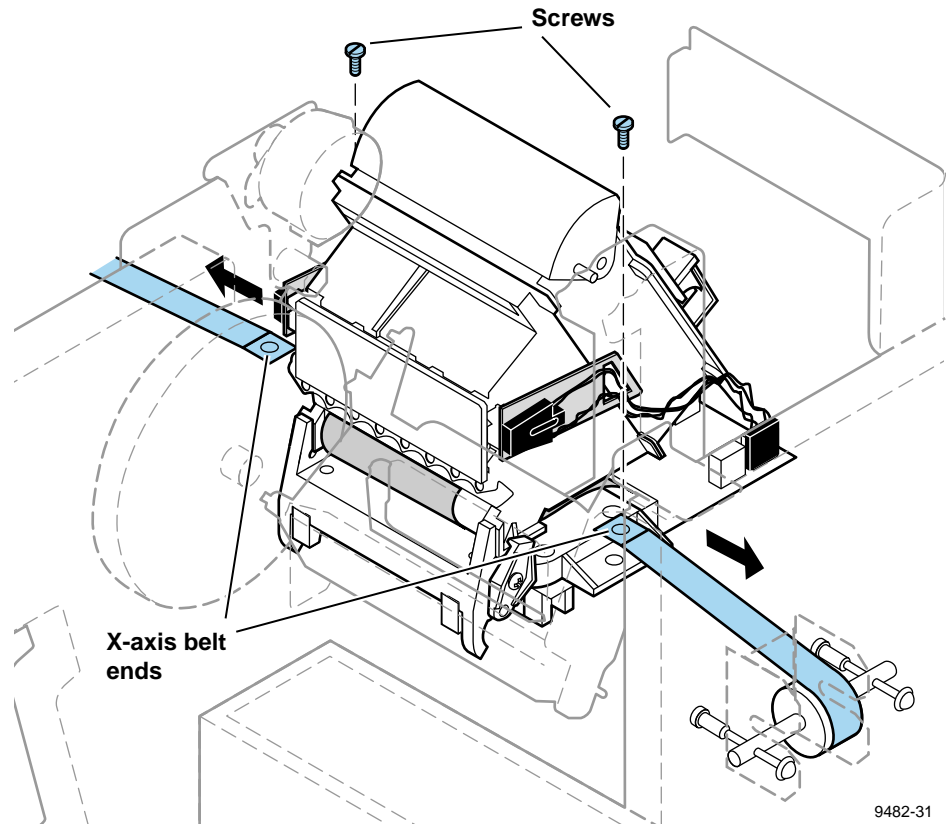


Figure 8-8 Removing the X-axis (printhead) belt

8. Carefully free the X-axis belt from the X-axis belt pulleys and remove the belt.

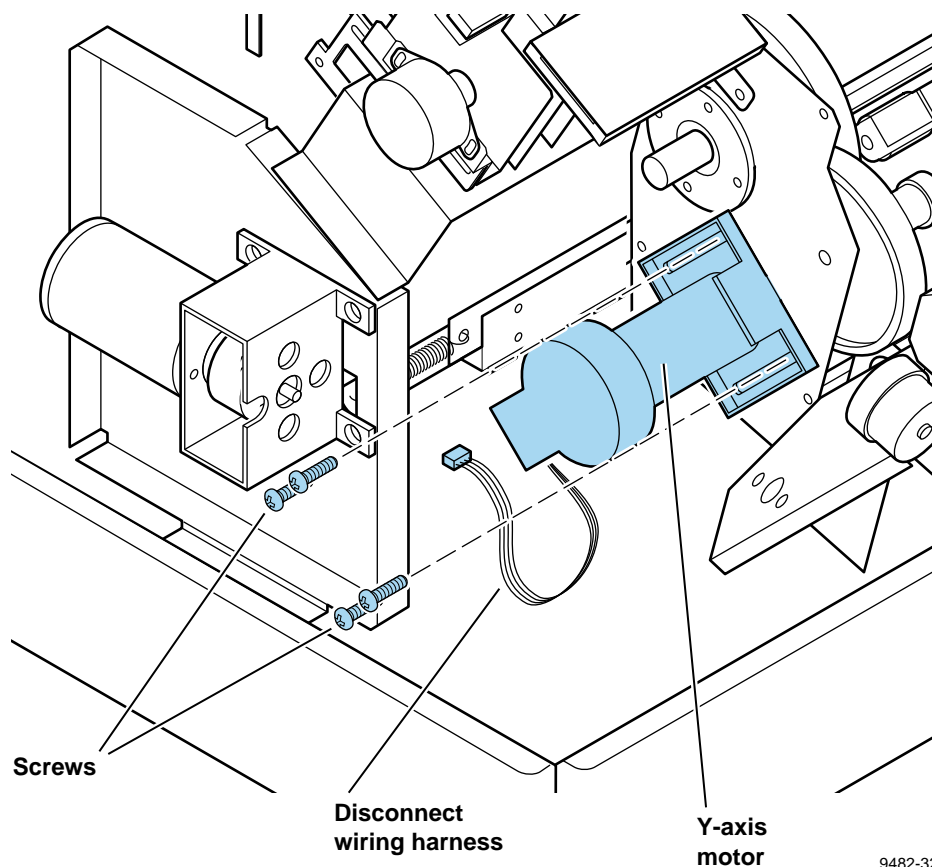
Reverse these steps to reinstall the motor and belt. Refer to the Chapter 9 topic, "Printhead belt tension" on page 9-5 for details on correctly setting the printhead belt's tension.

Y-axis (drum) motor and belts

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier procedure, "Left cover" on page 8-3.
3. Remove the fuser motor as described in the earlier procedure, "Fuser motor" on page 8-6.
4. Disconnect the wiring harness.
5. At the left end of the printer, remove the four screws securing the Y-axis motor bracket to the printer frame. Remove the motor and bracket.




9482-32

Figure 8-9 Removing the Y-axis (drum) motor

Y-axis motor belt and Y-axis drum drive belt

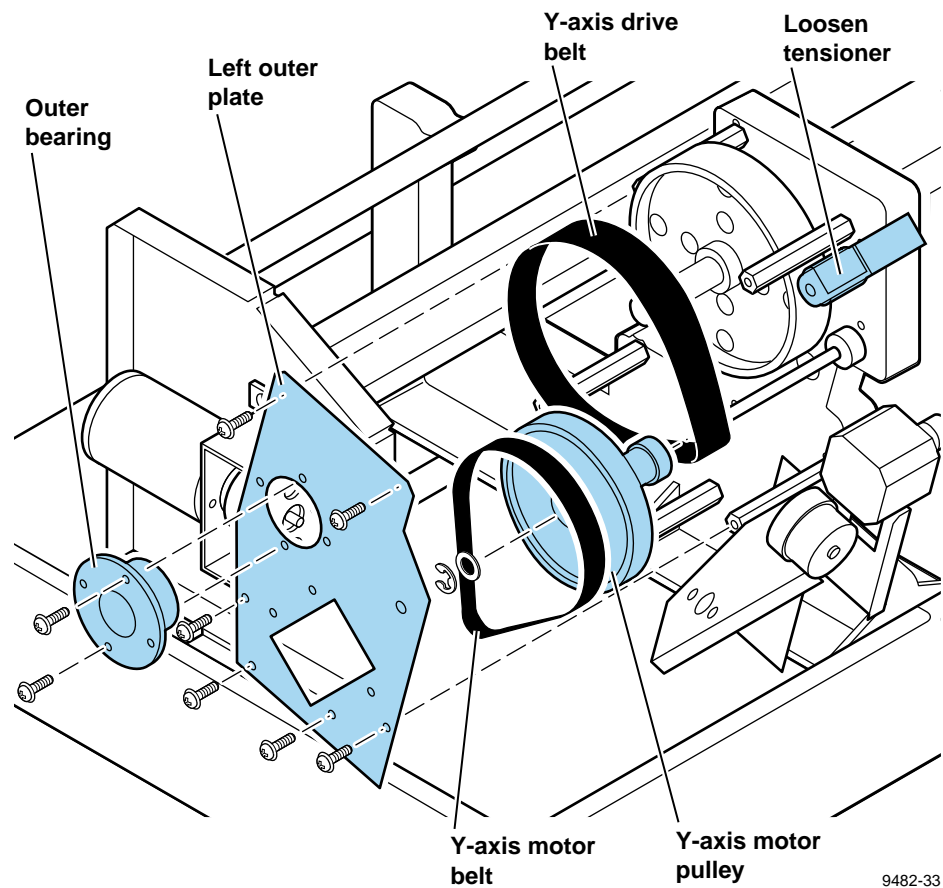6. Loosen the Y-axis drum drive belt tensioner.
7. Remove the outer drum bearing on the left end of the drum shaft. The bearing is held in place by two screws.
8. Remove the screws securing the outer plate of the left drum frame. The screws secure the outer plate to the six frame standoffs. Remove the plate.
9. Remove the E-ring securing the Y-axis motor pulley to its shaft. Slide the Y-axis motor belt off of the Y-axis drive gear. Slide the Y-axis motor pulley and the Y-axis drive belt off the pulley shaft.



9482-33

Figure 8-10 Removing the drum's left outer plate, outer bearing Y-axis motor pulley and Y-axis belts

Reverse these steps to install the Y-axis motor. Tension the Y-motor belts to 5 kgs (11 lbs) as detailed in the Chapter 9 topic, "Y-axis motor belt and drum belt tension" on page 9-7.

Head-to-media motor and belt

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the top cover.
3. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.
4. Disconnect the head-to-media motor's wiring harness from the right junction board.
5. Remove the two screws securing the head-to-media motor. Remove the motor and belt.

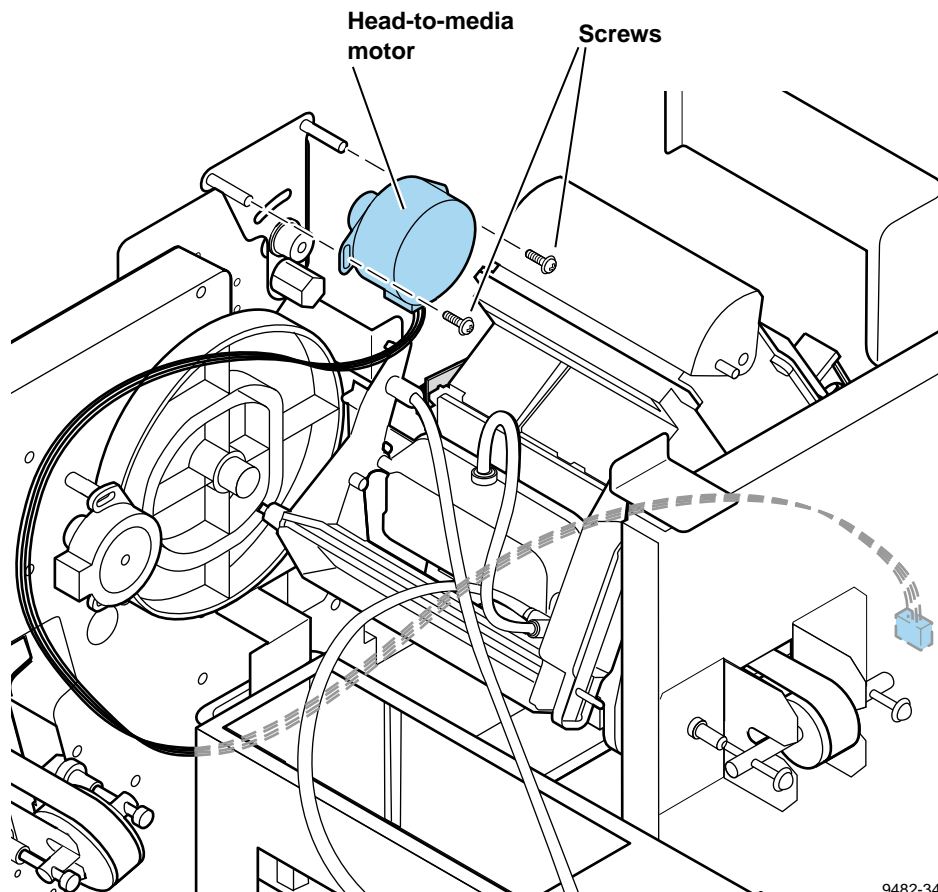


Figure 8-11 Removing the head-to-media motor

Reverse these steps to reinstall the motor.

Head maintenance cam gear motor

Tools required

- 2.5 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as explained in the earlier procedure “Right cover” on page 8-4.
3. Disconnect the head maintenance cam gear motor’s wiring harness from the right junction board.
4. Remove the two screws securing the head maintenance cam gear motor. Remove the motor.

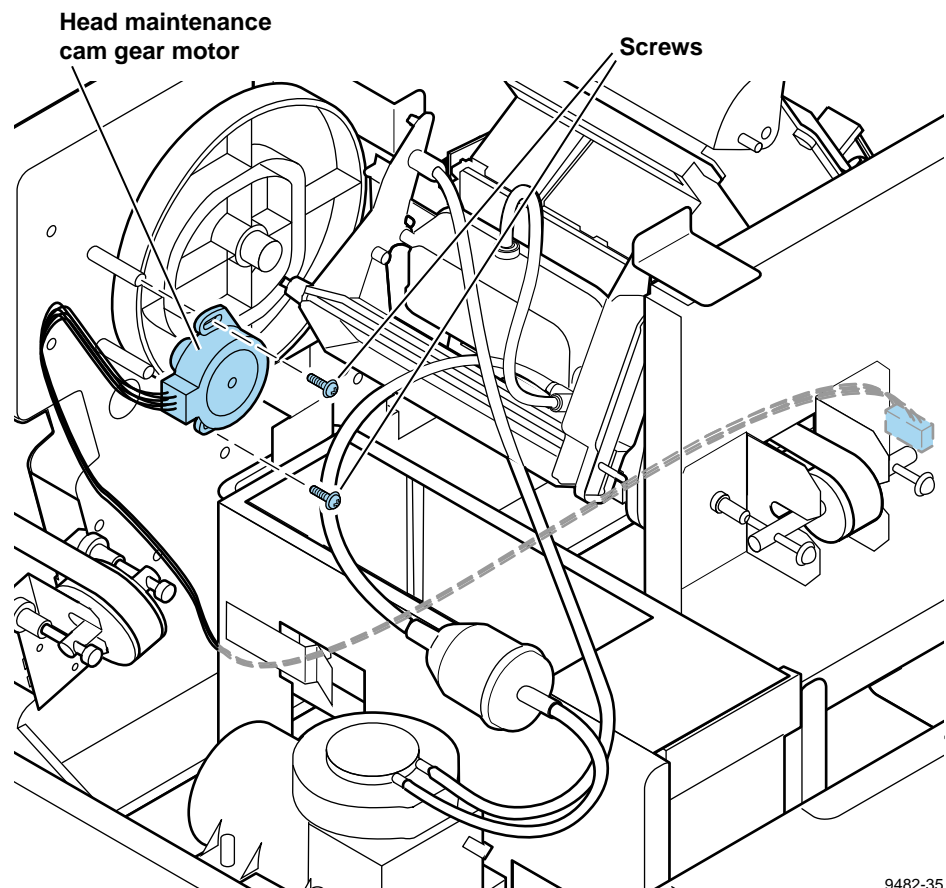


Figure 8-12 Removing the head maintenance cam gear motor

Printhead

Tools required

- #1 POSIDRIV® screwdriver

Removing the printhead

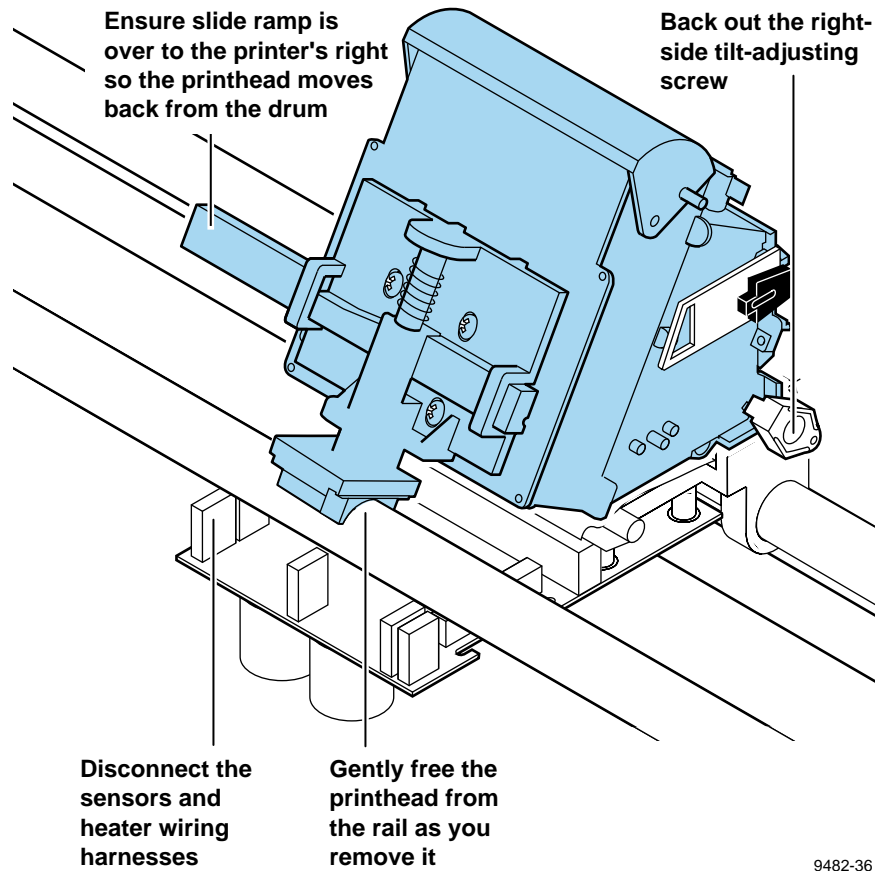
1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity. Allow the printhead to cool; this takes about 20 minutes.
2. Open the top cover.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.

Warning *The printhead is hot. To avoid injury, allow it to cool before handling it.*

4. Move the printhead tailpiece’s slide ramp to the printer’s right to tilt the printhead backward slightly.
5. Supporting the printhead carriage, disconnect the printhead’s sensor and heater wiring harnesses from the carriage board.
6. Loosen the right-side tilt-adjusting hex screw securing the printhead in place. Back out the screw and its tilt plate far enough to free the printhead. In order to not drastically alter the printhead tilt alignment, *do not loosen the left-side tilt-adjusting screw.*
7. Supporting the printhead, gently remove the printhead’s hybrid flex cable from its connector on the carriage board.

8. Tilt the printhead back and gently free it from the rear rail.

i



9482-36

Figure 8-13 Removing the printhead

Installing the printhead

1. Clean, and then apply a small amount of silicone grease to the two corners of the printhead where it mates to the printhead carriage; this smooths the tilt adjustment.

Note *Ensure that the oiler pad inside the carriage is oiled and in contact with the carriage rail so it can properly lubricate the rail during printing.*

2. Move the carriage to the center of the rails.
3. Cantilever the plastic printhead protector, that the replacement printhead is shipped with, between the center of the rear rail and the rear edge of the cabinet bottom.
4. Gently place the printhead in the plastic protector and on the rear rail with the printhead's faceplate facing the drum. Drape the printhead's hybrid cable over the lip of the plastic protector.
5. Supporting the carriage board, gently insert the hybrid cable into its connector on the carriage board.

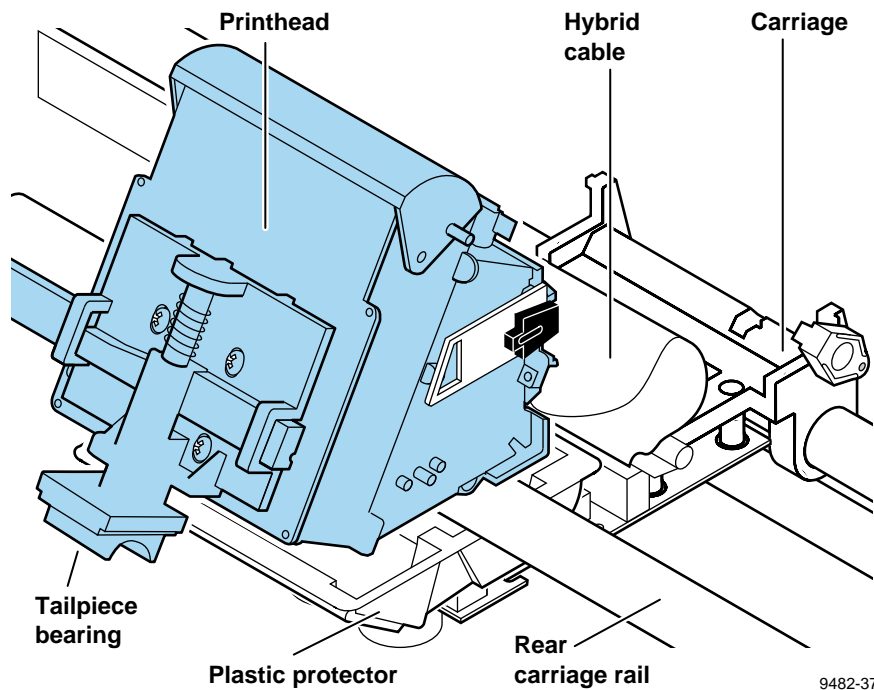


Figure 8-14 Connecting the printhead's hybrid cable

6. Pick up the printhead and remove the plastic protector from underneath. Position the printhead above the rear rail and press the printhead's (concaved shape) tailpiece bearing in place on the rail. Ensure the bearing is properly placed between the retaining ribs of the tailpiece.

Note Ensure the tailpiece's white bearing and its lubrication pad are properly positioned on the rail.

7. Gently lower the printhead onto the carriage. Center the printhead on the carriage and secure the printhead in place by tightening the right-side tilt adjusting hex screw to 6 in./lbs. (.68 Nm).

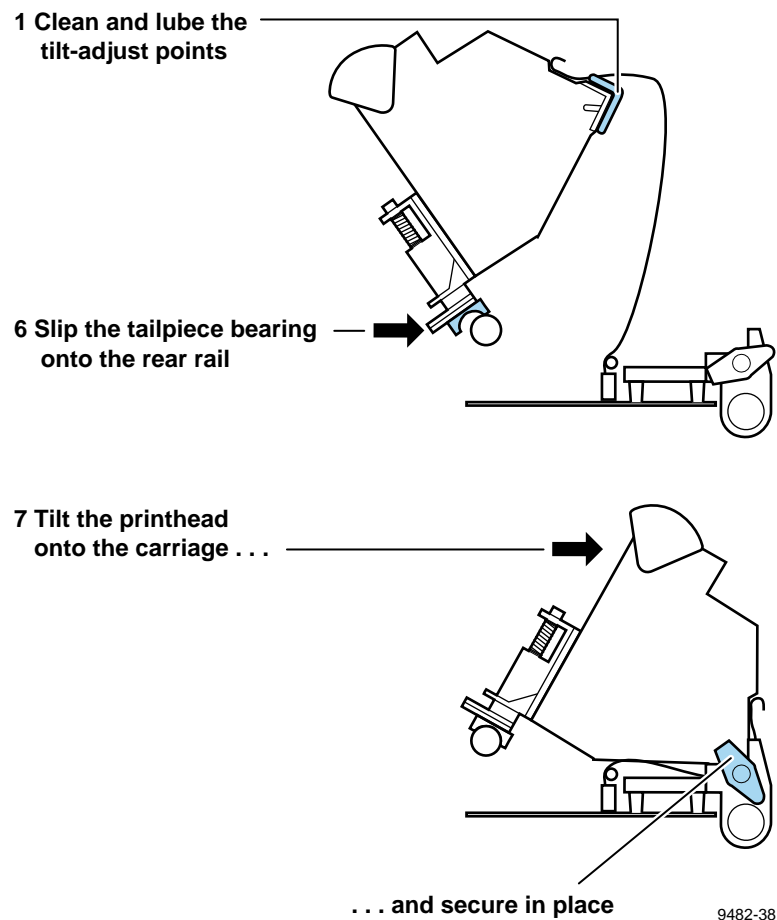


Figure 8-15 Installing the printhead

8. Plug in the printhead's two media edge (width) sensors and its heaters into their connectors on the carriage board.

Note Dress all printhead wiring harnesses so they do not contact the printhead rails or the printer chassis.

9. Push the tailpiece's slide ramp to the printer's right (so the printhead drops back from the drum). Slide the printhead to its home position.
10. **Initial cold adjustment.** Set the printhead back on its tailpiece by loosening all three tailpiece screws. This maximizes the spacing between the printhead and the back-tension blade and ensures the printhead does not strike the back-tension blade before the printhead's head-to-media spacing can be properly set.
11. Manually rotate the head-to-media motor to lower the shim to its lowest point, inside the head-to-media assembly, on the right end of the back-tension blade. To ease lowering the shim, pull back on the back tension blade, moving the blade away from the drum. The shim should extend 1 mm below the blade. Then back the shim up by rotating the stepper motor 2 steps.
12. Slide the printhead so it is centered in front of the "dimple" on the right end of the back-tension blade (refer to the illustration on page 9-16).
13. Install the head-to-media spring loader (refer to the illustration on page 9-17). Reset the tailpiece's slide ramp so it extends all the way the printhead's left (viewed from the front of the printer). Without pushing, lightly tighten the three tailpiece screws to secure the tailpiece's position.
14. Remove the spring loader and push the slide ramp to its extreme right (viewed from printer front). The printhead will tilt forward.
15. Slightly move the printhead to the printer's right to gain access to the tailpiece screws. Tighten the three tailpiece screws to 3.5 in./lbs. (0.40 Nm) starting with the upper-right screw and proceeding clockwise.
16. Perform the following "hot" adjustments. Refer to Chapter 9 for the appropriate procedure:
 - a. Set the temperature off set values to "0" or to match any value printed on the back of the printhead as described in the Chapter 9 topic "Temperature offset adjustment for a new printhead" on page 9-14.
 - a. Adjust the printhead drive voltages using the Chapter 9 procedure "Printhead drive voltage adjustment" on page 9-15.
 - b. Adjust the printhead's head-to-media spacing using the Chapter 9 procedure "Printhead-to-media adjustment (tailpiece adjustment)" on page 9-15.
 - c. Adjust for printhead tilt. Refer to the Chapter 9 topic "Tilt adjustment" on page 9-24.

- d. Adjust for bi-directional alignment using the Chapter 9 topic "Bi-directional print convergence" on page 9-21.
 - e. Adjust for temperature offset. Refer to the Chapter 9 topic "Temperature offset adjustment" on page 9-28.
 - f. Adjust the printhead's left and right edge-detection sensors using the PC-based diagnostics. Refer to the Chapter 9 topic "Sensor calibration" on page 9-30.
17. Use the PC-based diagnostics to zero the ink-stick usage count. Refer to the Chapter 6 topic, "PC-based diagnostics" on page 6-26.

Maintenance station

Tools required

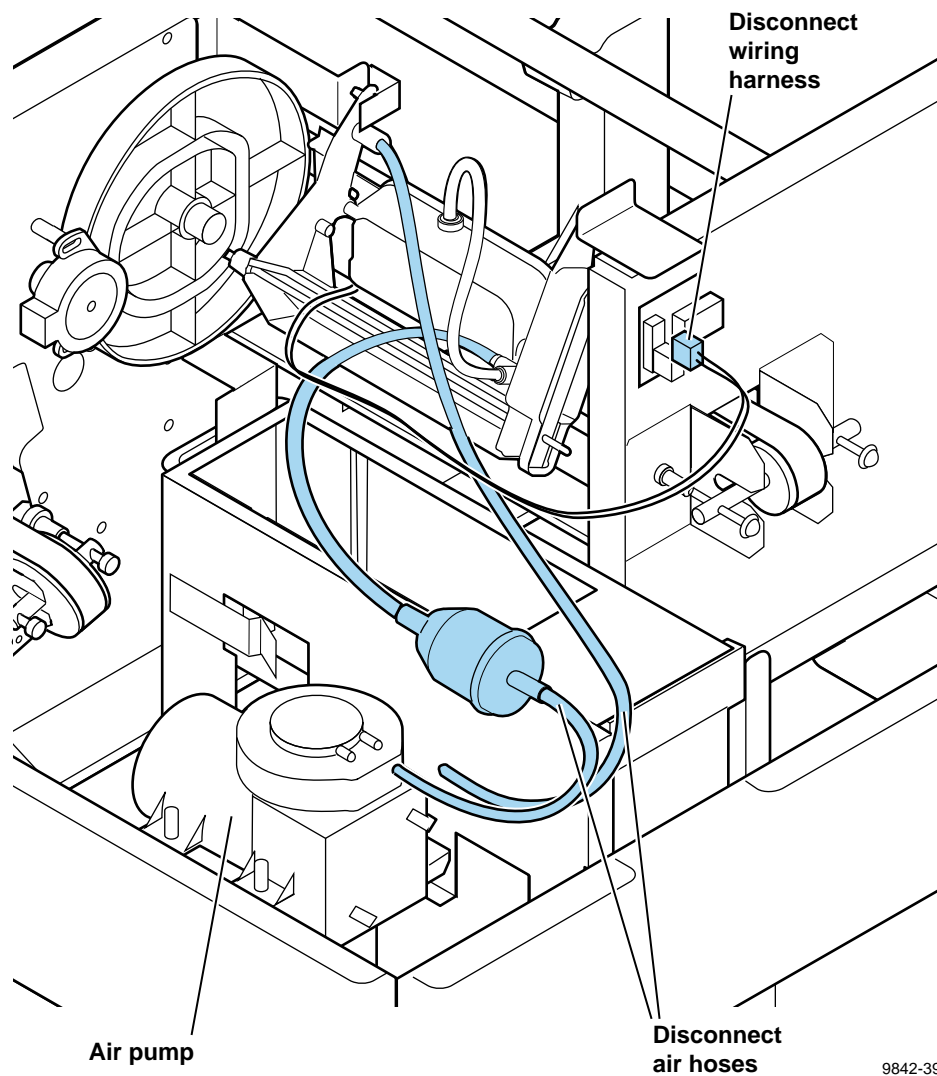
- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity. Allow the maintenance station to cool; this takes about 10 minutes.
2. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.

Warning *The printhead, maintenance station and drip plate may still be hot. To avoid injury, allow them to cool before touching them.*

3. Move the printhead to the left away from the printhead's home position.
4. Disconnect the air hoses from the air pump.

5. Disconnect the maintenance station wiring harness from the interconnect board on the side of the printer frame.




9842-39

Figure 8-16 Disconnecting the maintenance station

6. Remove the retainer holding the maintenance station's left pivot pin.
7. Unpin the left and right ends of the maintenance station. Release the maintenance station guide pin from the maintenance station cam gear. Remove the maintenance station; pull out the air hoses and wiring harness with it.

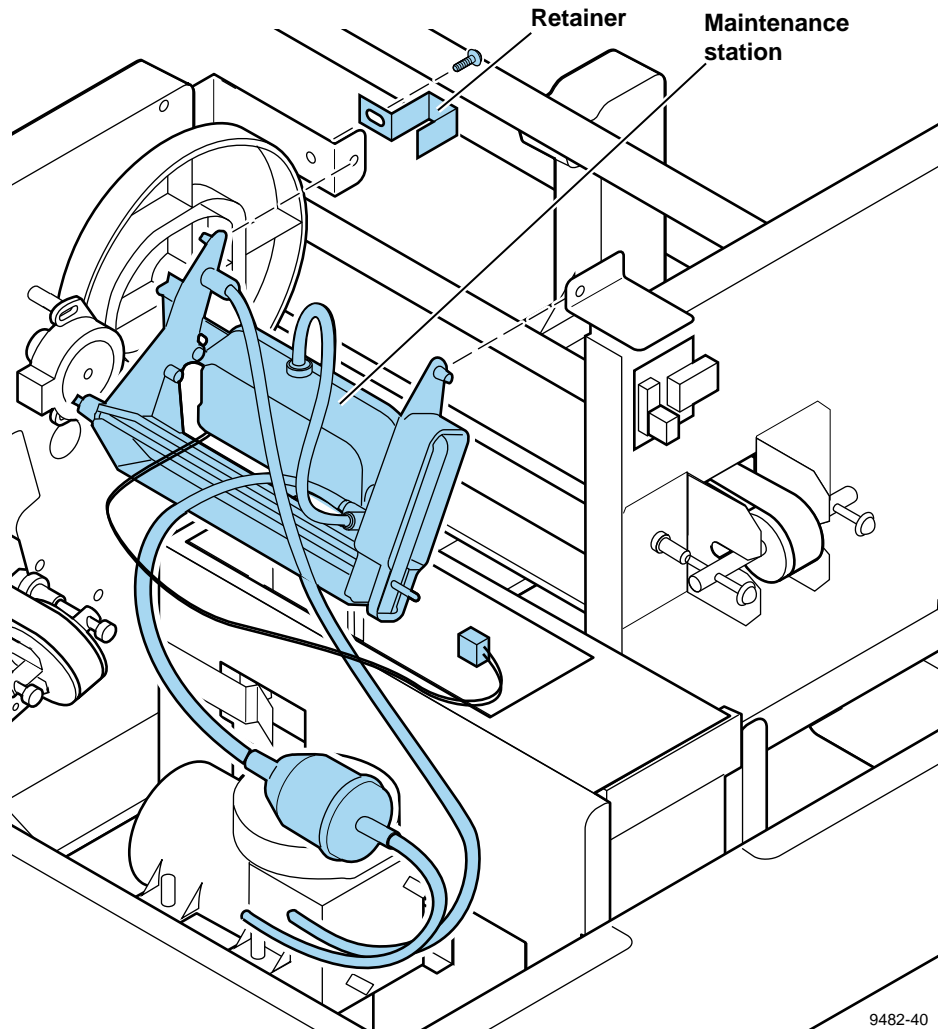Caution Do not nick or gouge the wiper or the vacuum chamber seal.



9482-40

Figure 8-17 Removing the maintenance station

Reverse these steps to reinstall the maintenance station. If necessary, adjust the maintenance station bracket to align the maintenance station parallel to the face of the printhead. Refer to the Chapter 9 topic, "Maintenance station alignment" on page 9-8.

Replacing the maintenance station wiper

Caution *Never scrape the wiper element with a tool or your fingernail. You will damage it. Clean it only with an alcohol-moistened swab.*

1. Unclip the wiper retainer from the maintenance station. Save the retainer for reuse.
2. Remove the old wiper element.
3. Insert a new wiper element squarely into the wiper retainer.
4. Clip the wiper retainer (with the wiper) onto the ridge of the maintenance station. Make sure that the element is firmly and squarely seated on the ridge. Ensure there is no puckering where the wiper extends through the retainer. Also, ensure that the edge of the wiper element is parallel to the face of the maintenance station.
5. Clean the wiper with an alcohol-moistened swab.

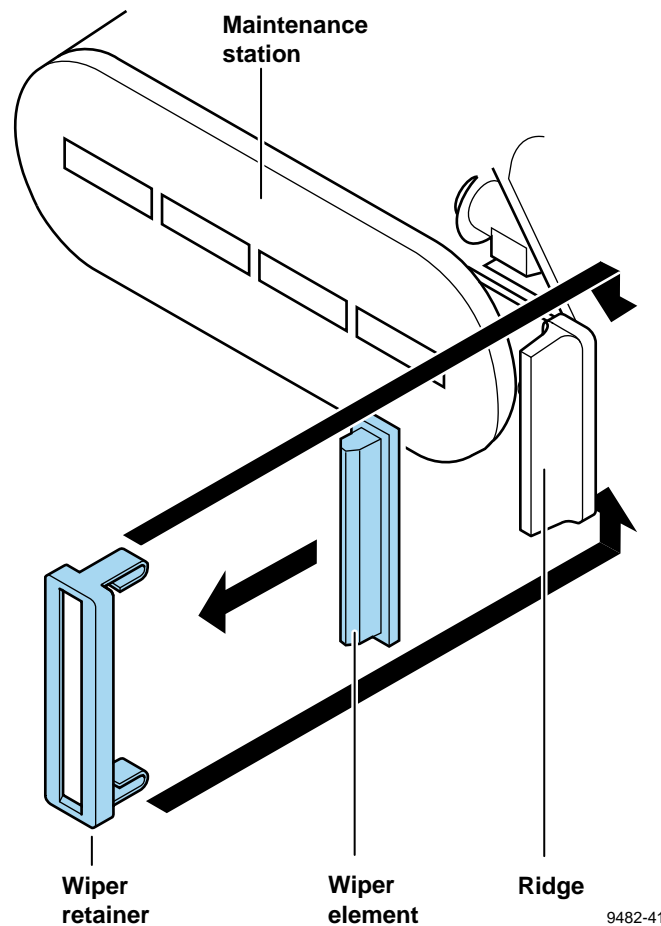


Figure 8-18 Replacing the wiper element

Drip plate

Tools required

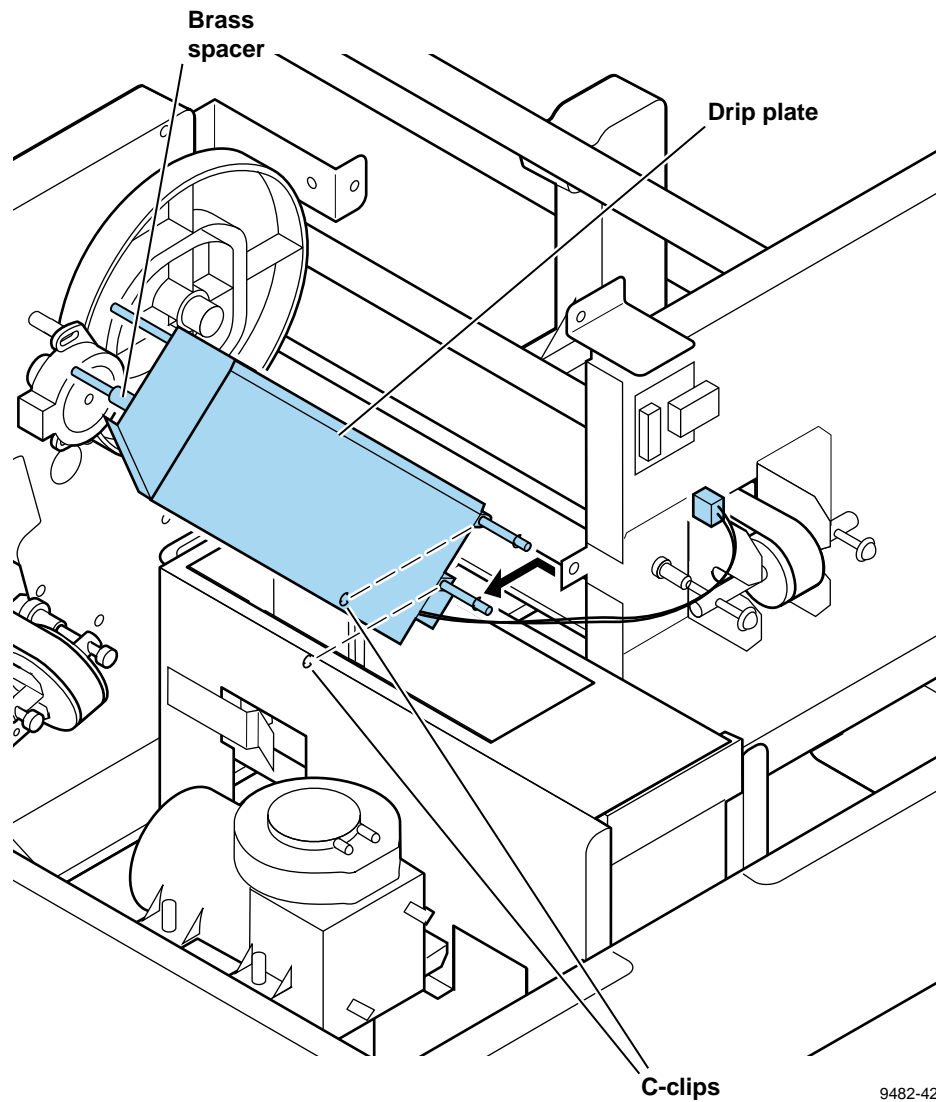
- #1 POSIDRIV® screwdriver
- Small needle-nose pliers

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity. Allow the drip plate to cool; this takes about 10 minutes.
2. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.

Warning *The printhead, maintenance station and drip plate may still be hot. To avoid injury, allow them to cool before touching them.*

3. Move the printhead to the left, away from the printhead's home position.
4. To create more working room, you can remove the maintenance station as described in the previous procedure.
5. Disconnect the drip plate wiring harness from the interconnect board on the side of the printer frame.
6. Carefully remove the C-clips close to the drip plate securing the drip plate rods.

7. Push the drip plate slightly forward and then to the right to remove the drip plate and its rods and the spacer.



9482-42

Figure 8-19 Removing the drip plate

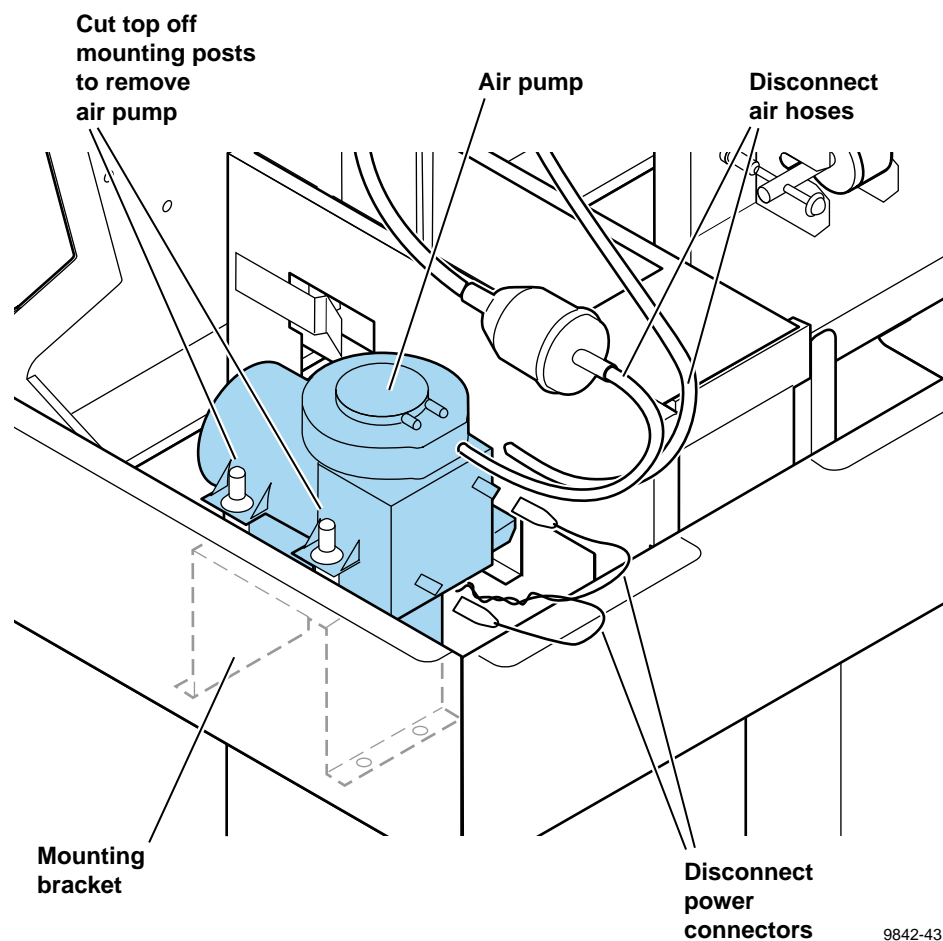
Reverse these steps to install the drip plate. For reassembly, note the spacer slides over the lower rod.

Air pump

Tools required

- #1 POSIDRIV® screwdriver
- Diagonal cutters

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.
3. Disconnect the air hoses leading to the air pump.
4. Disconnect the power connectors from the terminals on the right side of the air pump.
5. With diagonal cutters, snip the tops off the air pump mounting posts. Remove the pump.



9842-43

Figure 8-20 Removing the air pump

6. Remove the four screws securing the air pump mounting bracket to the printer frame. Remove the mounting bracket.
7. Unscrew the remainder of the mounting posts from the underside of the air pump mounting bracket.

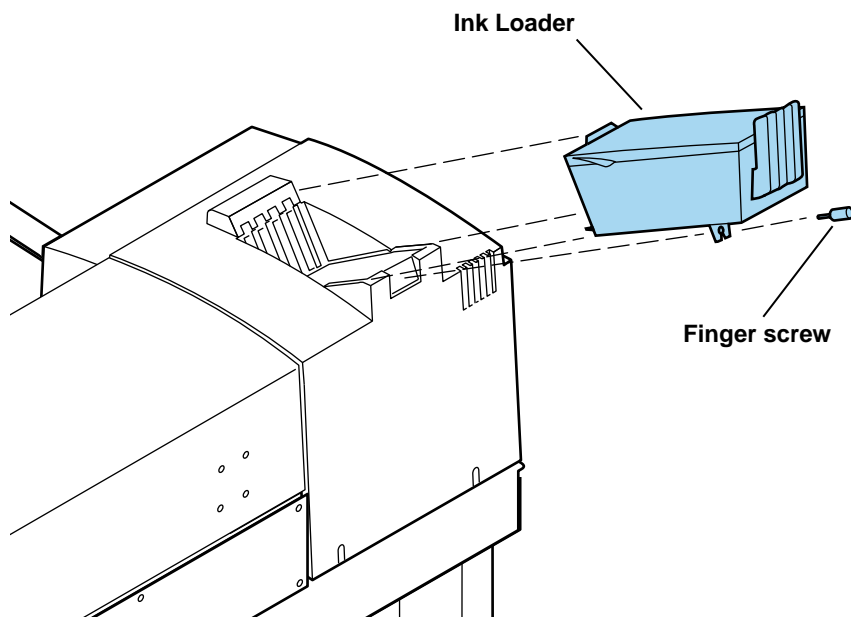
Reverse these steps to reinstall the air pump.

Ink loader

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. At the rear of the ink loader, remove the screw securing the ink loader to the printer cabinet. Lift and remove the ink loader.



9482-44

Figure 8-21 Removing the ink loader

Ink loader motor assembly

1. Remove the ink loader as described in the previous procedure.
2. Remove the left cover as explained in the earlier procedure "Left cover" on page 8-3.
3. Disconnect the wiring harness leading to the ink loader motor assembly.
4. Disconnect the springs connecting the ink-low sensor and ink-drop sensors to the printer frame.
5. Remove the four screws securing the ink loader motor assembly to the printer frame. Remove the assembly.


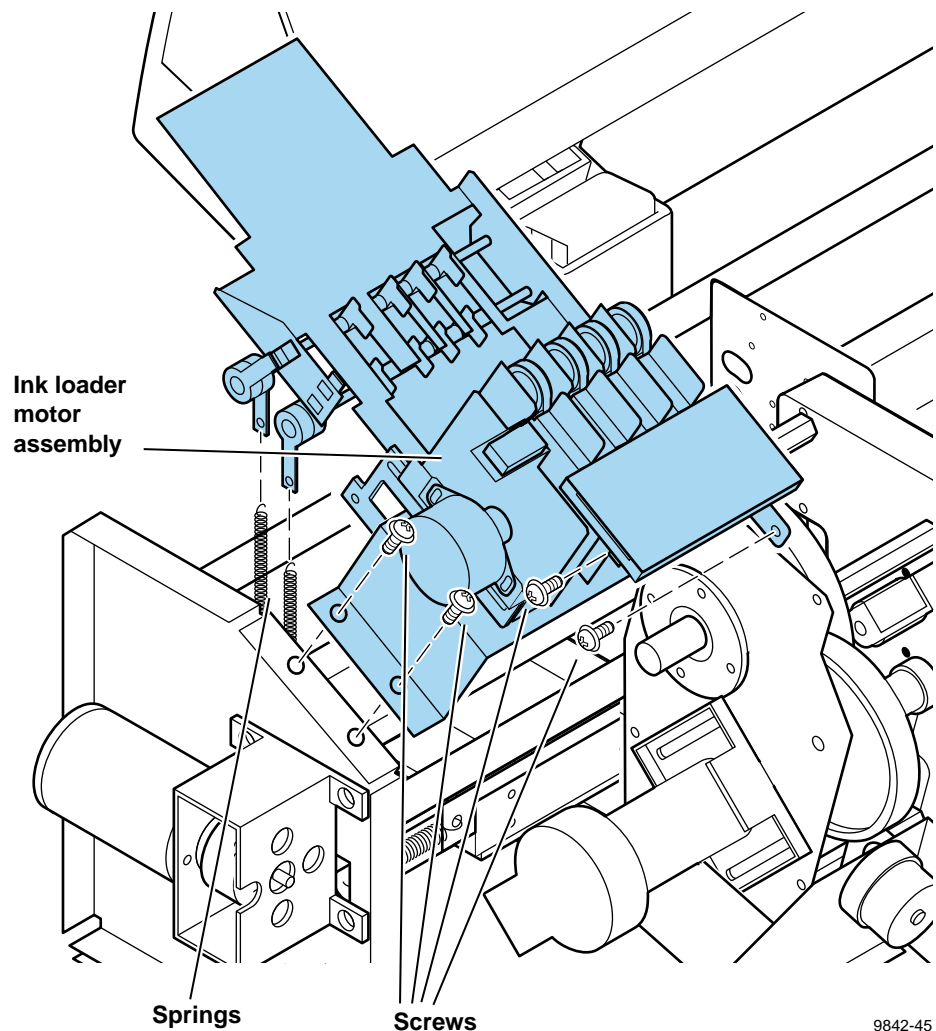


Figure 8-22 Removing the ink loader motor assembly

Reverse these steps to install the ink loader motor assembly and the ink loader.

Use the alignment jigs to ensure the ink loader motor assembly is installed at the correct angle to the printhead and the left cabinet cover.

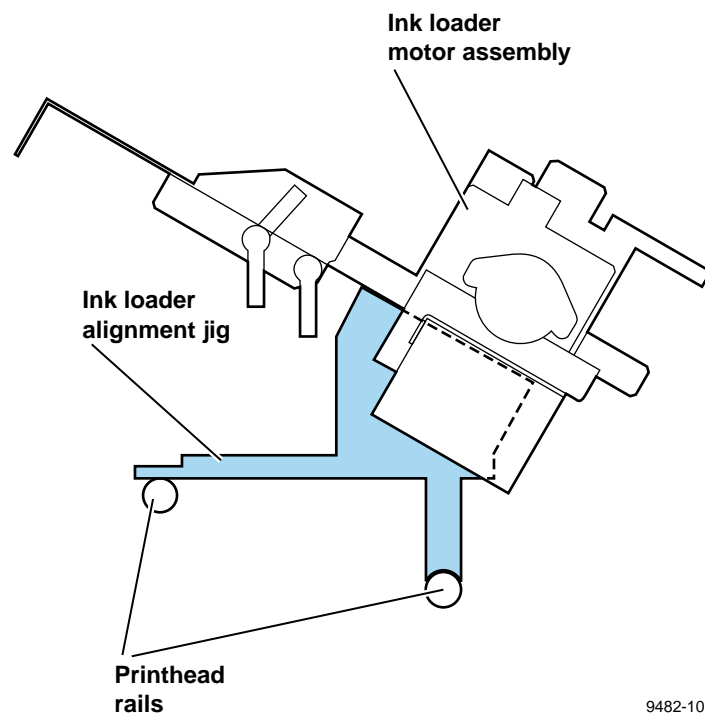1. Place the ink loader alignment jig on the left-end printhead rails. Laying against the alignment jig, set the ink loader in its installed position.
2. Tighten the screws that secure the ink-loader motor assembly in place.
3. Remove the alignment jigs.
4. Manually slide the printhead under the ink loader to ensure it passes under the ink loader with interference.



9482-108

Figure 8-23 Installing the ink loader motor assembly

Clamp (bail) roller assembly

Tools required

- #1 POSIDRIV® screwdriver
- 2 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the top cover.
3. Using a hex wrench, remove the two thumbscrews (one at each end) securing the clamp roller in place against the rear of the drum. Lift and remove the clamp roller.

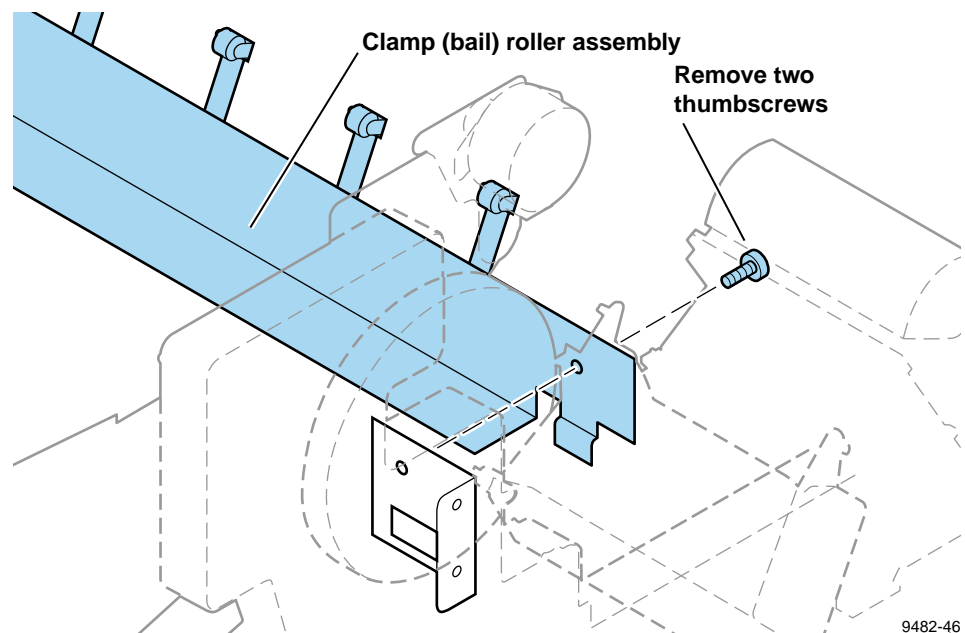


Figure 8-24 Removing the clamp (bail) roller assembly

Reverse these steps to install the clamp roller assembly.

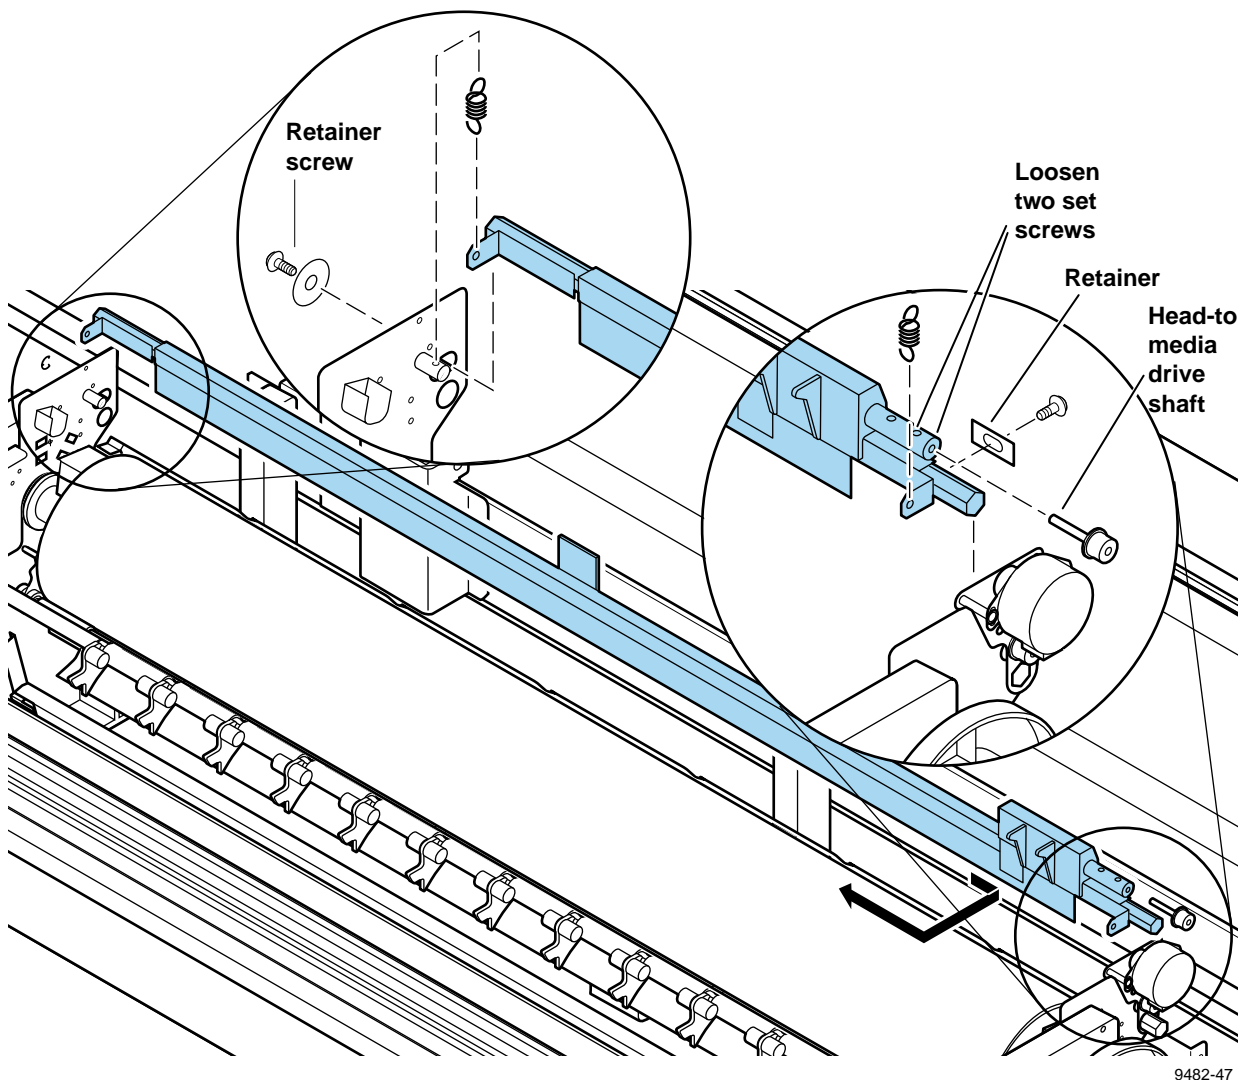
Back-tension blade

Tools required

- #1 POSIDRIV® screwdriver
- Needle-nose pliers
- 1.5 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Open the top cover.
5. Unclip the springs at each end of the back-tension blade.
6. Remove the retainer screw from the left end of the back-tension blade.
7. Remove the retainer from the right end of the back-tension blade.
8. Loosen the two set screws at the right end of the head-to-media set mechanism’s sleeve. Remove the head-to-media drive shaft from the sleeve.

9. Remove the back tension blade retainer; it is held in place by one screw.



9482-47

Figure 8-25 Removing the back tension blade

10. Slide the back tension blade assembly slightly to the right to free the left end. Then slide it to the left to free the right end. Remove the back tension blade.

Reverse these steps to install the back tension blade.

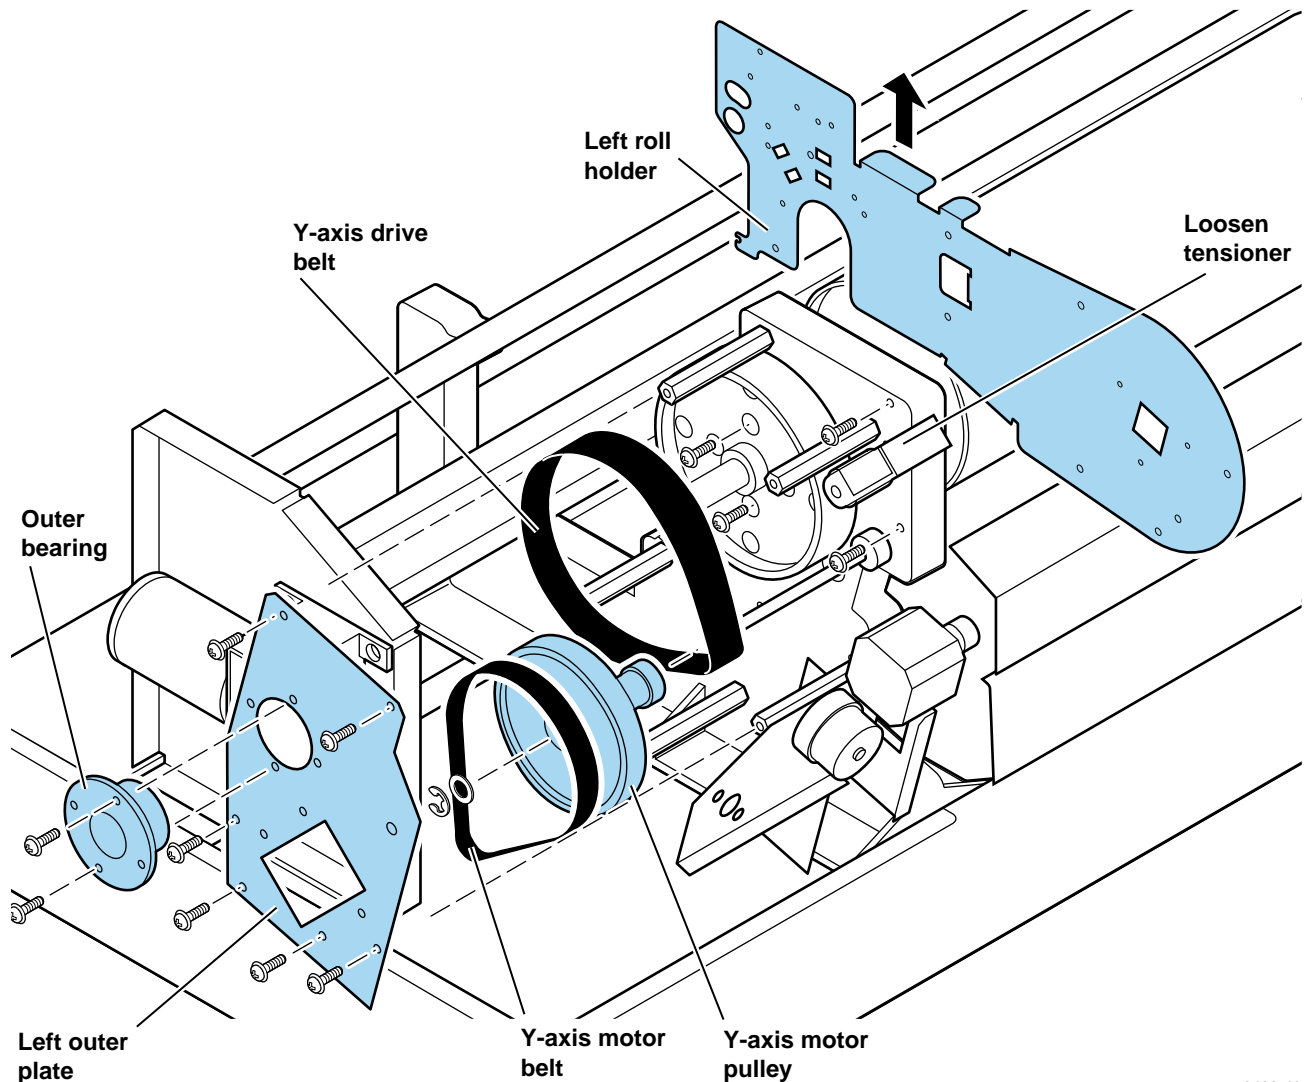
Drum

Tools required

- #1 POSIDRIV® screwdriver
- Needle nose pliers
- 1.5 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Remove the roll cover as explained in the earlier procedure, “Roll cover” on page 8-2.
5. Open the top cover.
6. Disconnect the roll paper sensor wiring harness. Remove the six screws securing the paper guide (three screws at each end). Remove the cover.
7. Remove the fuser motor as explained in the earlier procedure, “Fuser motor” on page 8-6.
8. Remove the fuser assembly as explained in the earlier procedure, “Fuser and fuser belts” on page 8-37.
9. Remove the stripper finger assembly as explained in the procedure “Stripper finger assembly” on page 8-43.
10. Remove the lower roller guide as explained in the procedure “Lower rollers guide” on page 8-44.
11. Remove the clamp roller assembly as explained in the previous procedure, “Clamp (bail) roller assembly” on page 8-29.
12. Remove the ink loader motor assembly as explained in the previous procedure, “Ink loader motor assembly” on page 8-27.
13. Remove the back tension blade as explained in the previous procedure, “Back-tension blade” on page 8-30.
14. Remove the Y-axis motor as explained in the earlier procedure, “Y-axis (drum) motor and belts” on page 8-10. The Y-axis belts will be removed in following steps.

15. Remove the left outer drum bearing on the left end of the drum shaft. The bearing is held in place by two screws.
16. Remove the screws securing the outer plate of the left drum frame. The screws secure the outer plate to the six frame standoffs. Remove the plate.
17. Loosen the Y-motor drive belt tensioner.
18. Remove the E-ring securing the Y-axis motor pulley to its shaft. Slide the Y-axis belt off the Y-axis drive gear. Slide the Y-axis motor pulley (and belts) off the pulley shaft.



9482-49

Figure 8-26 Removing the drum's left outer plate, outer bearing, and Y-axis motor pulley

19. Disconnect the wiring harness leading to the drum. There are two wiring harnesses at each end.

- 20.** Remove the two screws securing the inner left bearing to the printer frame.
- 21.** Remove the three screws securing the left roll holder to the printer frame.
- 22.** Remove the head maintenance station as detailed in the earlier procedure, "Maintenance station" on page 8-19.
- 23.** Remove the head maintenance cam gear motor and cam as explained in the earlier procedure, "Head maintenance cam gear motor" on page 8-13.
- 24.** Loosen the right drum bearing on the right end of the drum shaft. The bearing is held in place by two screws.
- 25.** Disconnect the wiring harnesses leading to the paper clamp sensors mounted on the right roll holder.

26. Remove the right roll holder. It is held in place by four screws. For reassembly, note how the drip plate rod passes through the back of the roll holder


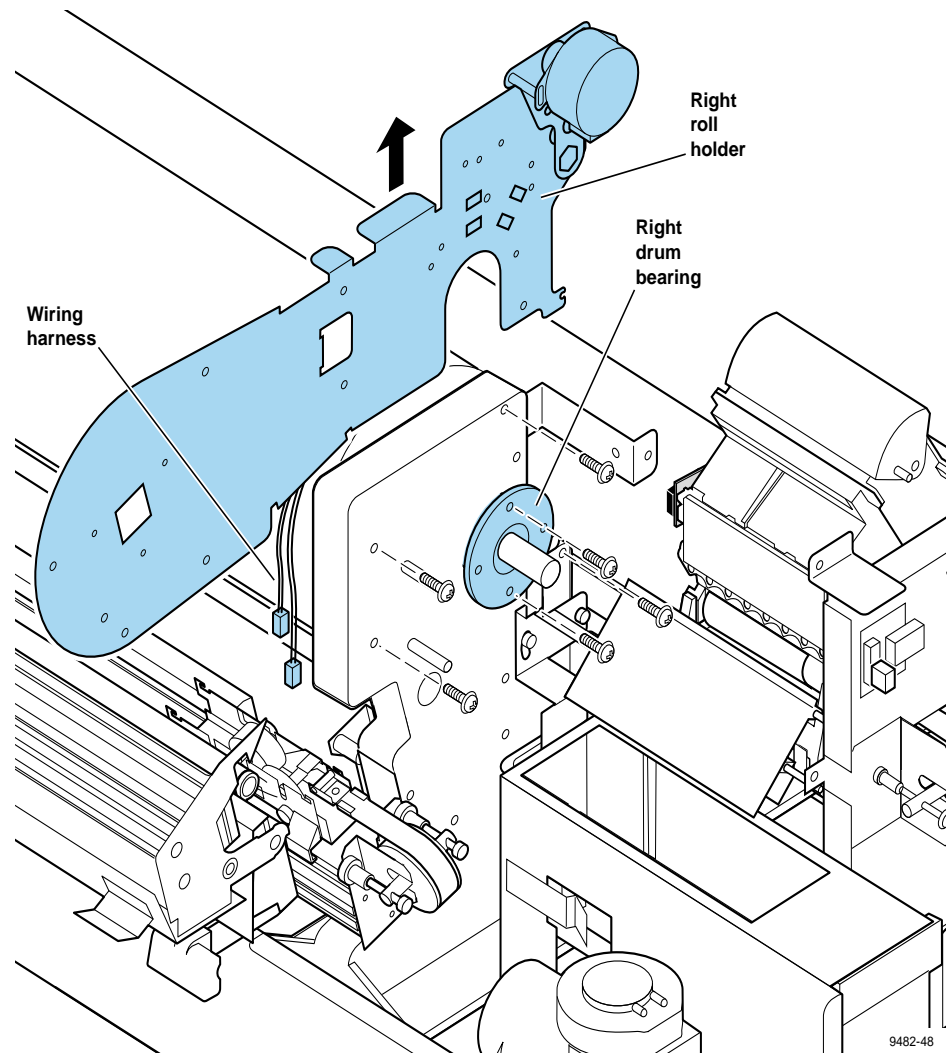


Figure 8-27 Removing the right drum bearing

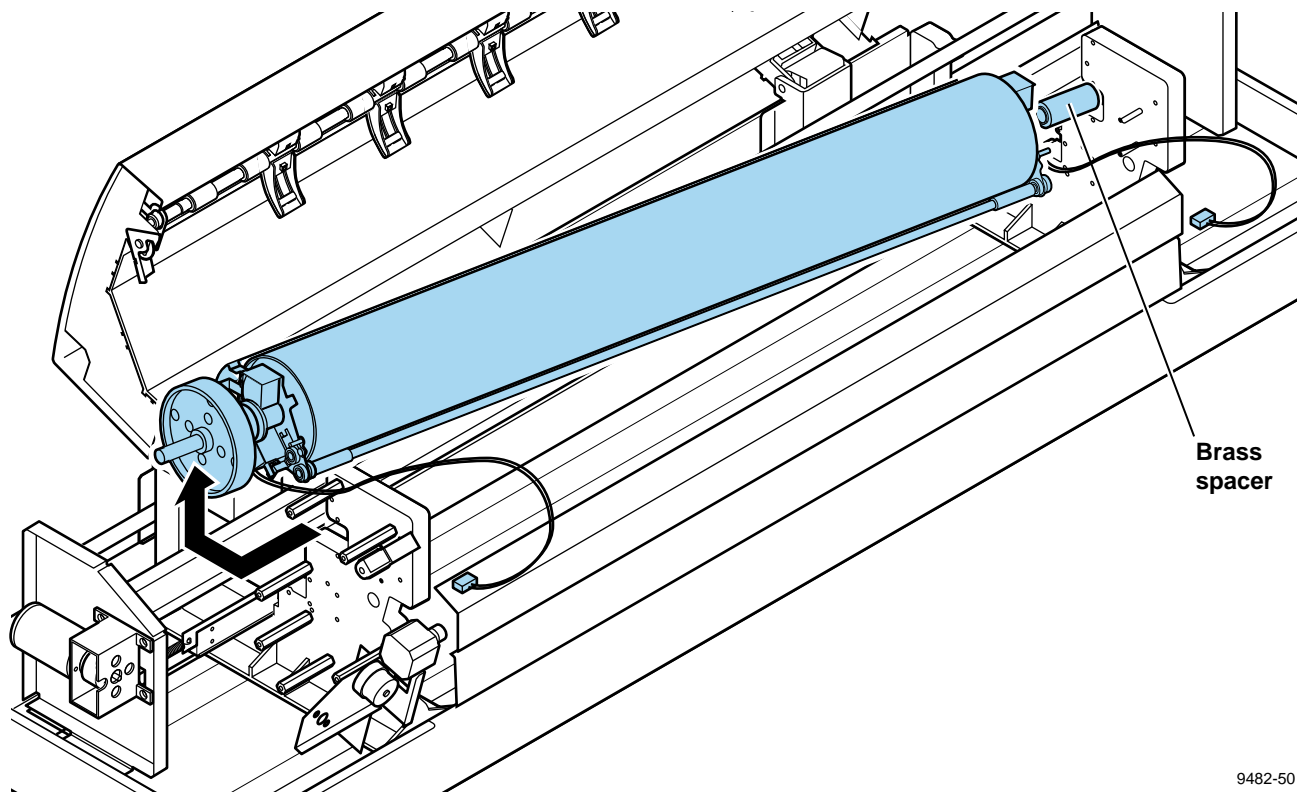27. Sliding the left end of the drum rearward and then to the left, remove the drum.



9482-50

Figure 8-28 Removing the drum

Reverse these steps to reinstall the drum. When tightening the screws that secure the drum bearings at each end of the drum, tighten them securely and then back the screw out 1/8 of a turn. Perform the drum alignment check described in Chapter 9, "Drum alignment" on page 9-19. Then tighten the screws. Following this complete the reassembly.

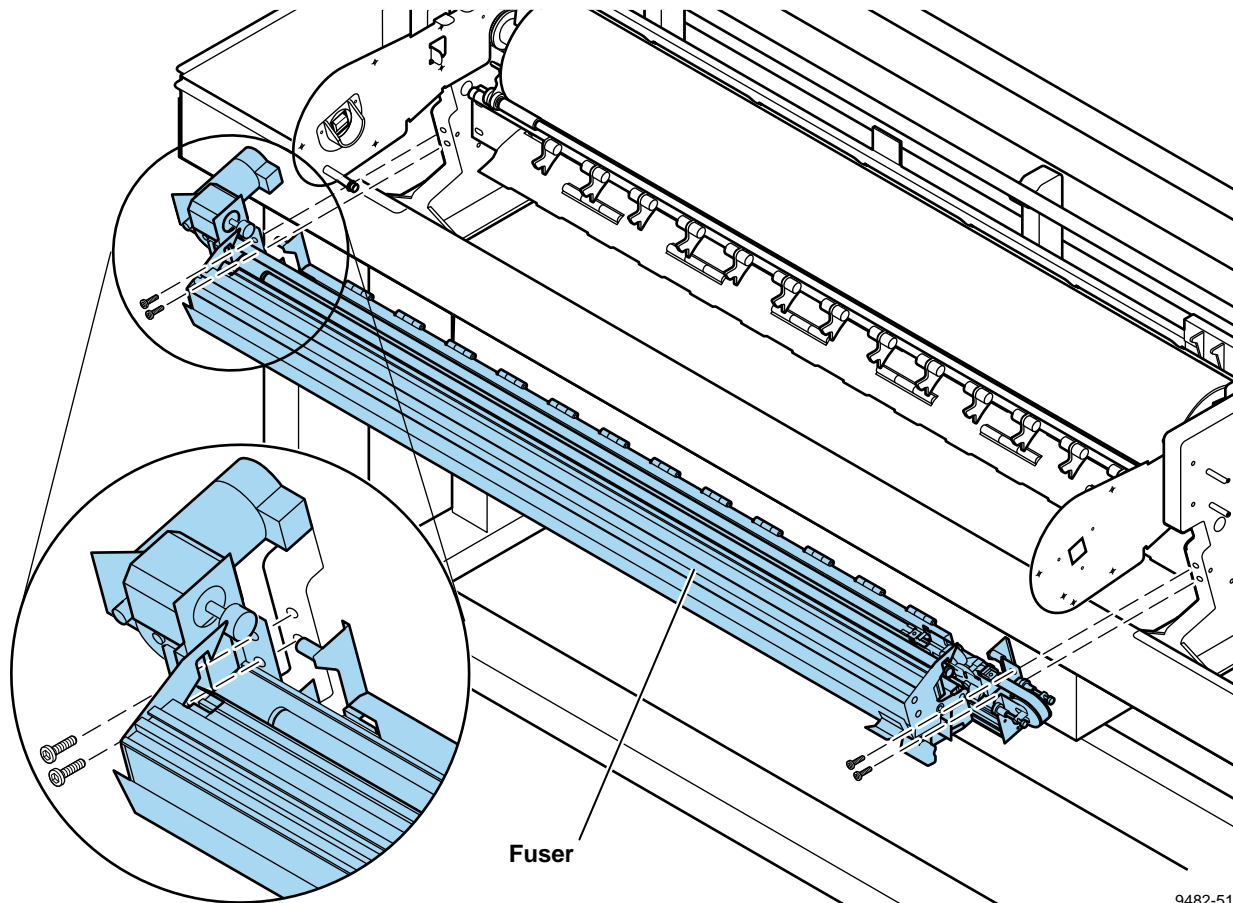
Fuser and fuser belts

Tools required

- #1 POSIDRIV® screwdriver
- 2.5 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Disconnect the fuser’s wiring harnesses and exit sensor wiring harness from the right junction board.
5. Disconnect the wiring harness of the fuser motor. Alternately, you can remove the fuser motor as detailed in the earlier procedure, “Fuser motor” on page 8-6. Also, disconnect the exit-roller motor wiring harness and the fuser open sensor wiring harness.

6. With a hex wrench, remove the two screws securing each end of the fuser to the printer frame. Tilt forward and remove the fuser. The fuser motor belt is freed as you remove the fuser.



9482-51

Figure 8-29 Removing the fuser

Fuser belt

7. Flip up the tension adjust screws to loosen the tension on the fuser belt.
8. Unhook each end of the fuser belt from the fuser shuttle. Remove the belt.

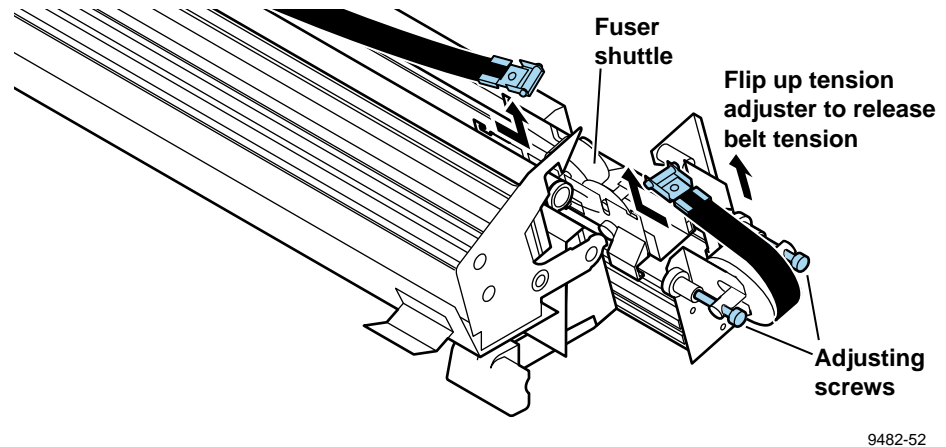


Figure 8-30 Unhooking the fuser belt

Reverse these steps to reinstall the fuser belt and the fuser. Note the pin on the right print engine frame to support the fuser as you install it. Set the fuser on the pin and tilt it up into place. Ensure the fuser is properly aligned to the lower roller guide as explained in the Chapter 9 topic, "Lower roller guide alignment" on page 9-9. Also ensure the fuser belt is properly tensioned to 0.5 kgs (1 lb.) as explained in the Chapter 9 topic, "Fuser belt tension" on page 9-6.

Paper clamp

Tools required

- #1 POSIDRIV® screwdriver
- 1.5 mm hex wrench

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Manually rotate the drum and clamp to raise the clamp to its ready position.
5. Remove the six screws (three at each end) securing the paper clamp to the drum. Remove the clamp.

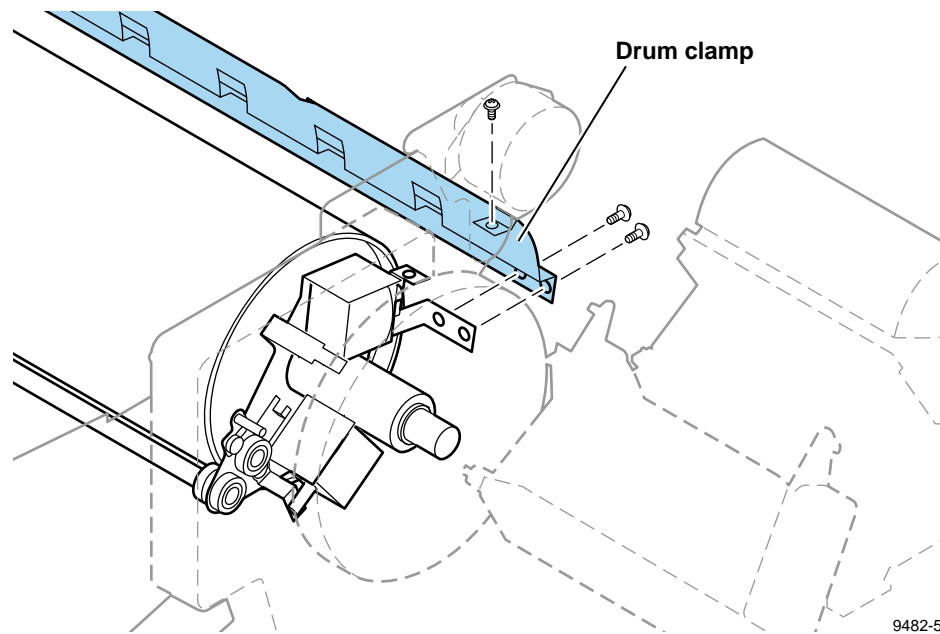


Figure 8-31 Removing paper clamp

Reverse these steps to reinstall the paper clamp. Ensure the clamp is correctly spaced and aligned to the drum by following the Chapter 9 procedure, “Paper clamp alignment” on page 9-11.

Timing fence (dot clock encoder)

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Unhook the spring from the left end of the timing fence.

Warning *The printhead, maintenance station and drip plate may still be hot. To avoid injury, allow them to cool before touching them.*

5. Remove the two screws securing the timing fence to the printer frame. Carefully, lift to the left and remove the timing fence.

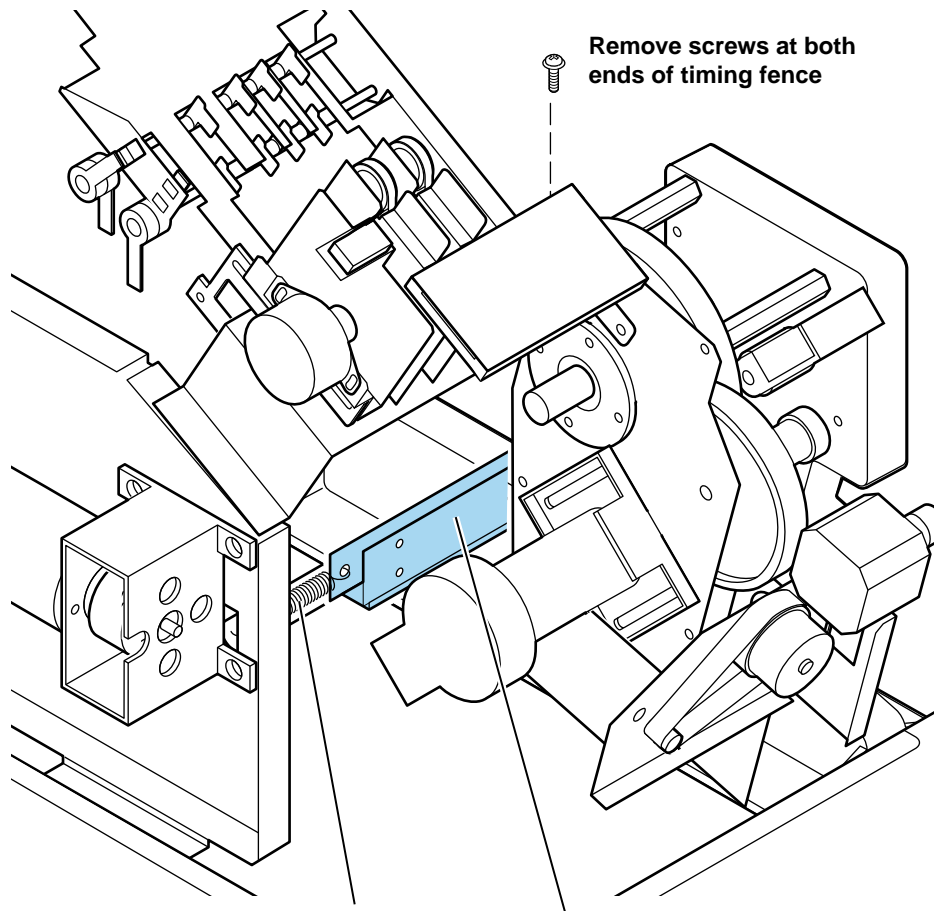


Figure 8-32 Removing the timing fence

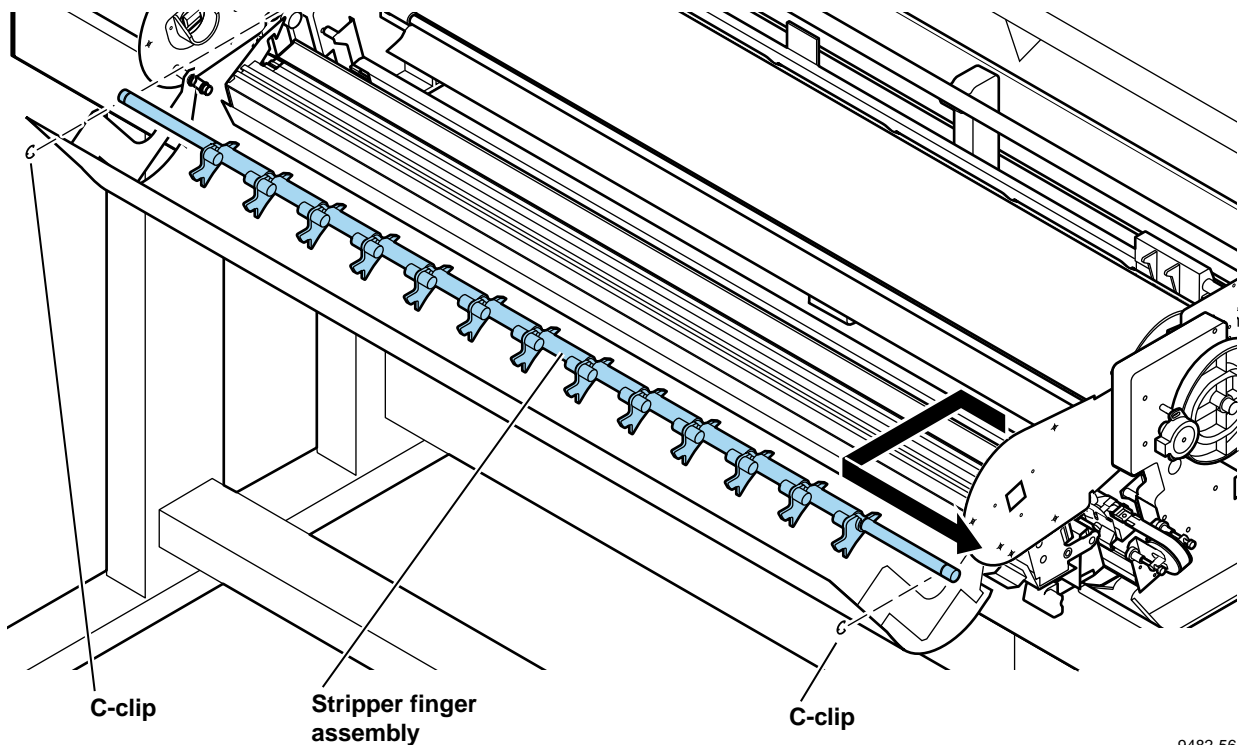
Reverse these steps to reinstall the timing fence.

Stripper finger assembly

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the roll cover as described in the topic, "Roll cover" on page 8-2.
3. Loosen the retainer ring on the left end.
4. Open the fuser.
5. Remove the C-clip securing each end of the stripper finger assembly.
6. Slide the assembly to the left to free the right end of the assembly, and then side it to the right to free it from the printer frame.



9482-56

Figure 8-33 Removing the stripper finger assembly

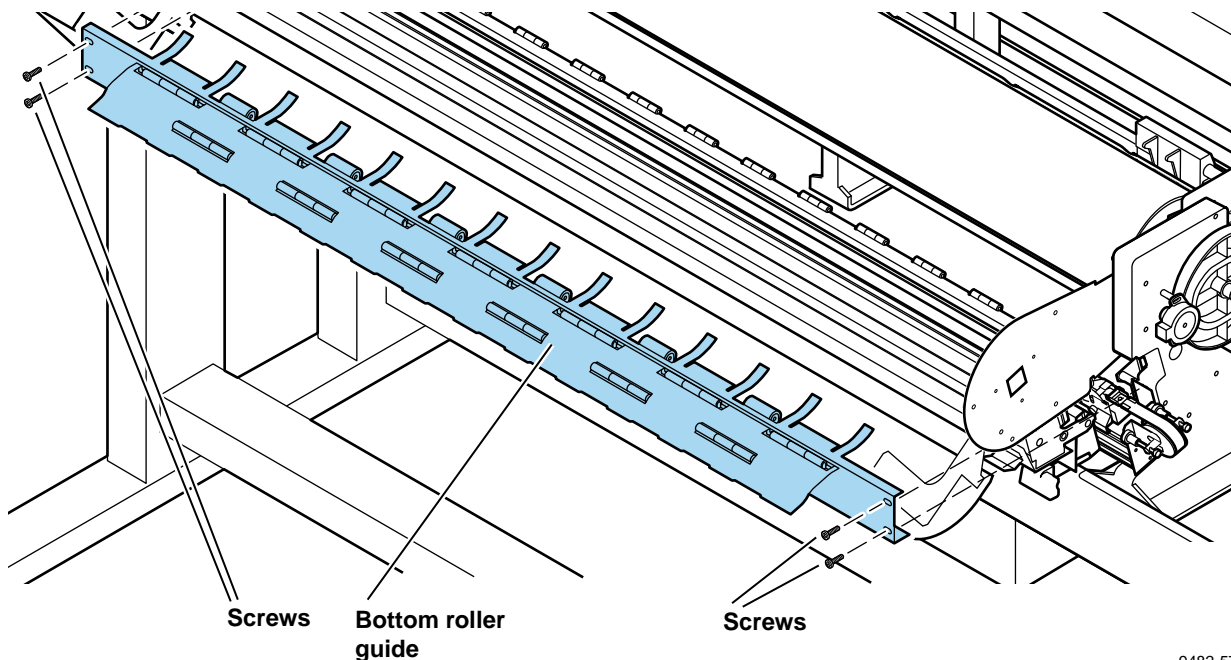
Reverse these steps to reinstall the stripper finger assembly. To ease re-installation, press the end fingers inward to the center of the assembly to compress the fingers and spacers together and keep them from rotating on the shaft.

Lower rollers guide

Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the roll cover as explained in the earlier topic, “Roll cover” on page 8-2.
3. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
4. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
5. Open the fuser.
6. Remove the stripper finger assembly as explained in the previous procedure.
7. Remove the two screws from each end of the lower roller assembly. Pull the assembly forward to remove it from the printer.



9482-57

Figure 8-34 Removing the lower roller assembly

Reverse these steps to reinstall the lower roller guide. Ensure the “fingers” of the guide fit squarely through the holes in the paper clamp.

Umbilical cable

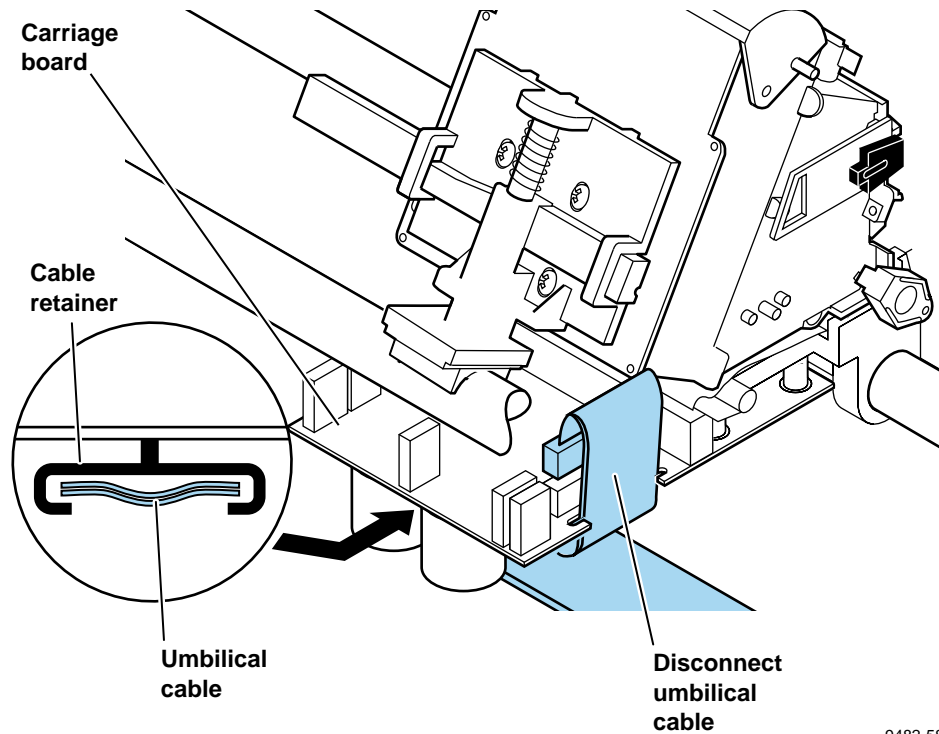
Tools required

- #1 POSIDRIV® screwdriver

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier topic, “Left cover” on page 8-3.
3. Remove the right cover as explained in the earlier procedure, “Right cover” on page 8-4.
4. Open the card cage by removing the 10 screws securing it to the underside of the printer frame.
5. Disconnect the umbilical cable from the print engine board’s connector J104.

Warning *The printhead, maintenance station and drip plate may still be hot. To avoid injury, allow them to cool before touching them.*

6. Carefully disconnect the umbilical cable from the carriage board of the printhead. Free the umbilical cable from the cable restrainer located on the underside of the carriage board.



9482-58

Figure 8-35 Removing the umbilical cable

7. Free the umbilical cable from the printer frame.

Reverse these steps to reinstall the umbilical cable.

Sensors

Tools required

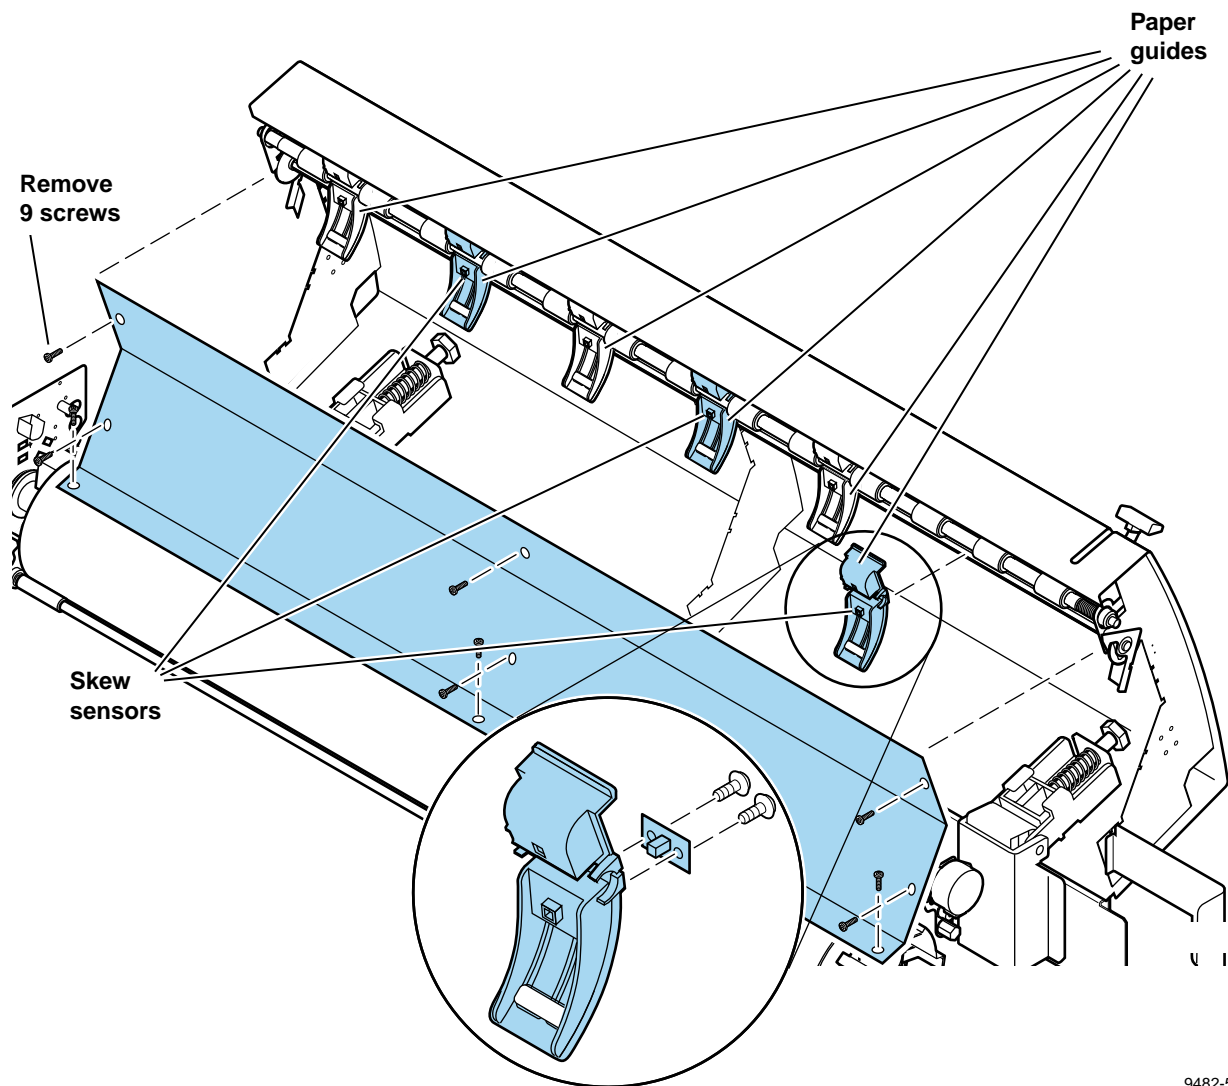
- #1 POSIDRIV® screwdriver
- #0 POSIDRIV® screwdriver

Skew sensors

There are three skew sensors. Each is located on one of the paper guides of the upper roller assembly.

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the top cover.
3. Remove the inner plate (9 screws) from the inside of the top cover.
4. Disconnect the ribbon cable leading to the sensor to be replaced.
5. Locate and unclip the paper guide containing the skew sensor to be replaced.

6. Remove the two screws securing the sensor to the paper guide.
Remove the sensor.




9482-59

Figure 8-36 Removing the paper width sensors

Reverse these steps to reinstall the skew sensors.

Left fuser-closed sensor

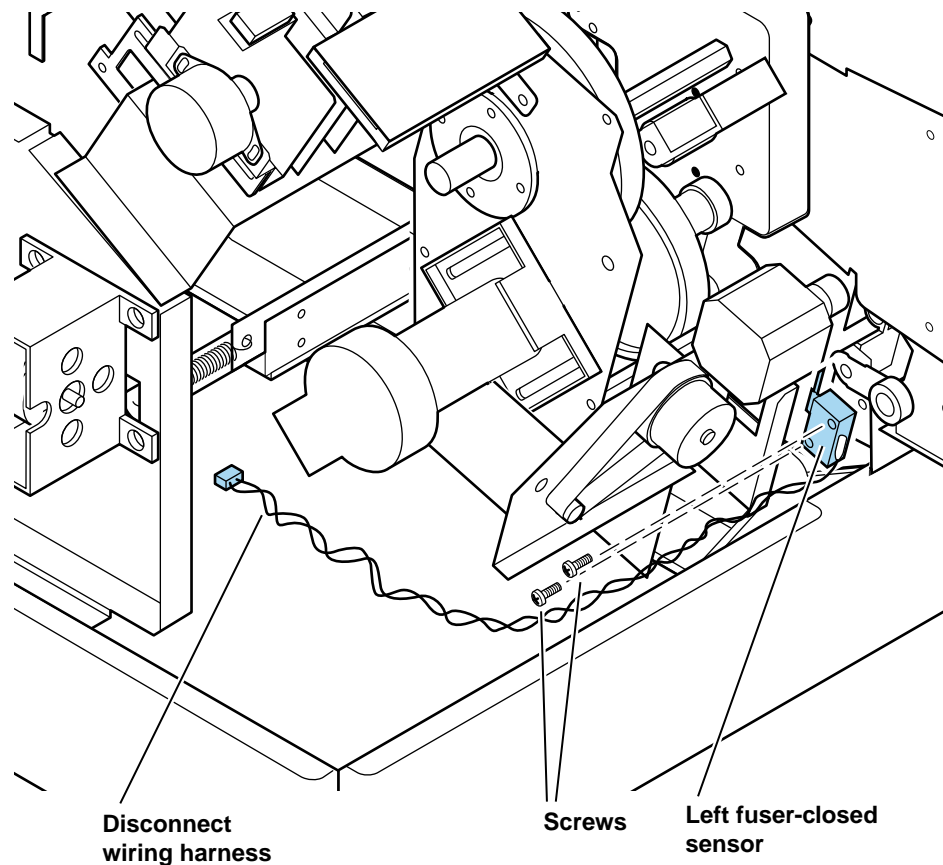1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as detailed in the topic, "Left cover" on page 8-3.
3. Disconnect the left fuser-closed sensor's wiring harness from the left junction board.
4. Remove the two screws securing the left fuser-closed sensor in place. Remove the sensor.




9482-60

Figure 8-37 Removing the left fuser-closed sensor

Reverse these steps to install the left fuser-closed sensor.

Left and right printhead sensors

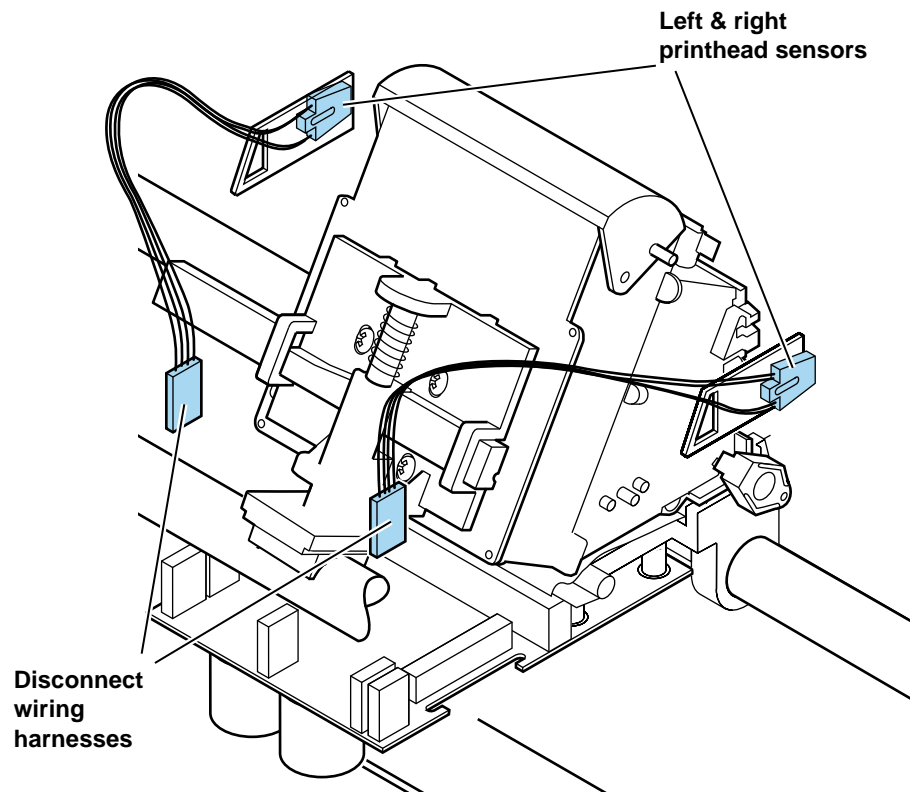1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as detailed in the topic, “Right cover” on page 8-4.
3. Disconnect the left and right printhead sensors’ wiring harnesses from the carriage board. Clip the tie wraps securing the harnesses to the other printhead wiring harnesses.
4. Free the sensors from their plastic mounting brackets on either side of the printhead.



9482-61

Figure 8-38 Removing the left and right printhead sensors

Reverse these steps to install the left and right printhead sensors.

Top cover sensors

There are three top cover sensors: One sensor, mounted on the right top cover hinge, detects if the top cover is open. Two others, mounted at the left and right ends of the cover, detect if the top cover release lever is actuated (top cover unlocked).

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Open the top cover.
3. Remove the inner plate (9 screws) from the inside of the top cover.
4. Disconnect the ribbon cable leading to the sensor to be replaced.
5. In the case of the top cover unlocked sensors, remove the two screws securing the sensor to the top cover. Remove the sensor. In the case of the top cover open sensor, remove the screws securing the top cover open sensor bracket. Remove the bracket and sensor. Remove the two screws securing the sensor to the bracket.


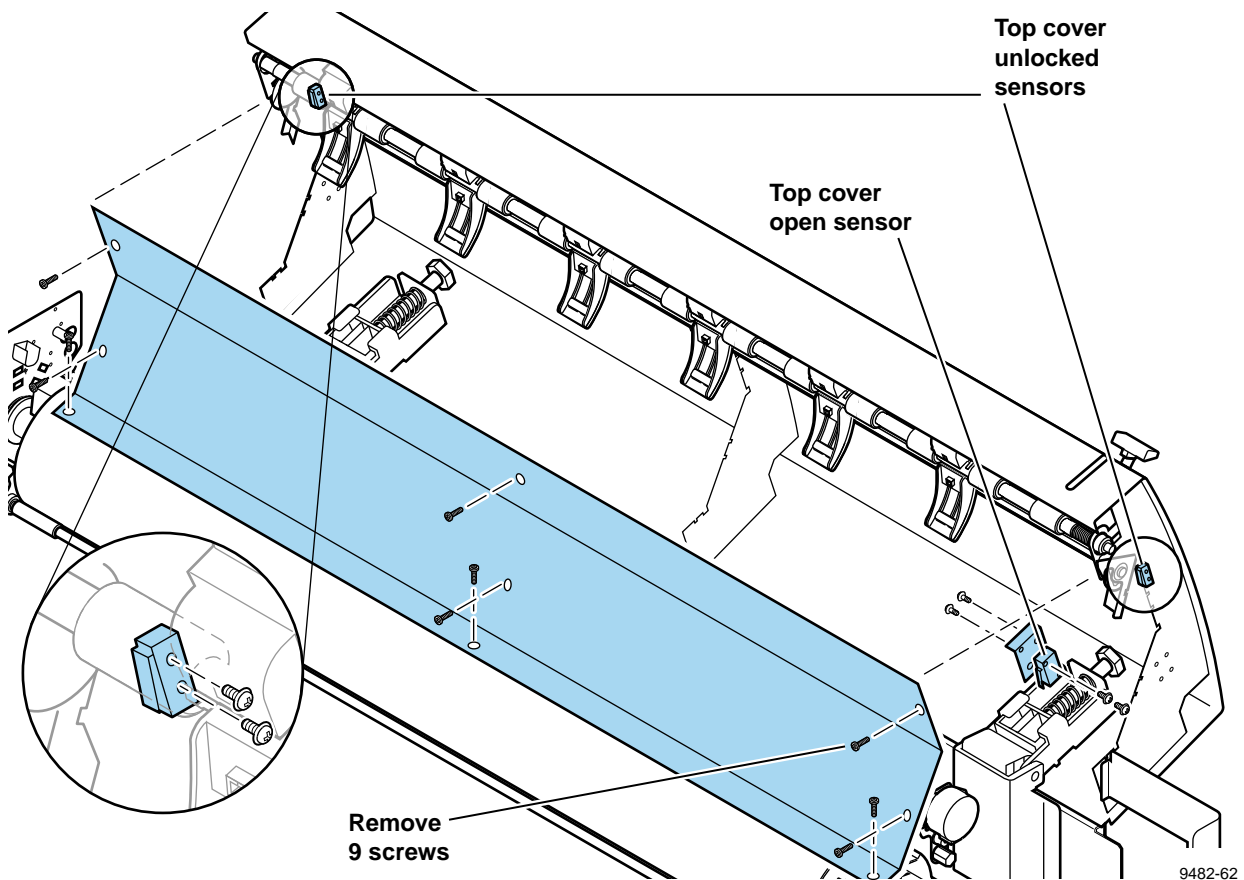


Figure 8-39 Removing the top cover sensors

Reverse these steps to reinstall the top cover.

Waste bin sensor

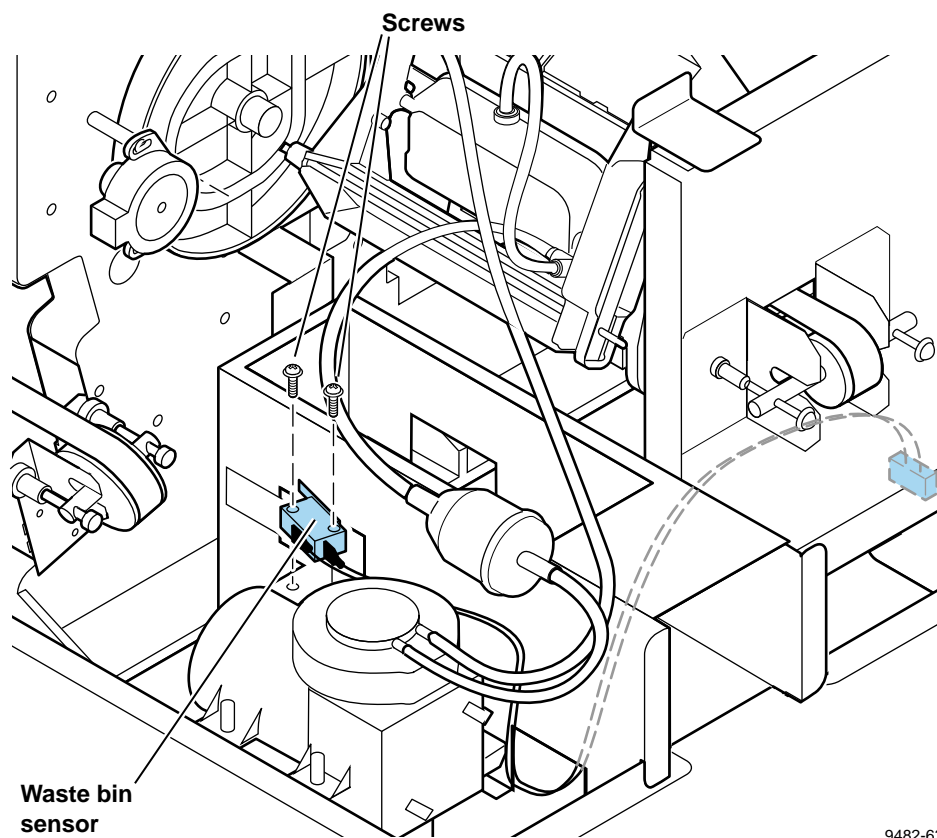1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as detailed in the topic, “Right cover” on page 8-4.
3. Disconnect the waste bin sensor’s wiring harnesses from the right junction board.
4. Remove the two screws securing the sensor to the waste bin frame.



9482-63

Figure 8-40 Removing the waste bin sensor

Reverse these steps to install the waste bin sensor.

Exit sensor

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the lower front cover. It is held in place with four screws.
3. Disconnect the exit sensor's wiring harnesses from the right junction board.
4. Remove the two screws securing the exit sensor bracket to the printer frame. Remove the two screws securing the sensor to the bracket.

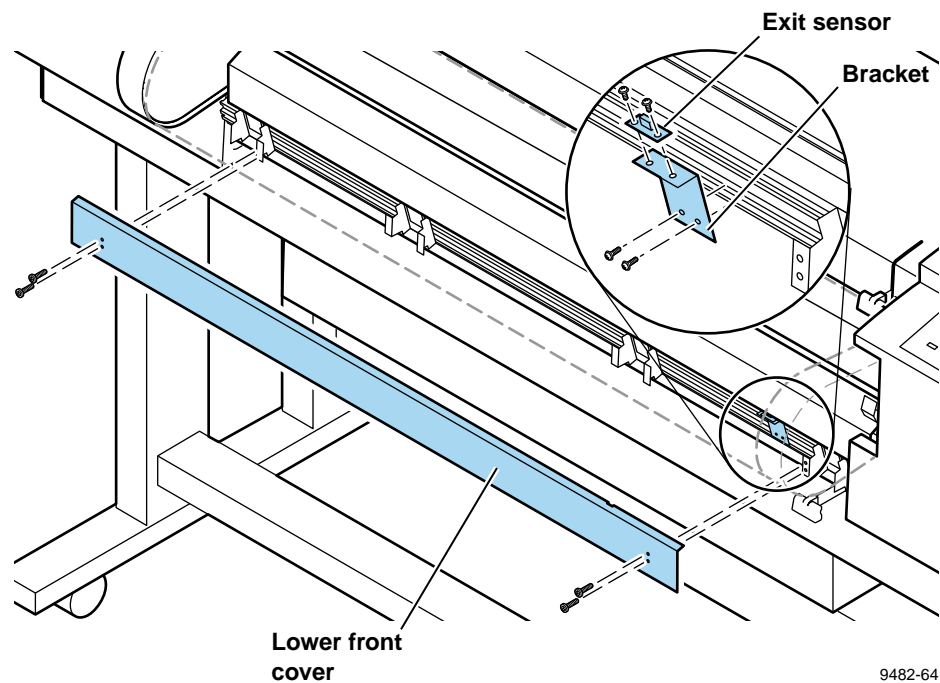


Figure 8-41 Removing the exit sensor

Reverse these steps to install the exit sensor.

Circuit boards

Tools required

- #1 POSIDRIV® screwdriver

Front panel

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the three screws securing the right roll cover end cap. Remove the end cap.
3. Remove the four screws securing the right cover in place. Lift the cover.
4. With the cover raised, disconnect the front panel ribbon cable from the front panel on the inside of the right cover.
5. Unclip the front panel from the inside of the front panel bezel.

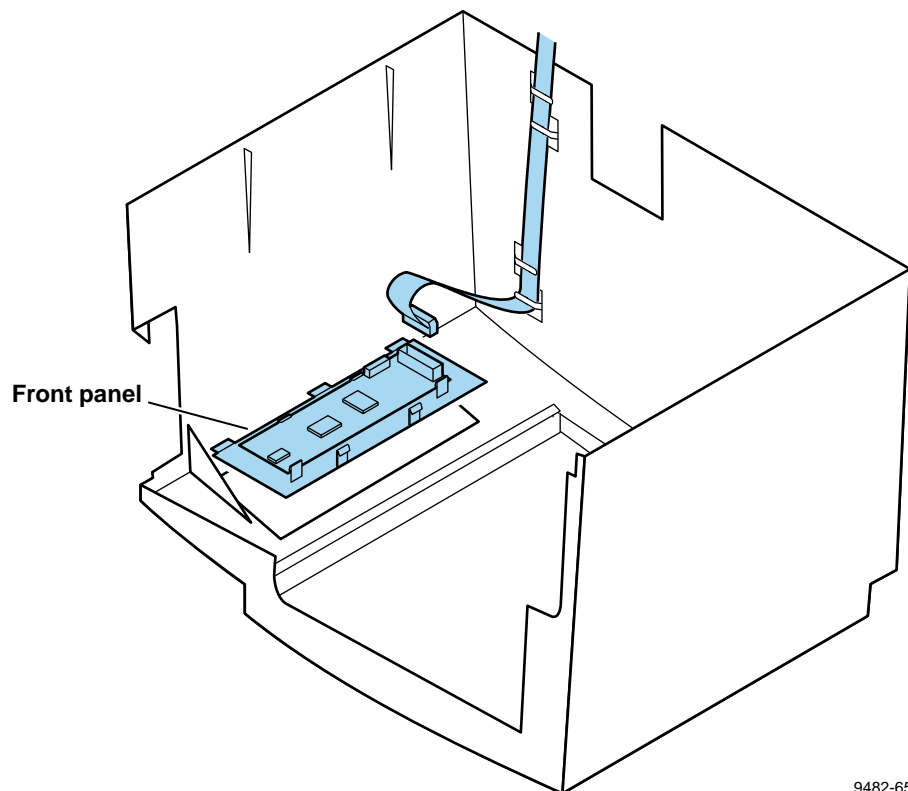


Figure 8-42 Removing the front panel

Reverse these steps to reinstall the front panel.

Power supply

1. Turn off the printer. Disconnect the power cord from the back of the printer.
2. Remove the output bin.
3. Open the card cage by removing the 10 screws securing it to the underside of the printer frame.
4. Disconnect the AC wiring harness connecting to the power supply.
5. Disconnect the two DC wiring harnesses connecting to the engine control board.
6. Remove the six screws securing the power supply to the card cage. Remove the power supply.


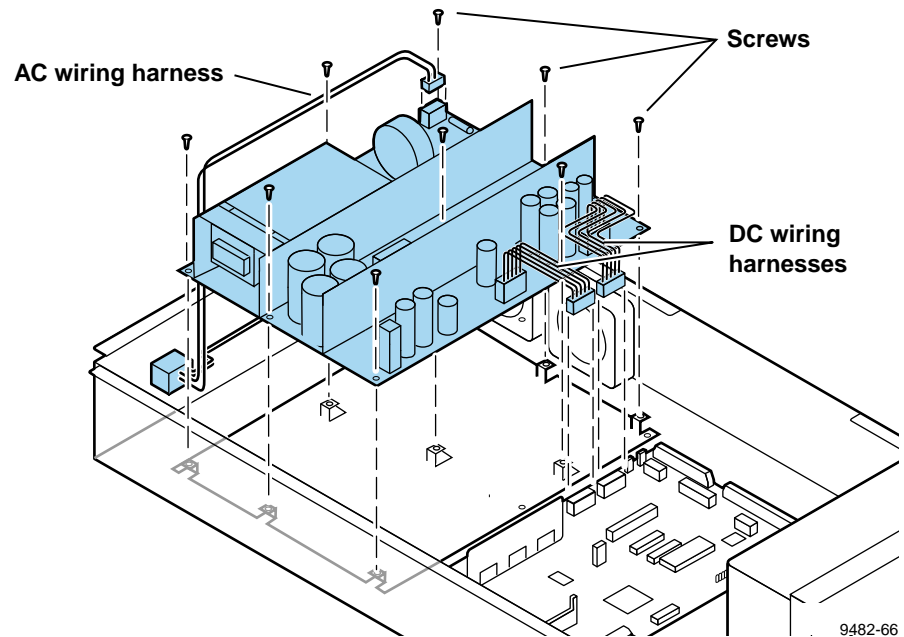


Figure 8-43 Removing the power supply

Reverse these steps to install the power supply.

Engine control board

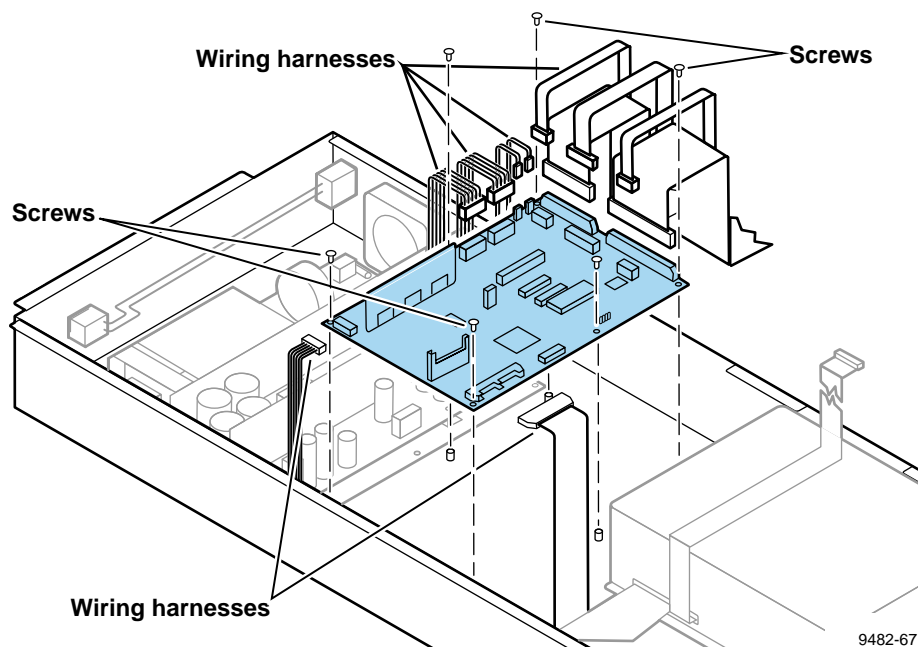1. Turn off the printer. Disconnect the power cord from the back of the printer.
2. Remove the output bin.
3. Open the card cage by removing the 10 screws securing it to the underside of the printer frame.
4. Disconnect the 11 wiring harnesses leading to the engine control board.
5. Remove the seven screws securing the engine control board to the card cage. Remove the engine control board.



9482-67

Figure 8-44 Removing the engine control board

Reverse these steps to install the engine control board.

Note *To retain printer calibrations and preference values, transfer the NVRAM chip, U6, from the old board to the new board.*

Downloading new engine control board firmware

1. Turn off the printer.
2. Remove the output bin.
3. Open the electronics bay.
4. Insert the PCMCIA card in the card receptacle, J110, on the engine control board.
5. Turn on the printer. The LEDs on the engine board will all turn on and then turn off. Next, the LEDs will sequentially turn on as the new firmware is downloaded.
6. When all the LEDs flash at the same time, the firmware is downloaded. Turn off the printer and wait 5 seconds.
7. Remove the PCMCIA card.
8. Close the electronics bay.
9. Reinstall the output bin.
10. Turn on the printer.

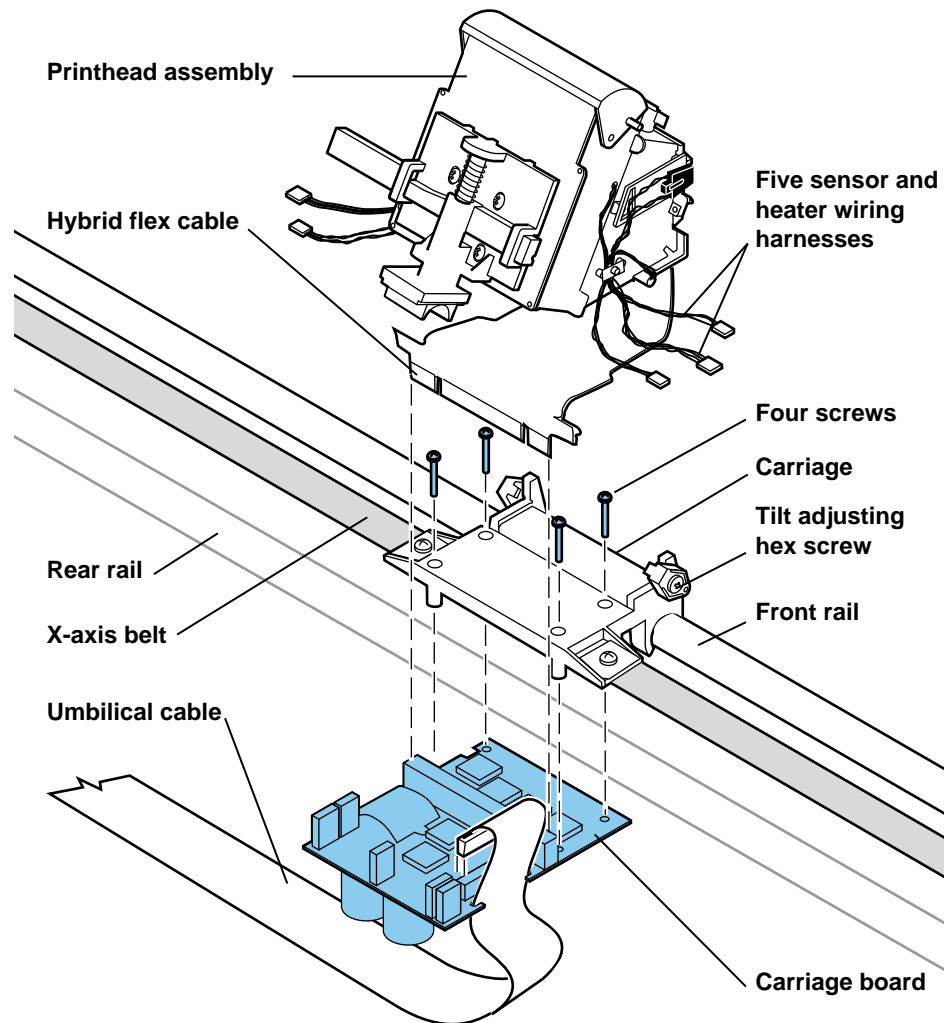
Carriage board

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity. Allow the printhead to cool; this takes about 20 minutes.
2. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.

Warning *The printhead is hot. Allow it to cool before handling it.*

3. Move the printhead tailpiece's slide ramp to the right to tilt the printhead backward slightly.
4. Supporting the printhead carriage, disconnect the printhead's sensor and heater wiring harnesses from the carriage board.
5. Remove the printhead as detailed in the earlier procedure, "Printhead" on page 8-14.
6. Disconnect and free the umbilical cable from the carriage board.

7. Remove the four screws securing the carriage board to the carriage. Remove the carriage board.



9482-68

Figure 8-45 Removing the carriage board

Reverse these steps to install the carriage board. Ensure the jumpers on the carriage board are correctly set for the Phaser 600 Color Printer.


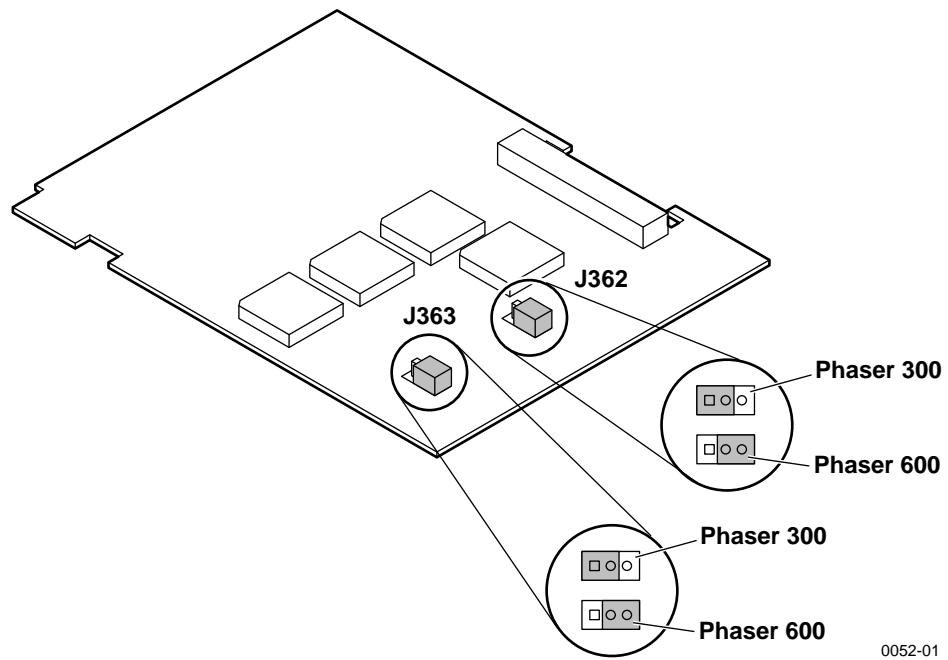


Figure 8-46 Jumpers on the carriage board

Junction boards

Right junction board

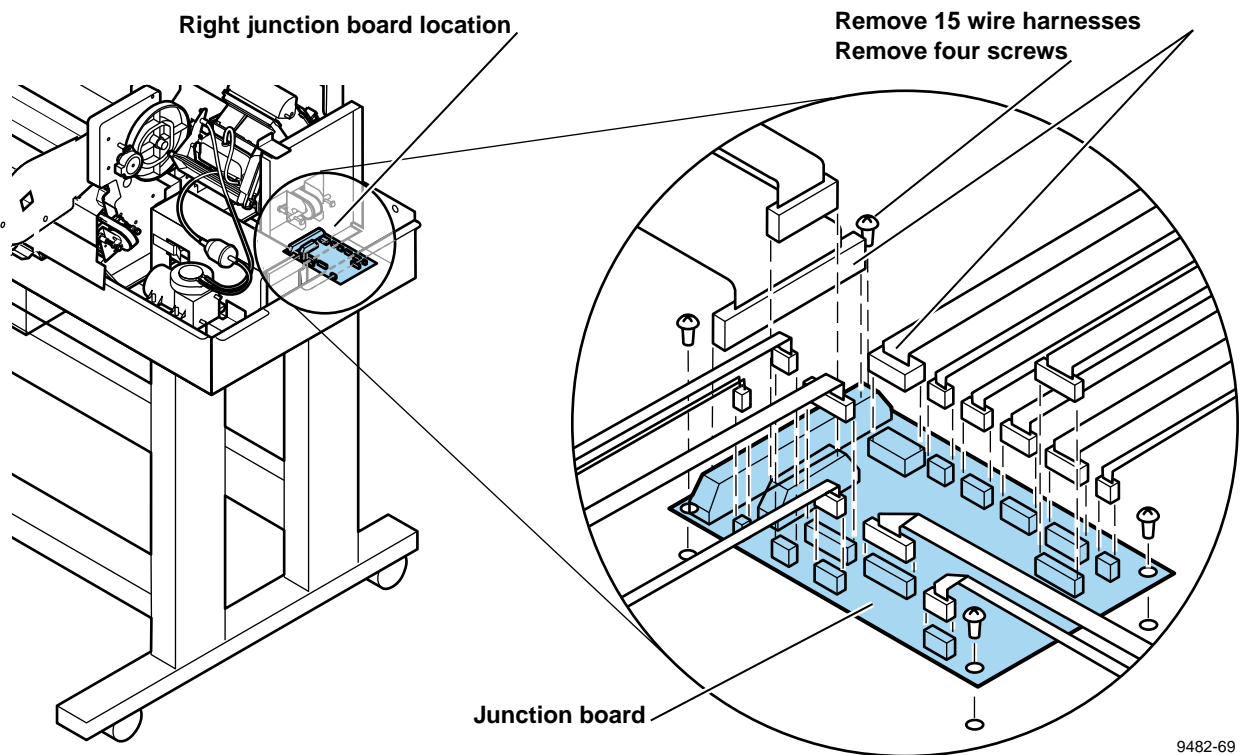1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the right cover as explained in the earlier procedure, "Right cover" on page 8-4.
3. Disconnect the 14 wiring harnesses leading to the right junction board.
4. Remove the four screws securing the right junction board to the printer frame.



9482-69

Figure 8-47 Removing the right junction board

Reverse these steps to install the right junction board.

Left junction board

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the left cover as explained in the earlier procedure, "Left cover" on page 8-3.
3. Disconnect the 11 wiring harnesses leading to the left junction board.
4. Remove the four screws securing the left junction board to the printer frame.

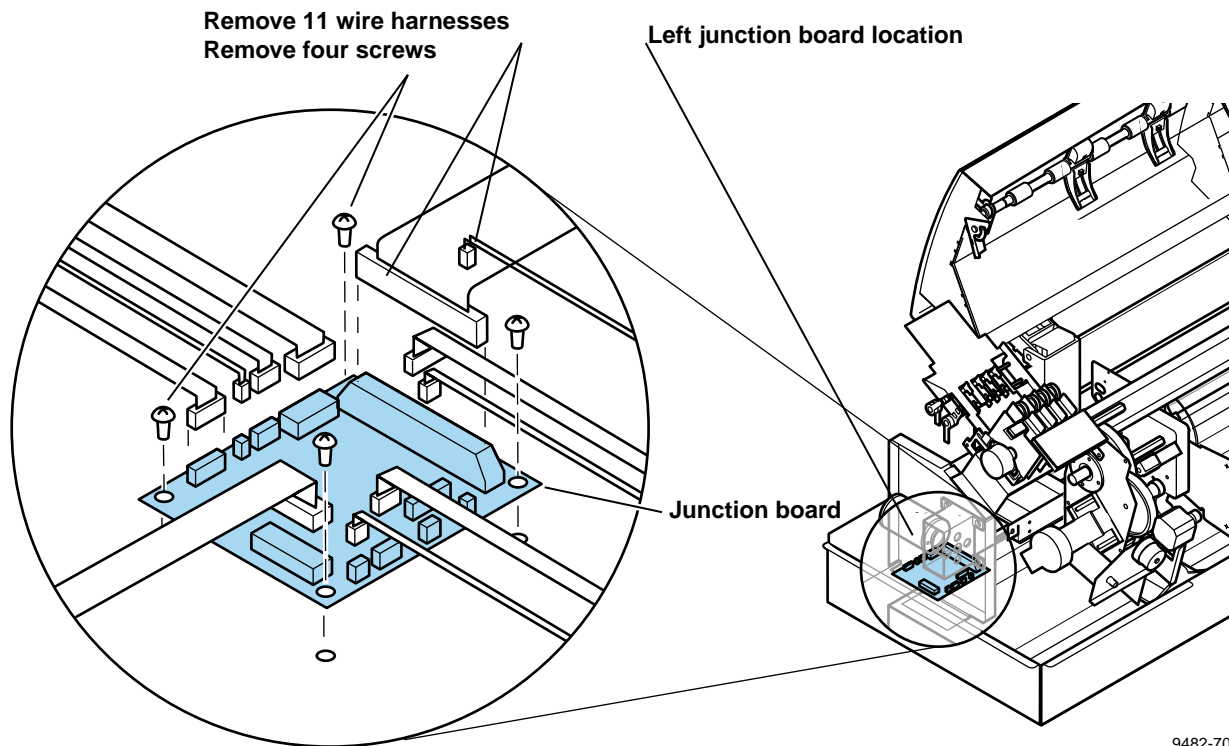


Figure 8-48 Removing the left junction board

Reverse these steps to install the left junction board.

Image processor board

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Disconnect all host interface cables and SCSI cables from the rear of the image processor board.
3. Remove the six screws securing the image processor board to the rear of the printer's card cage.
4. Slide out the image processor board.


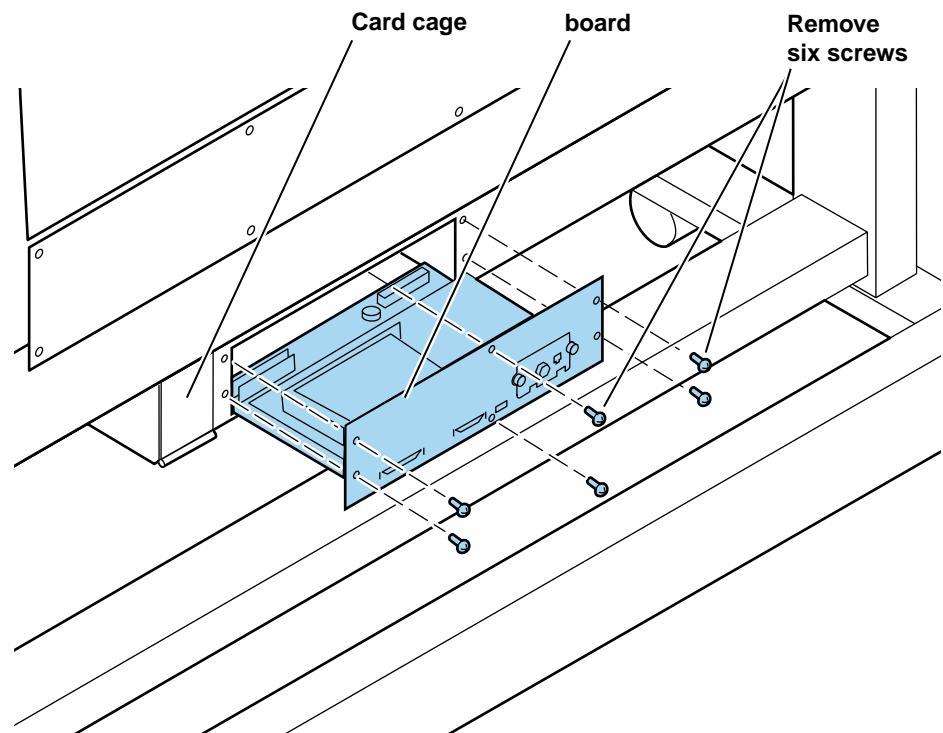


Figure 8-49 Removing the image processor board

Reverse these steps to install the image processor board.

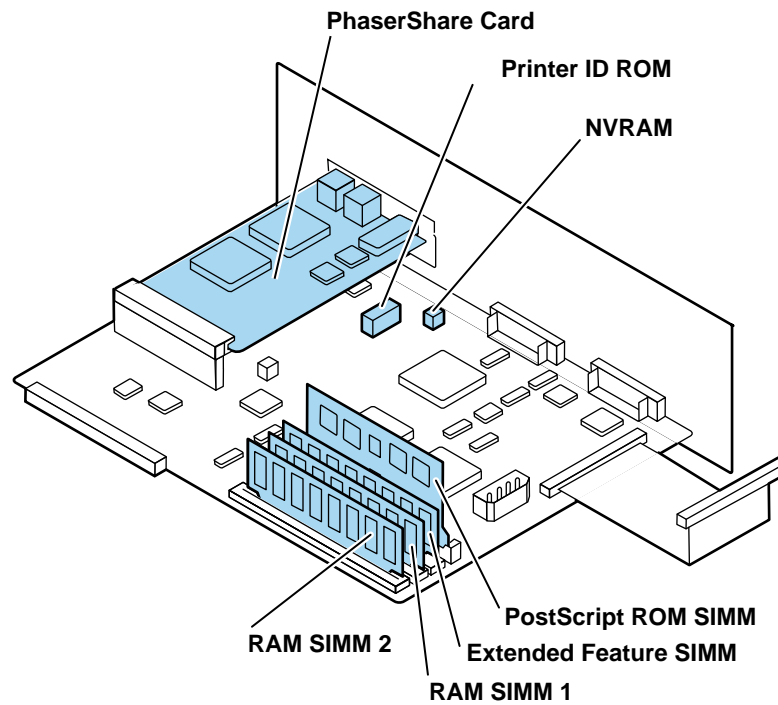If you are replacing the image processor board with a new board, you should transfer the items listed in the illustration below from the old board to the new board.




9482-117

Figure 8-50 Transfer components from the image processor board

RAM SIMM

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the image processor board as detailed in the previous procedure, "Image processor board" on page 8-63.
3. Connector SIMM 1 should always be filled with an 8 Mbyte RAM SIMM. Insert either a 16-Mbyte RAM SIMM or a 32 Mbyte RAM SIMM in connector SIMM 2. Insert the RAM SIMM in connector SIMM 2 (a), and tilt the module up until it locks in place (b).

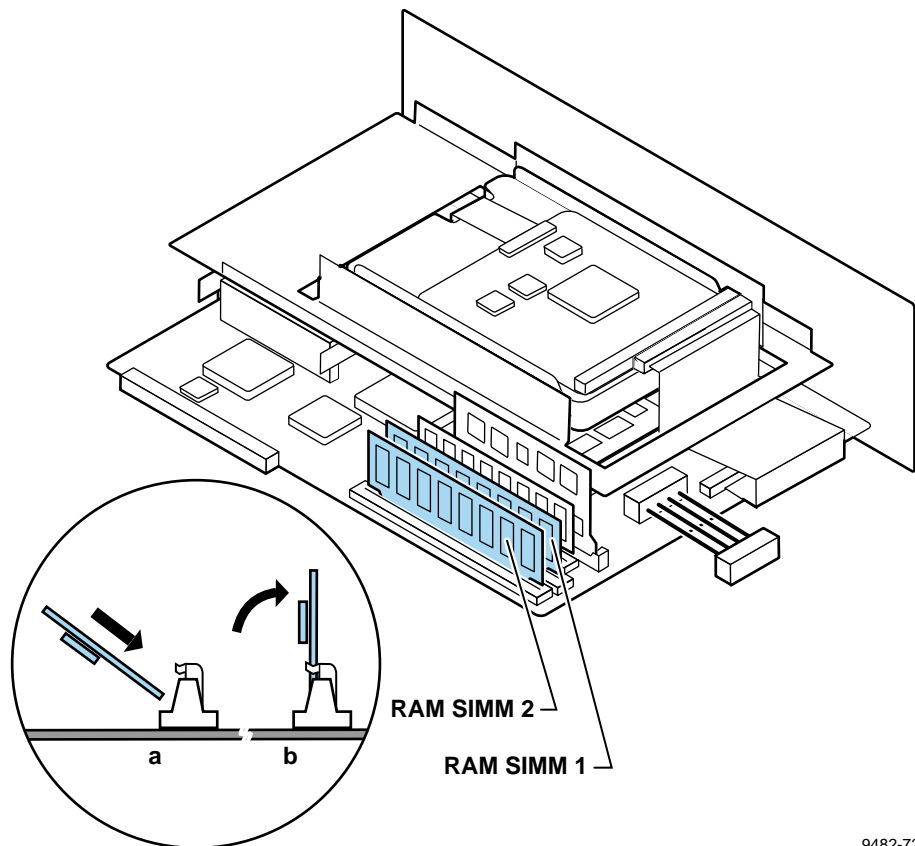When properly inserted, a tab on each end of the connector slips into a hole on each end of the RAM SIMM. Also, a pawl on each end of the connector latches around each end of the RAM SIMM to lock it in place.




9482-72

Figure 8-51 Installing a RAM SIMM

4. Reinstall the image processor board into the printer.
5. Reconnect the host interface cables. Turn on the printer and print the startup page; it indicates the amount of RAM installed in the printer.

Installing an Extended Features SIMM

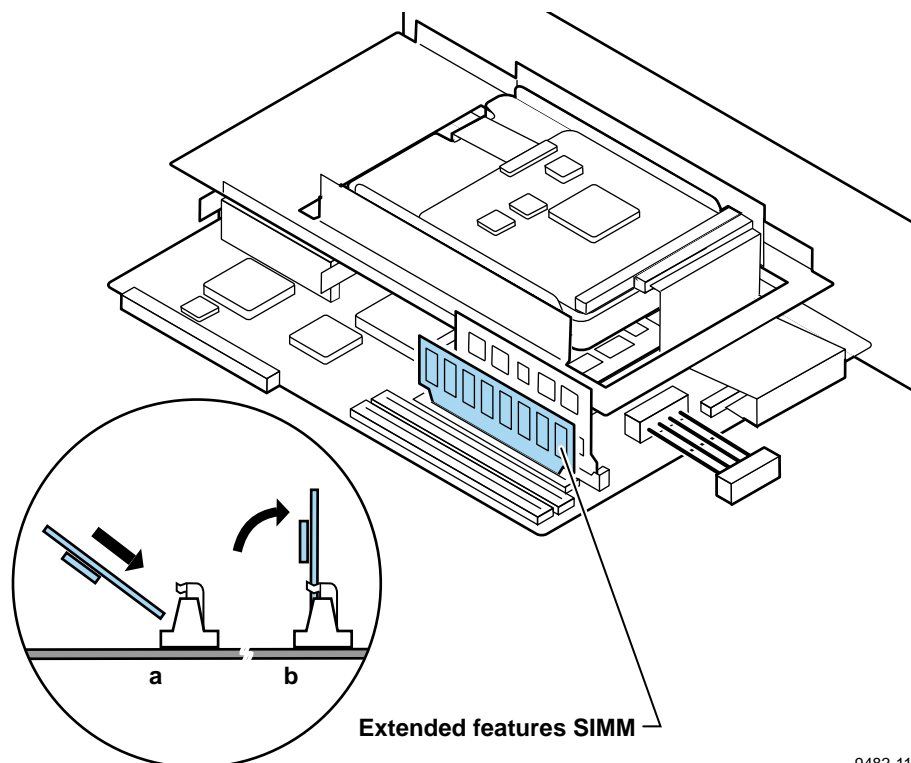1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the image processor board as detailed in the previous procedure "Image processor board" on page 8-63.
3. Remove the RAM SIMMs by spreading apart the pawls securing each end of the SIMMs in their connectors. This makes room to install the Extended Feature SIMM.
4. Insert the an Extended Features SIMM in connector KANJI/FEATURE (a), and tilt the module up until it locks in place (b). When properly inserted, a tab on each end of the connector slips into a hole on each end of the SIMM. A pawl on each end of the connector latches around each end of the SIMM to lock it in place.



9482-118

Figure 8-52 Removing the Extended Feature SIMM

5. Reinstall the RAM SIMM(s).
6. Reinstall the image processor board into the printer.
7. Reconnect the host interface cables. Turn on the printer and print the startup page; it indicates the feature set of the Extended Features SIMM in the printer.

PostScript code ROM SIMM

1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the image processor board as detailed in the previous procedure "Image processor board" on page 8-63.
3. Remove the RAM SIMMS and Extended Features SIMM (if installed) by spreading apart the pawls securing each end of the SIMMs in their connectors. This makes room to remove the PostScript ROM SIMM.
4. Remove the currently installed code ROM SIMM by spreading apart the pawls securing each end of the SIMM in its connector. Remove the SIMM.
5. Insert the a replacement code ROM SIMM in connector FIRMWARE (a), and tilt the module up until it locks in place (b). When properly inserted, a tab on each end of the connector slips into a hole on each end of the ROM SIMM. A pawl on each end of the connector latches around each end of the SIMM to lock it in place.

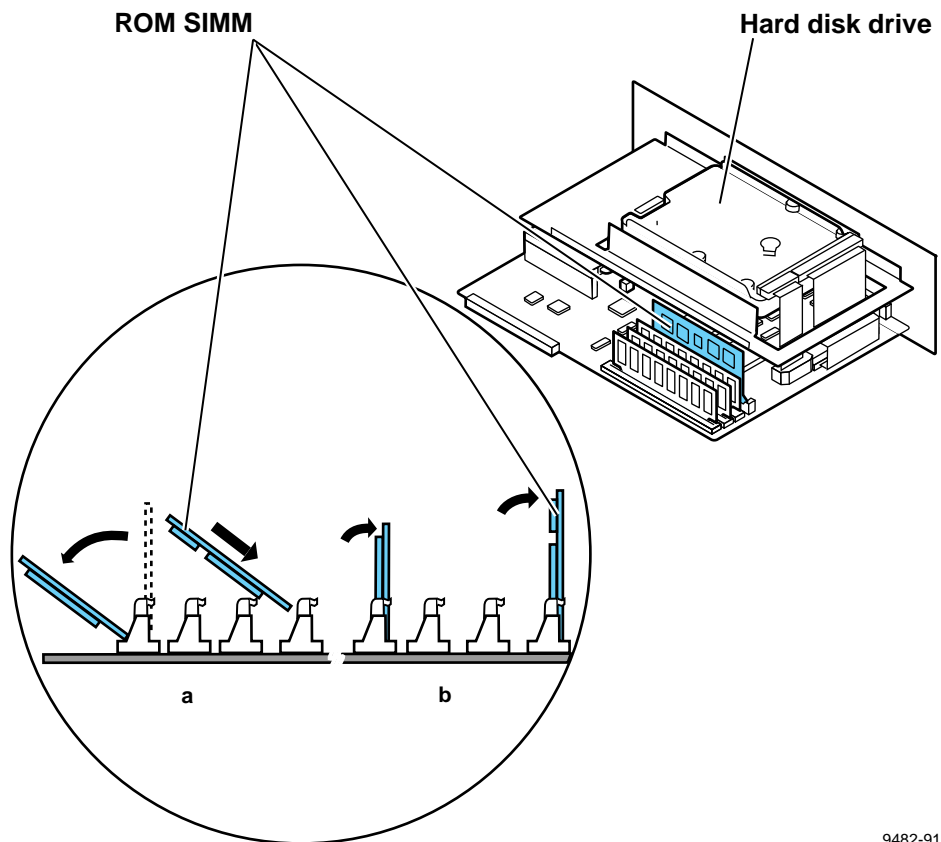



Figure 8-53 Removing the Postscript ROM SIMM

9482-91

6. Reinstall the Extended Features SIMM (if removed) and RAM SIMM(s).
7. Reinstall the image processor board into the printer.
8. Reconnect the host interface cables. Turn on the printer and print the startup page.

Network card

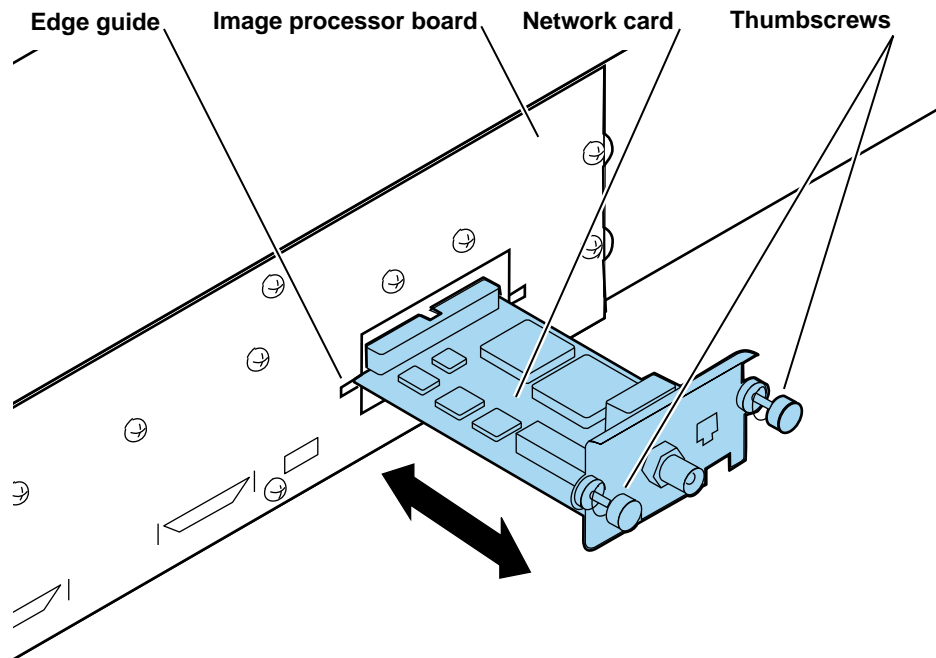1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Unscrew the two thumbscrews securing the network card to the back of the image processor board.
3. Slide out the network card.




9482-73

Figure 8-54 Removing the network card

Reverse these steps to install the network card.

Hard drive

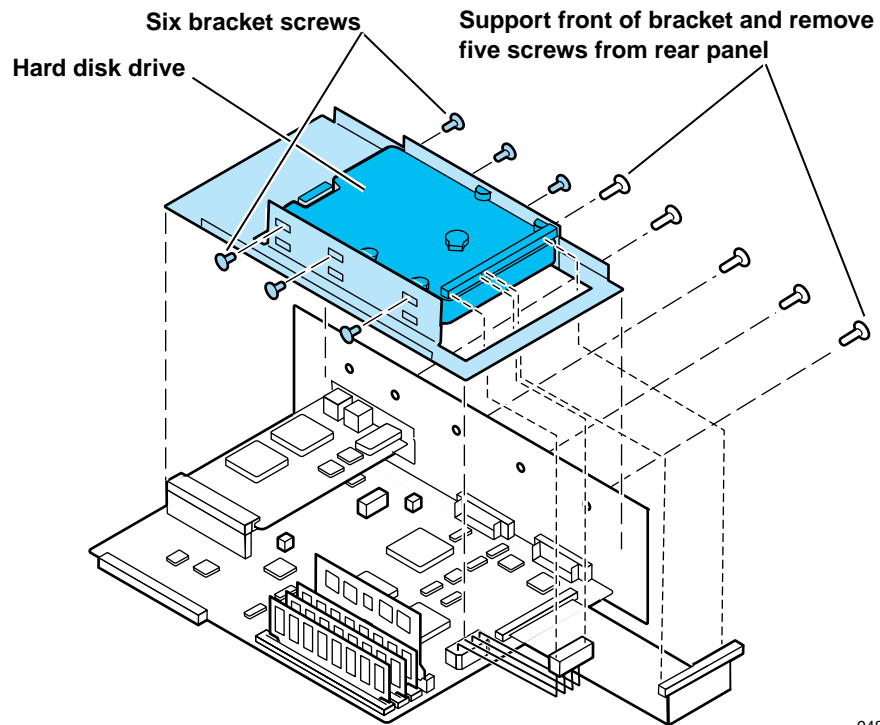1. Turn off the printer. Leave the power cord plugged in to provide a discharge path for static electricity.
2. Remove the image processor board as detailed in the previous procedure, "Image processor board" on page 8-63.
3. Disconnect the data cable and power wiring harness leading to the hard disk drive.
4. Remove the five screws securing the hard drive bracket to the inside of the image processor board's rear panel. Support the drive as you remove the screws.
5. Remove the six screws securing the hard disk drive to the bracket. Remove the drive.



9482-74

Figure 8-55 Removing the hard drive

Reverse these steps to install the hard drive. Upon power-up the image processor automatically checks, and if necessary, initializes the internal hard drive.

Install jumpers on Jumper Pins 1 and 4 to set the drive's SCSI address to 4. The jumpers are located at the edge of the board.

Checks and Adjustments

Required tools summary

■ Magnetic tip screwdriver — 8.5 in.	003-0293-00
■ Extension tip	003-1388-00
■ Phaser 600 printer tool kit	650-3531-00
■ Torque-limiting screwdriver	003-0827-00
■ Drum alignment tool	003-1683-00
■ Ink loader alignment jig	003-1684-00
■ Lower roller guide alignment jig	003-1682-00
■ Serial cable adapter, level shifter	174-3493-00
■ Mini DIN8-to-DB25M serial cable	012-1498-00
■ PC-based diagnostics diskette	063-2778-00
■ Hex wrench kit	003-1344-00
■ Grease	006-7997-00
■ Antistatic mat	006-7056-00
■ Flat-blade screwdriver	
■ Magnifying lens such as Micronta (Radio Shack) Cat# 63-851	
■ Alternate cables to run diagnostics from a PC:	
■ DB9F-to-DB25M serial cable	012-1312-00
■ DB25F-to-DB25M serial cable	012-1313-00
■ Tension gauge	003-0762-00

Front panel menu

The print engine features an interactive menu that allows you to review or change the printer's stored parameters as well as initiate test prints and printer service routines.

1. Turn on the printer.
2. Allow the printer to complete its power-up self-tests. The front panel displays this menu:

Ready Pause Menu


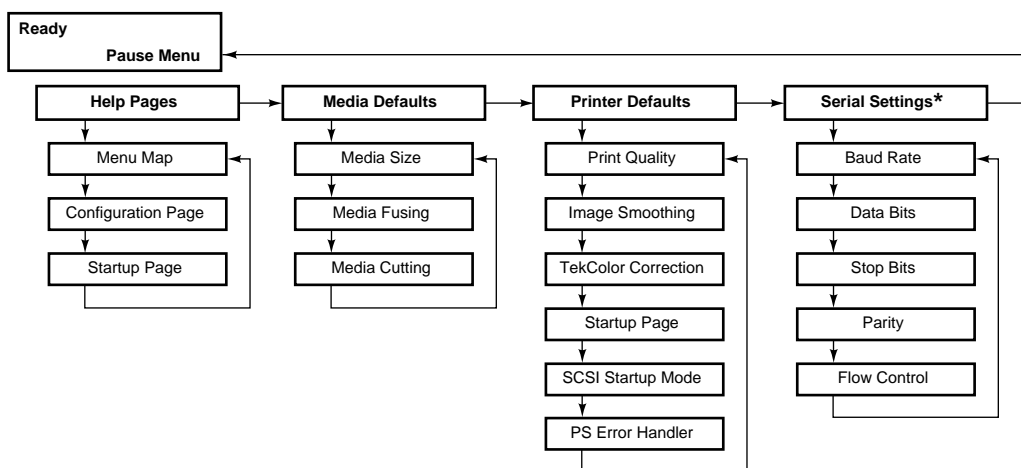


Figure 9-1 Main menu map

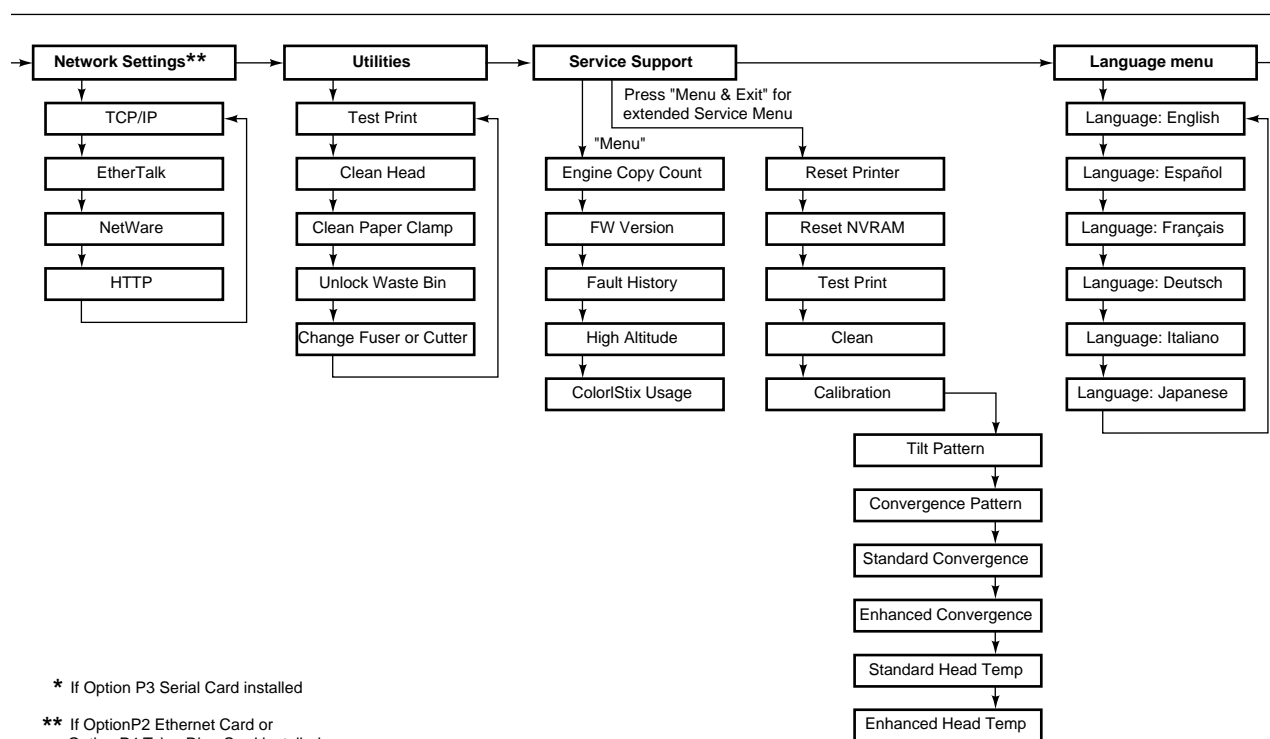3. To access the **Extended Service Support** menu, scroll to the main menu item **Service Support** and then press the **Menu** and then the **Exit** buttons, release both buttons together. Pressing **Menu** alone allows you to access the printer copy counts and fault history.



9482-75

Figure 9-2 Main menu map (cont.)

Printing test prints

Printing service test prints

1. Turn on the printer.
2. Allow the printer to complete its power-up self-tests. The front panel displays:
Ready
Clean Menu
3. **User Test Print.** Press the **Menu** button to access the Utilities menu. Press **Menu** and scroll to the **Test Print** item. Press **Print**. This prints a brief print quality mode check test print. It takes about 3 minutes to produce this print.
4. **Service test print.** Scroll to the main menu item **Service Support** and then press the **Menu** and **Exit** buttons together. At this level, you can access all the Extended Service Support menu items.
5. Scroll to the menu item **Test Print** and press the **Print** button. It takes about 8 minutes to produce this detailed print quality check test print.

Refer to Appendix B “Test Patterns,” it discusses each test print and what printing defect it reveals.

Printing the configuration page

While the printer is idle, press the **Menu** button to enter the printer’s menu. Scroll to the **Help pages** menu item. Press the **Print** button to print the configuration page. The configuration page shows a great deal of information regarding the data and set-up values stored in NVRAM. Refer to the topic, “Configuration page” on page 2-25 for an explanation of the configuration page.

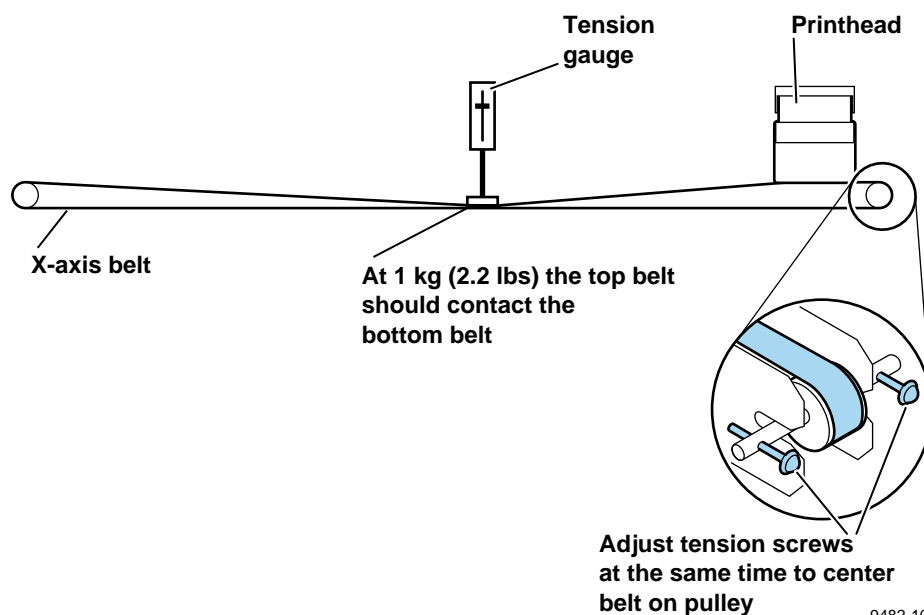
Adjustments

Drum alignment, belt tension, printhead tilt, convergence, temperature and voltage all interact to affect print quality. Follow these procedures to maximize print quality. In addition, if you replace a printhead you must make these adjustments to assure maximum print quality.

Printheads that have been in operation for some amount of time inevitably undergo an aging effect with a slight loss of print quality; the adjustment “Adjusting for an aged printhead” on page 9-31.

Printhead belt tension

1. Turn off the printer.
2. Open the top cover and remove the right cover.
3. Ensure the printhead is in its home position.
4. With a tension gauge with a wide-area tip (to not damage the belt), press down on the center of the top half of the X-axis belt until it contacts the lower-half of the X-axis belt.
5. To adjust the belt tension rotate the tension screws on the right X-axis pulley. Rotate the screws at the same time to keep the belt centered on the pulley.
6. Once the belt tension is correct, manually push the printhead to the left end of the printhead rails. Observe the X-axis belt as it rotates over its right and left pulleys; check to see that it stays centered on the pulleys.
7. Apply threadlock glue to the tension screws to secure them in place.



9482-109

Figure 9-3 Setting X-axis belt tension

Fuser belt tension

1. Turn off the printer.
2. Open the fuser. Remove the right cover.
3. Mover the fuser shuttle to the end of its travel.
4. With a tension gauge with a wide-area tip (to not damage the belt), press down on the center of the top half of the fuser belt until it contacts the fuser rail.
5. To adjust the belt tension rotate the tension screws on the right fuser pulley. Rotate the screws ant the same time to keep the belt centered on the pulley.
6. Once the belt tension is correct, manually push the fuser shuttle to the left end of its travel. Observe the fuser belt as it rotates over its right and left pulleys; check to see that it stays centered on the pulleys.

Apply threadlock glue to the tension screws to secure them in place.


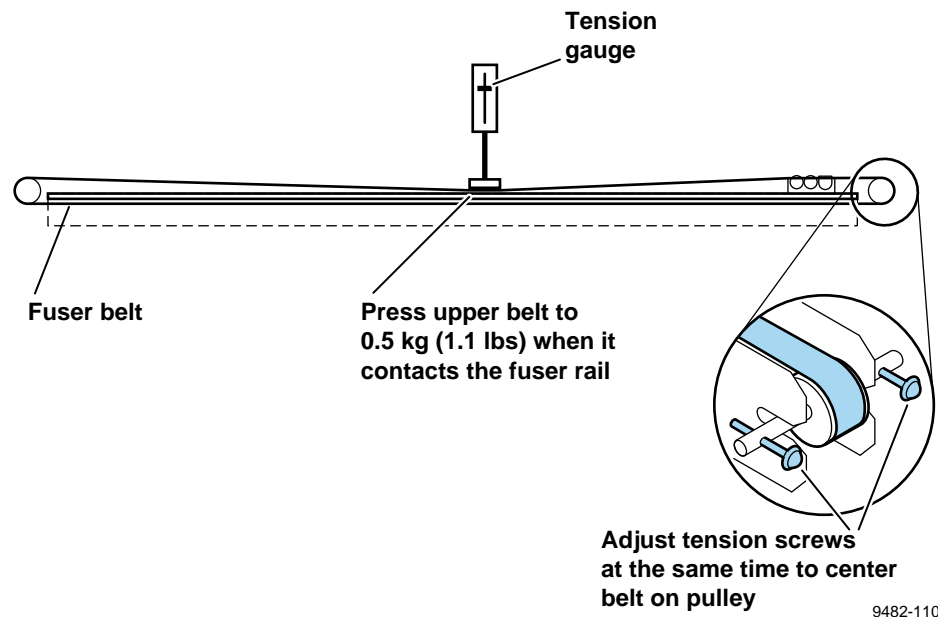


Figure 9-4 Setting fuser belt tension

Y-axis motor belt and drum belt tension

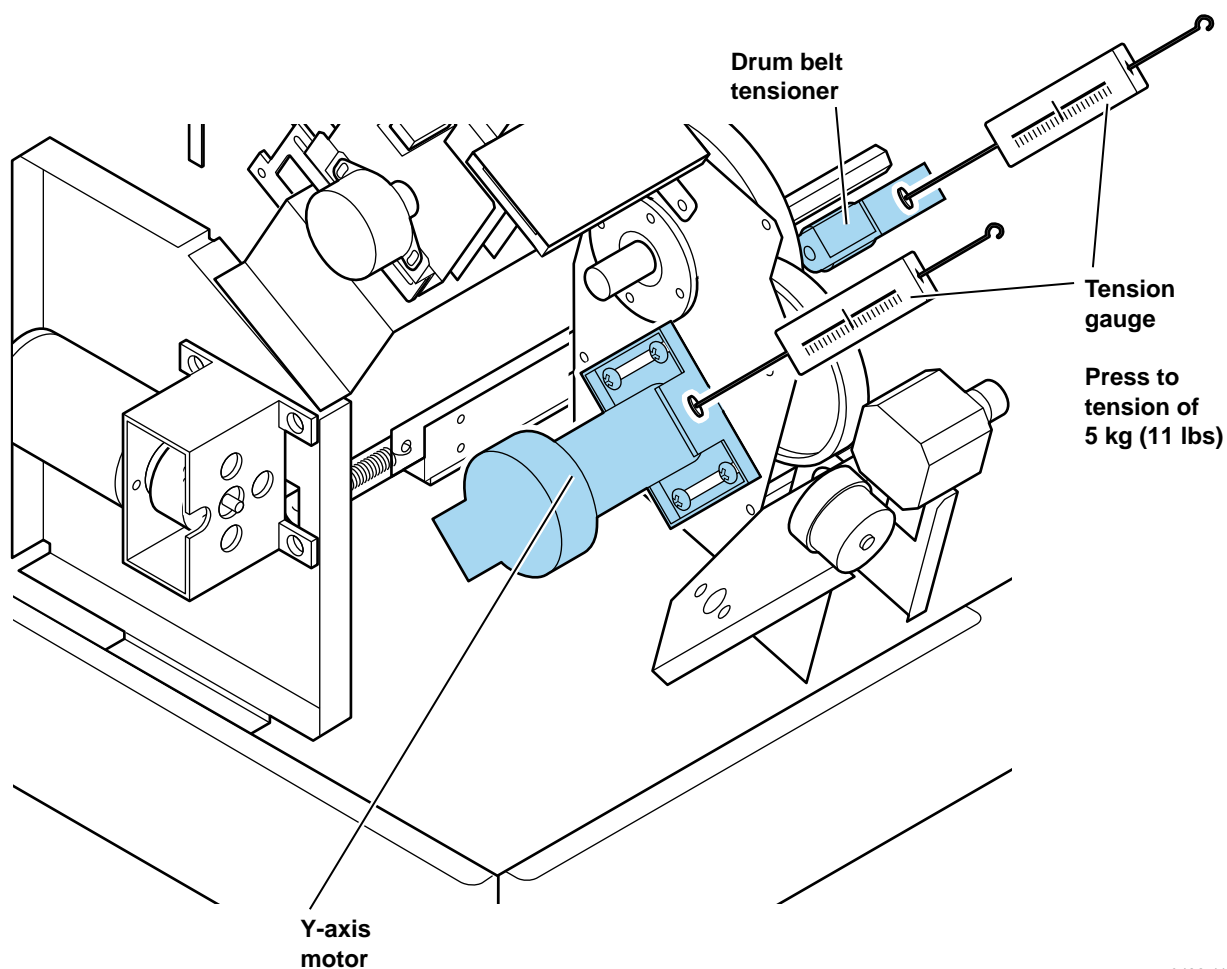1. Turn off the printer.
2. Open the top cover and remove the left cover.
3. Loosen the screws securing the Y-axis motor.
4. With a tension gauge, press down on the Y-axis motor belt tension with a pressure of 5 kgs (11 lbs.).
5. Tighten the screws securing the Y-axis motor.
6. Loosen the screws securing the drum belt tensioner.
7. With a tension gauge, press down on the drum belt tension with a pressure of 5 kgs (11 lbs.).
8. Tighten the screws securing the drum belt tensioner.




9482-111

Figure 9-5 Setting Y-motor belt tension

Maintenance station alignment

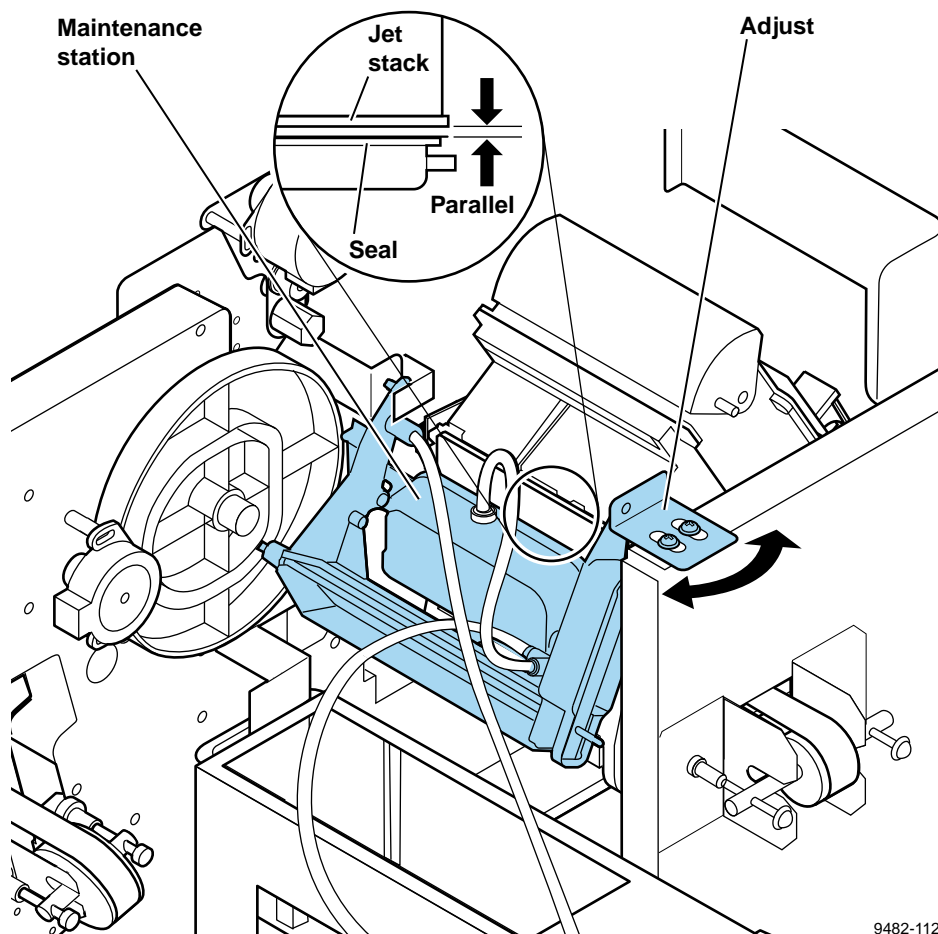1. Turn off the printer.
2. Open the top cover and remove the right cover.
3. Loosen the two screws securing the maintenance station's right bracket to the printer frame.
4. Rotate the bracket until the seal of the maintenance station is parallel with the faceplate of the printhead.
5. Tighten the two bracket screws.



9482-112


Figure 9-6 Setting maintenance station alignment

6. Use the PC diagnostics to laterally adjust the position of the printhead when it is positioned in front of the maintenance station for a cleaning cycle. Refer to the diagnostic menu item **Calibration — Engine NVRAM Menu**.

Lower roller guide alignment

1. Turn off the printer.
2. Remove the media roll and the roll cover. Remove the front cover plate located in front of the fuser.
3. Open the fuser.
4. Loosen the four alignment screws reached through the access holes through the fuser.
5. Place the alignment shims in place between the fuser and the lower roller guide. The shims should be under the lower roller guide and on top of the fuser.
6. Gently bring the fuser to a near-closed position, until it stops.
7. Tighten the four alignment screws.

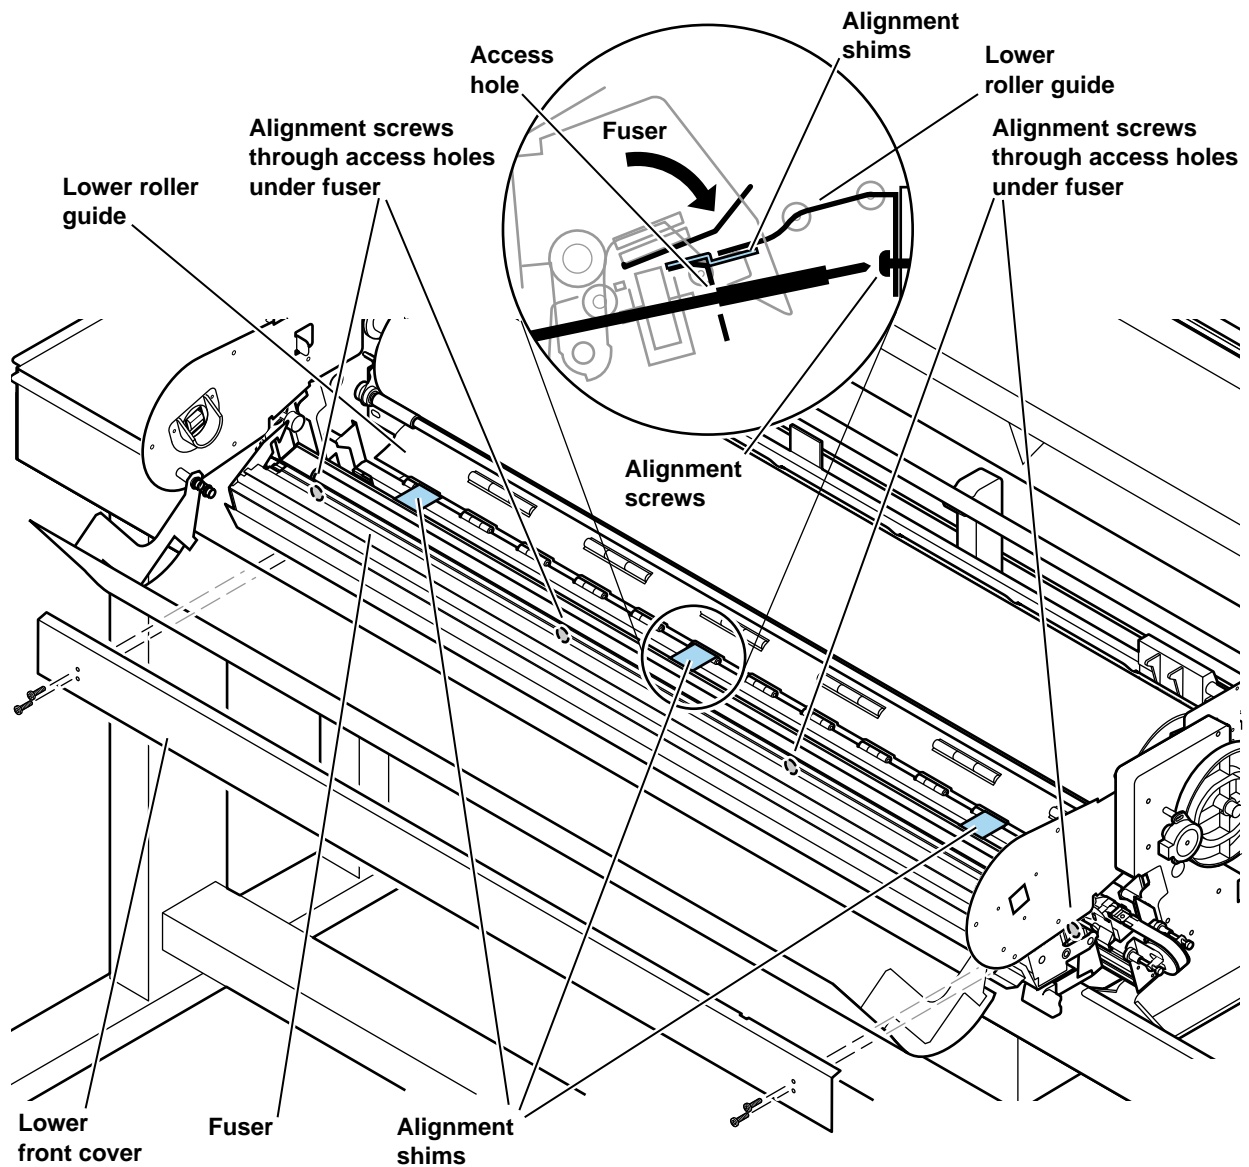8. Open the fuser and remove the shims.



9482-113

Figure 9-7 Aligning the lower roller guide to the fuser

Paper clamp alignment

1. Either manually or using the PC diagnostics, rotate the paper clamp to its ready position.
2. Inspect the paper clamp to ensure it is not bowed or bent and is parallel with the surface of the drum
3. If necessary, loosen the three screws securing the clamp to the clamp side plate and adjust the clamp so has about a 3 mm (1/8 in) gap from the surface of the drum
4. Tighten the three screws to secure the clamp in position.
5. Repeat the adjustment for the left end of the clamp.


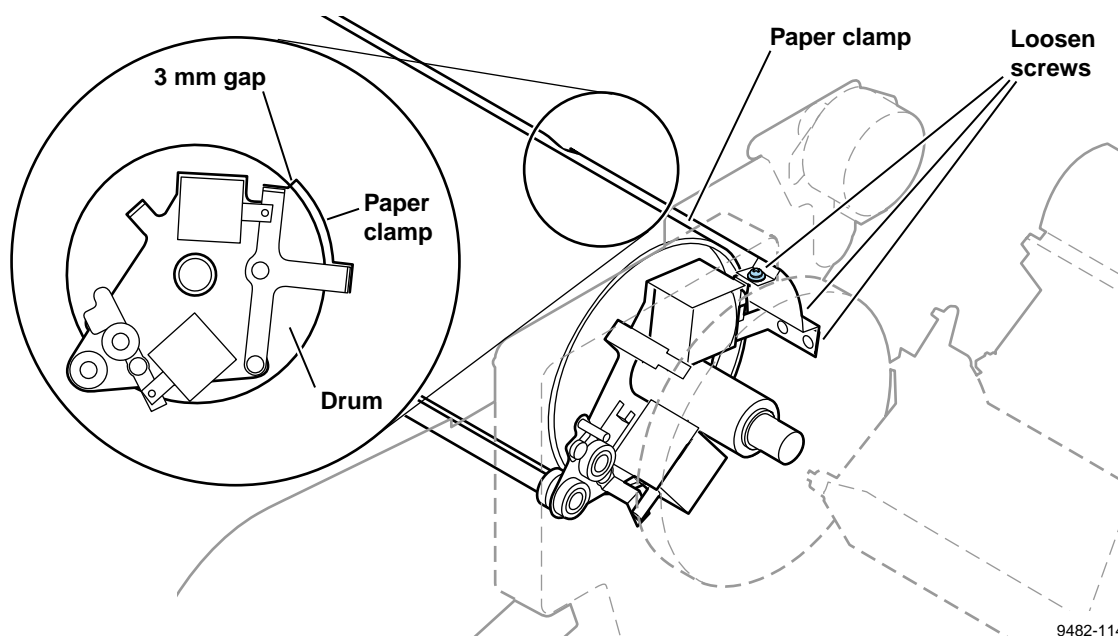


Figure 9-8 Setting the paper clamp gap

6. Rotate the paper clamp so its top edge is even with the bottom edge of the back tension blade.

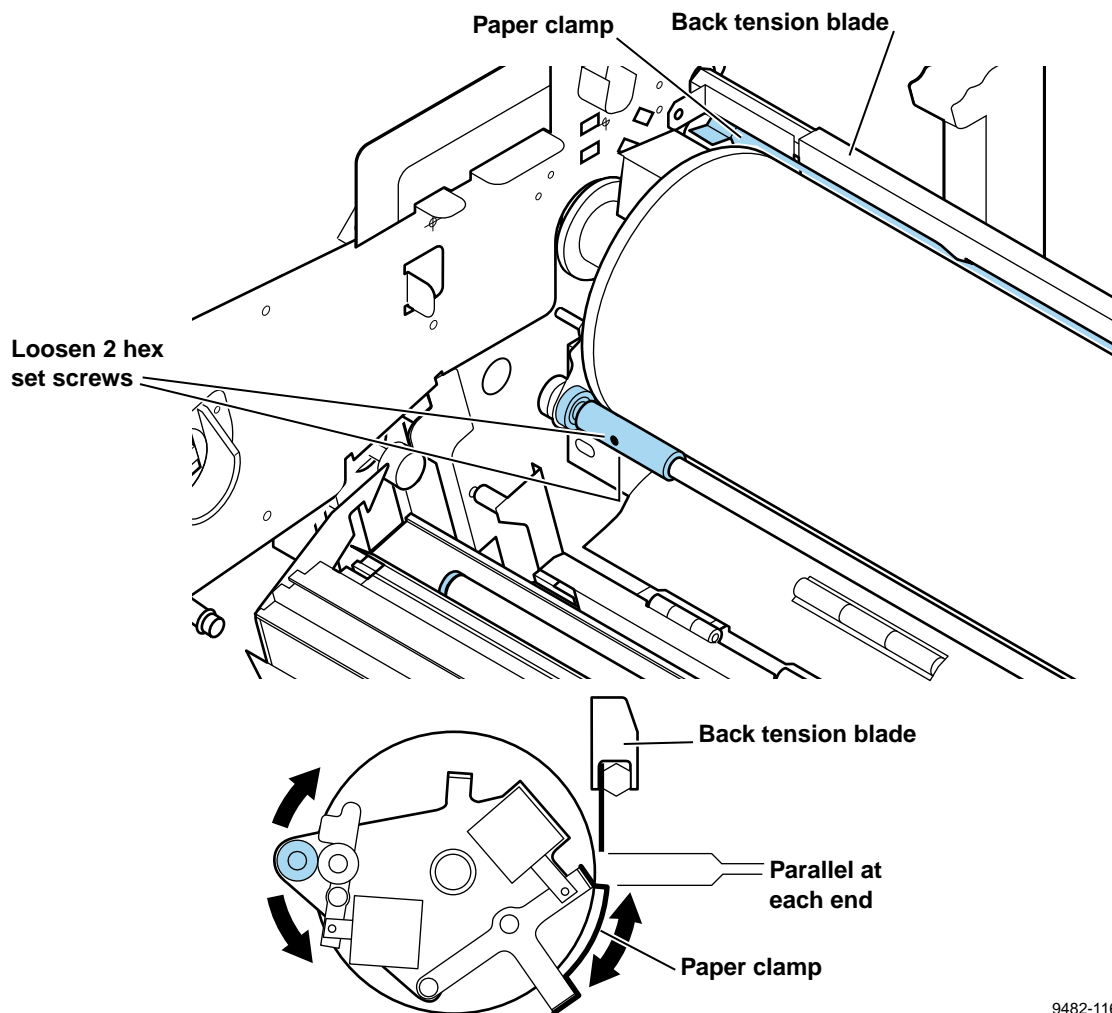7. If the edges are not even and parallel, loosen two set screws on the clamp drive shaft and re-position the shaft until the clamp is parallel with the back tension blade.



9482-116


Figure 9-9 Aligning the paper clamp

8. Tighten the set screws once the adjustment is correct.

Ink loader sensor flag adjustment

1. Inspect each sensor flag, ensuring that it is in the proper position, prior to being actuated. The actuated portion of the flags, when not actuated, should be perpendicular to the track of the ink sticks. Use a 1.5 mm hex wrench to adjust the flag on its shaft.
2. Inspect the flag portion of each flag; the flag of the ink low sensor should fully block the space between the sensor emitter and receiver when there are no ink stick in the printer. Use a 1.5 mm hex wrench to adjust the flag on its shaft.

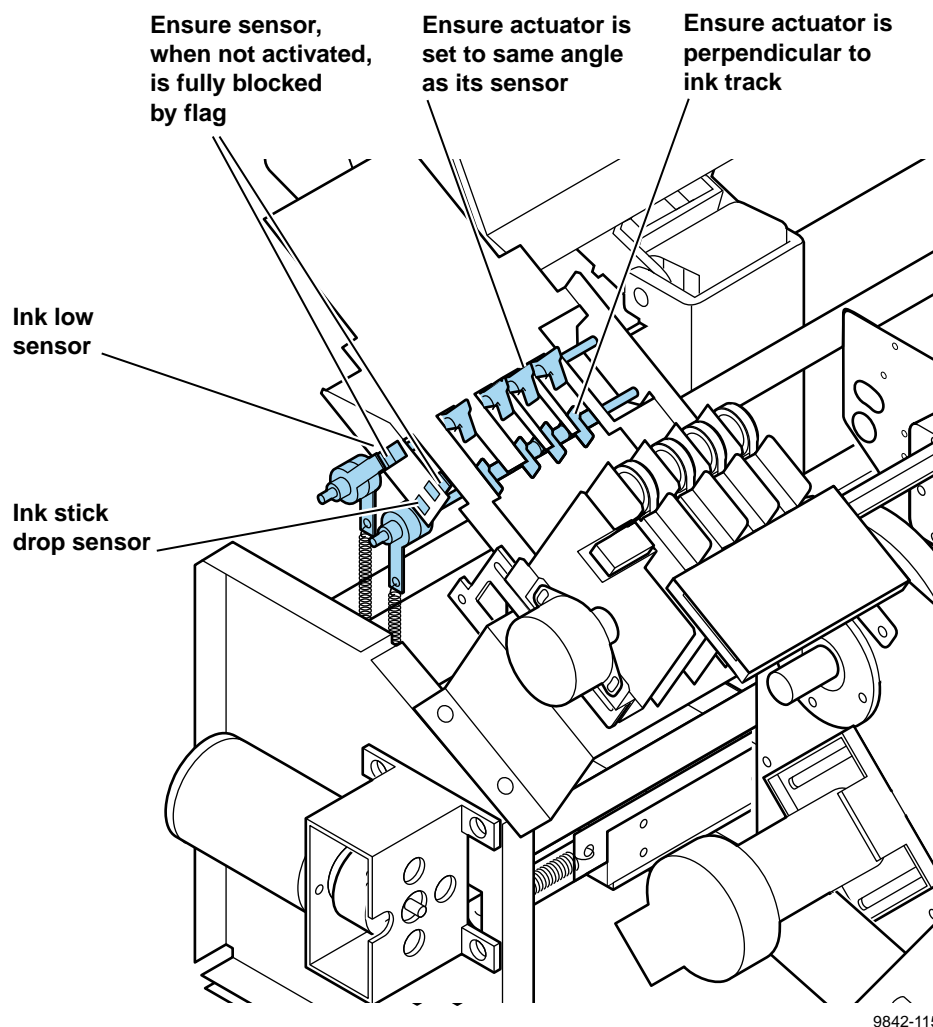The flag of the ink stick drop sensor is momentarily actuated when an ink stick drops into the printhead. The flag of the ink low sensor should fully block the space between the sensor emitter and receiver only at that time. Use a 1.5 mm hex wrench to adjust the flag on its shaft.



9842-115

Figure 9-10 Adjusting sensor flags

Ink stick load position

1. Empty the ink stick from the ink loader.
1. Use the PC diagnostics menu item **Servo Motors — Head (X-axis) Motor Position, Ink Load** to command the printhead to move to the ink load position.
2. With a flashlight, sight down the ink loader drop chute into the ink wells of the printhead. The ink wells should line up exactly with the ink drop chute. If they do not line up, enter a corrective value in the PC diagnostics test **Calibration — Engine NVRAM Menu, Item 18 Ink Load Pos. Adj.** Each increment is 1/300 of an inch.
3. Retest for proper alignment.

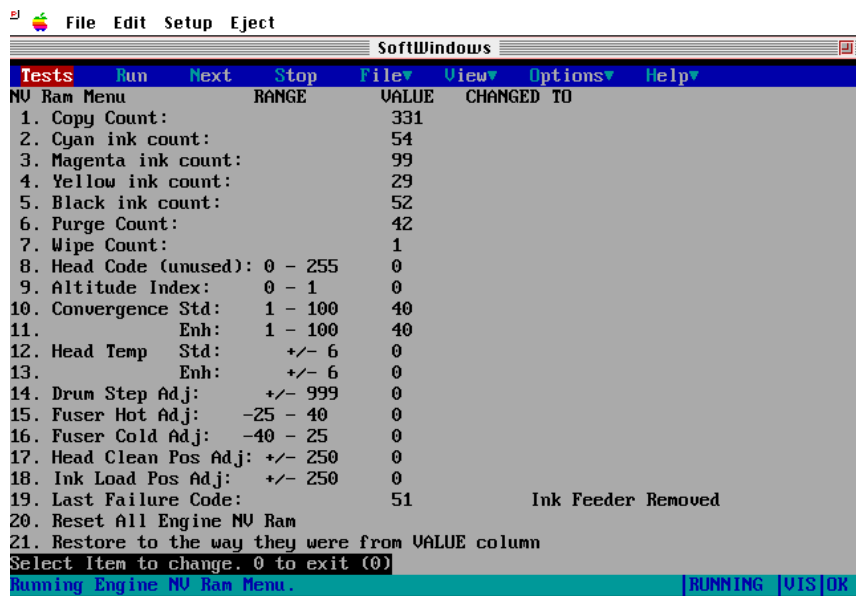


Figure 9-11 Setting the ink stick load position

Temperature offset adjustment for a new printhead

On the back of each printhead, a temperature offset value *may be printed*, such as -3 SH or +2 SH. This offset value must be set using the Extended Service Support menu. If no offset value is listed on the printhead, set the offset values to "0."

1. Scroll to the Head Temp Adjust menu's sub-menu Standard mode temperature adjustment. Set the value to match the offset on the rear of the printhead.
2. Scroll to the Enh Head Temp Adjust menu's sub-menu Enhanced mode temperature adjustment. Set the value to match the offset on the rear of the printhead. Exit the menu.

Printhead drive voltage adjustment

The voltage used to drive the printhead's piezo-electric crystals is unique to each printhead. Each printhead's required voltage is printed on the back of each printhead. Generally, once the voltage is set for a printhead, it is not changed. It may, in rare cases, be changed as the printhead ages.

In this procedure, you can check and adjust the voltages used to drive the printhead during printing. The HV+ and HV- voltages should always be equal but opposite in polarity from each other. Ensure that this is always the case when you adjust the printhead drive voltages.

1. Power down the printer.
2. Remove the small access panel on the front of the card cage to access the power supply test points inside.
3. Turn on the printer.
4. With a VOM, measure HV+ on Pin 1 (left pin; Pin 2 (center pin) is ground. Adjust the voltage to the required value listed on the back of the printhead. Use the left high-voltage adjustment potentiometer located to the left of the Pin 1 test point.

Measure HV- on Pin 3 (right pin). with a small screwdriver, adjust the voltage to the required value listed on the back of the printhead. Use the right high-voltage adjustment potentiometer located to the right of the Pin 3 test point.

Proceed to the next procedure "Printhead-to-media spacing (tailpiece adjustment)."

Printhead-to-media adjustment (tailpiece adjustment)

Note *All printhead adjustments must be made while the printhead is warmed up to its operating temperature.*

This adjustment is critical for the best print quality. It ensures that the printhead will always be the correct distance from the loaded media during printing, no matter the thickness of the media. *This adjustment must be correct, for all other print quality adjustment to be valid.*

1. Open the top cover and remove the right cover. Ensure that the printhead is in its home-position.
2. Manually rotate the head-to-media motor to lower the shim to its lowest point, inside the head-to-media assembly, on the right end of the back-tension blade. To ease lowering the shim, pull back on the back tension blade, moving the blade away from the drum. The shim should extend 1 mm below the blade. Then back the shim up by rotating the stepper motor 2 steps.

Caution In Step 3, while prying off the tailpiece cover, be careful not to damage the four sensor wires near the lower-left corner of the cover.

3. If in place, remove the snap-fit tailpiece cover (pry the lower snaps free and then hinge up the cover). Loosen the three tailpiece mounting screws one full turn.
4. Using the X-axis belt, gently slide the printhead about 3 inches away from its home position. Then push the tailpiece's slide ramp to the right (toward the home position) to tilt the printhead away from the drum. Then move the printhead so it is centered on the "dimple" at the right end of the back tension blade.

Note Perform Steps 5 and 6 as quickly as possible to prevent distorted settings due to thermal expansion.

5. Position the tailpiece's slide ramp to its left-most position (toward the ink loader). The printhead should move toward the drum.

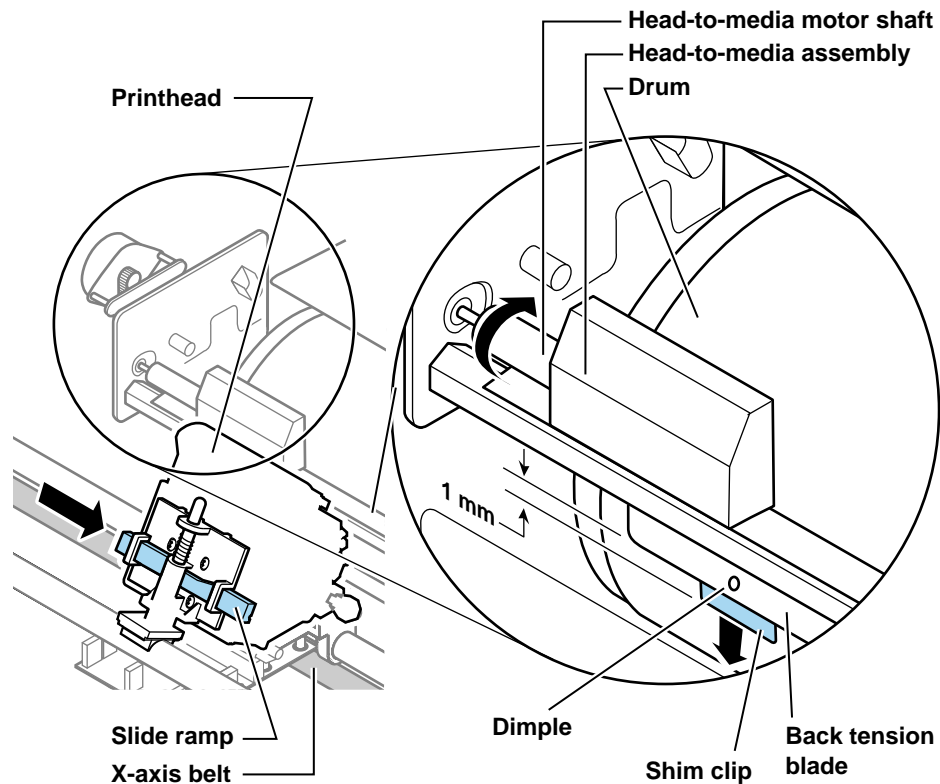


Figure 9-12 Positioning the printhead for the head-to-media adjustment

6. Attach the spring loader to the tailpiece. Tighten the three tailpiece screws to 3.5 in./lbs. (0.40 Nm) starting with the upper-right screw and proceeding clockwise. Remove the spring loader.


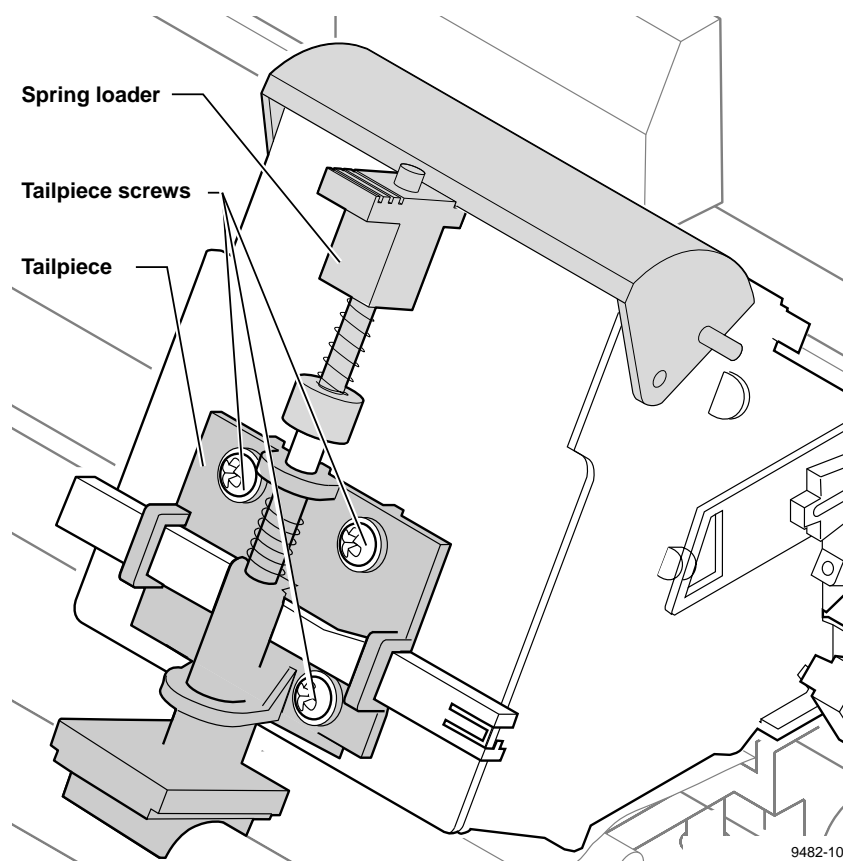


Figure 9-13 Adjusting the tailpiece

Warning *The printhead is hot. To avoid injury, don't touch it. Move the printhead by pulling its X-axis belt.*

7. Slide the tailpiece slide ramp full right and return the printhead to its home-position. Retract the shim by manually rotating the head-to-media motor.
8. Slide the slide ramp full-right and gently move the printhead so it is centered before the drum. Slide the slide ramp to its full-left position. The printhead should move toward the drum.

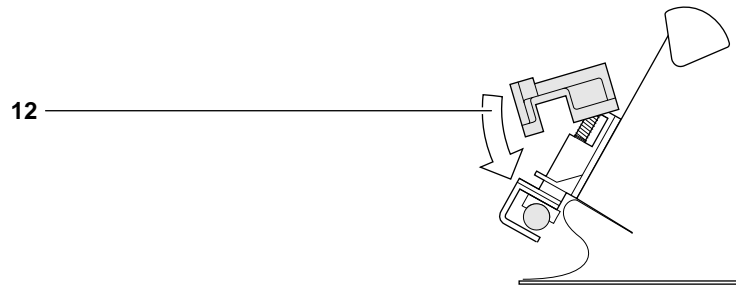9. Ensure there is a small gap between the printhead and the back tension blade. Determine this by gently pushing the printhead towards the drum — do not apply heavy pressure; push gently. The printhead should move slightly before contacting the back tension blade. If the printhead does not move because there is no gap, then repeat this procedure beginning at Step 1. Verify the gap for the center, left, and right edges of the printhead.
10. Slide the tailpiece slide ramp all the way to its right; the printhead will move away from the drum. Slide the printhead back to its home-position.
11. Make a test print on a sheet of the thin test media (2.7 mils thick) included with a replacement printhead. The tailpiece slide ramp should move about a 0.25 inch (6 mm) to the left when the printhead passes in front of the media and sets the head-to-media spacing. If the slide ramp does not move then the printhead-to-media gap is too large, repeat this procedure.
12. Install the tailpiece cover by hooking it on the top of the tailpiece and hinging it down to snap in place on the bottom of the tailpiece. Be careful to clear the torsion spring on the tailpiece.




Proceed to the drum alignment adjustment.

Drum alignment

Note *This adjustment should only be made once the printhead voltage and tailpiece adjustments have been correctly set.*

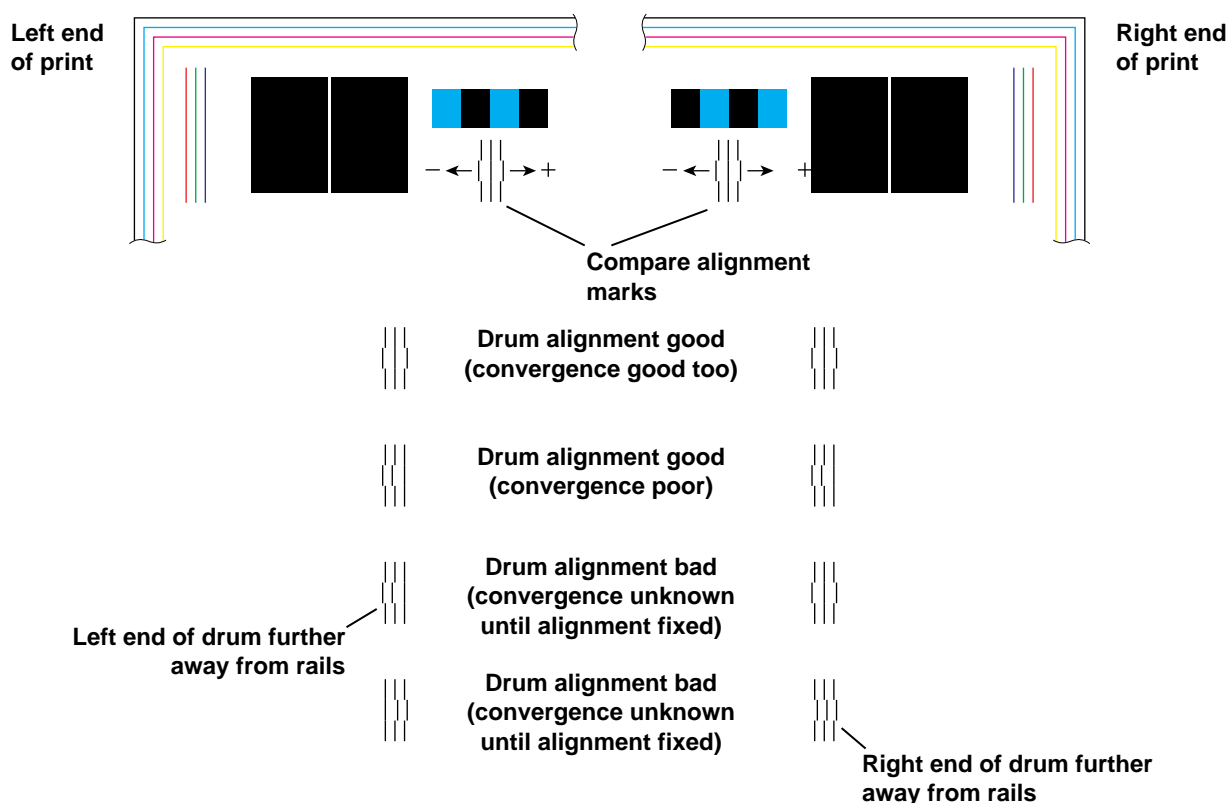1. Load ANSI E-size, ISO A0, Arch E or JIS B1 paper into the printer.
2. Turn on the printer and allow the printer to reach its Ready state.
3. Through the front panel menu, scroll to the Utilities menu and select the Test Print. Print the test print.
4. Holding the test print so the writing is upside down, examine the resulting test print. Compare the alignment marks at the far right and far left of the print. If the drum is correctly aligned to the printhead rails, the marks should be identical. If they are not, the drum is out of alignment and must be corrected. (The test print may also reveal other problems, such as poor convergence or printhead tilt, but these will be corrected in later procedures.)



9482-103

Figure 9-14 Checking drum alignment

5. If available, use the drum alignment tool to measure the distance the drum is out of alignment. Set the tool on the rails at the right end of the drum. Turn the tool's adjustment knob until the tool's tip contacts the drum surface. Zero-out the reading on the tool.

If you do not have the drum alignment tool, you will have to make successive "best guess" adjustments and test prints to bring the drum into alignment.

6. Back off the drum alignment tool's adjust knob and slide the tool to the left end of the drum. Turn the tool's adjustment knob until the tool's tip contacts the drum surface. Read the displayed value. It will show the difference in alignment from the first reading. The value read should be no more than +/- 5 mils (.005 in.).
7. At either the left end or the right end of the drum, loosen the drum bearing securing the drum to the printer frame. At the right end of the drum you must remove the maintenance station and the maintenance station drum cam. At the left end, you must remove the ink loader and portions of the Y-axis drive.
8. With one of the bearings loosened, push that end forward or backward to bring the drum into alignment. With the drum alignment tool, you can verify the alignment as you make the adjustment.
9. Once the alignment is correct, tighten the bearing, reassemble the printer and make another test print.
10. Repeat the adjustment until it is correct.

Bi-directional print convergence

Convergence is the key printhead “fine-tuning” adjustment. Convergence sets the bidirectional printing alignment of the printer. Generally, you only make convergence adjustments to compensate for any printhead print quality changes that occur due to printhead aging. Convergence is an electronic adjustment; no mechanical adjustments are required. You can individually set the convergence used for standard mode printing and enhanced mode printing (*set standard mode printing convergence first*). The default convergence values for new printheads are:

- Standard mode: 40
 - Enhanced mode: 40
1. Ensure that the printhead drive voltages are correct as explained in the earlier procedure, “Printhead drive voltage adjustment” on page 9-15.
 2. Scroll to and enter the Extended Service Support menu and then scroll to the Convergence Pattern menu item. Press **Print** to print a convergence test pattern so you can determine if a convergence change is required.

3. Examine the resulting print. With a magnifying lens, examine the convergence test print; it shows a series of alignment patterns, each indicates a slightly different alignment variation. Examine the printed patterns until you find the ones revealing the correct alignment for Standard and Enhanced mode printing. In the alignment patterns, the line to check for alignment is the middle line of the set of three vertical lines. If the drum is properly aligned and parallel to the X-axis rails then the sets of vertical lines, for each sample convergence setting, should be identical. If they are not, then the center line of each set will “drift” as you examine the left most patterns to the right most patterns.
4. Under ordinary circumstances, the alignment patterns 40 should show the best convergence. If the center bar is to the left of the top and bottom bar, then the printhead is “fast.” If the center bar is to the right of the top and bottom bar, then the printhead is “slow.” The final value should be between 50 to 30. If it is outside this range, recheck the printhead-to-media spacing. The printed alignment patterns shift in $\frac{1}{4}$ pixel increments.
5. If the Standard Convergence values must be changed, scroll to the Standard Convergence menu. Press the **Menu** button. The currently set convergence value is displayed, for example: Convergence: 40. Use the arrow keys to set the displayed value to the desired value. Press **Select** to save the displayed value.
6. If the Enhanced Convergence value must be changed, scroll to the Enhanced Convergence menu. Press the **Menu** button. The currently set convergence value is displayed, for example: Convergence: 30. Use the arrow keys to set the displayed value to the desired value. Press **Select** to save the displayed value.
7. Scroll back to Convergence Pattern menu and print another test print to check the adjustment.

If the alignment does not remain consistent, then the printhead-to-media spacing may not be correct or the head drive voltages may be incorrect. Check, clean and adjust, if necessary.

Also try printing on thinner and thicker sheets of media to ensure the tailpiece performs correctly.

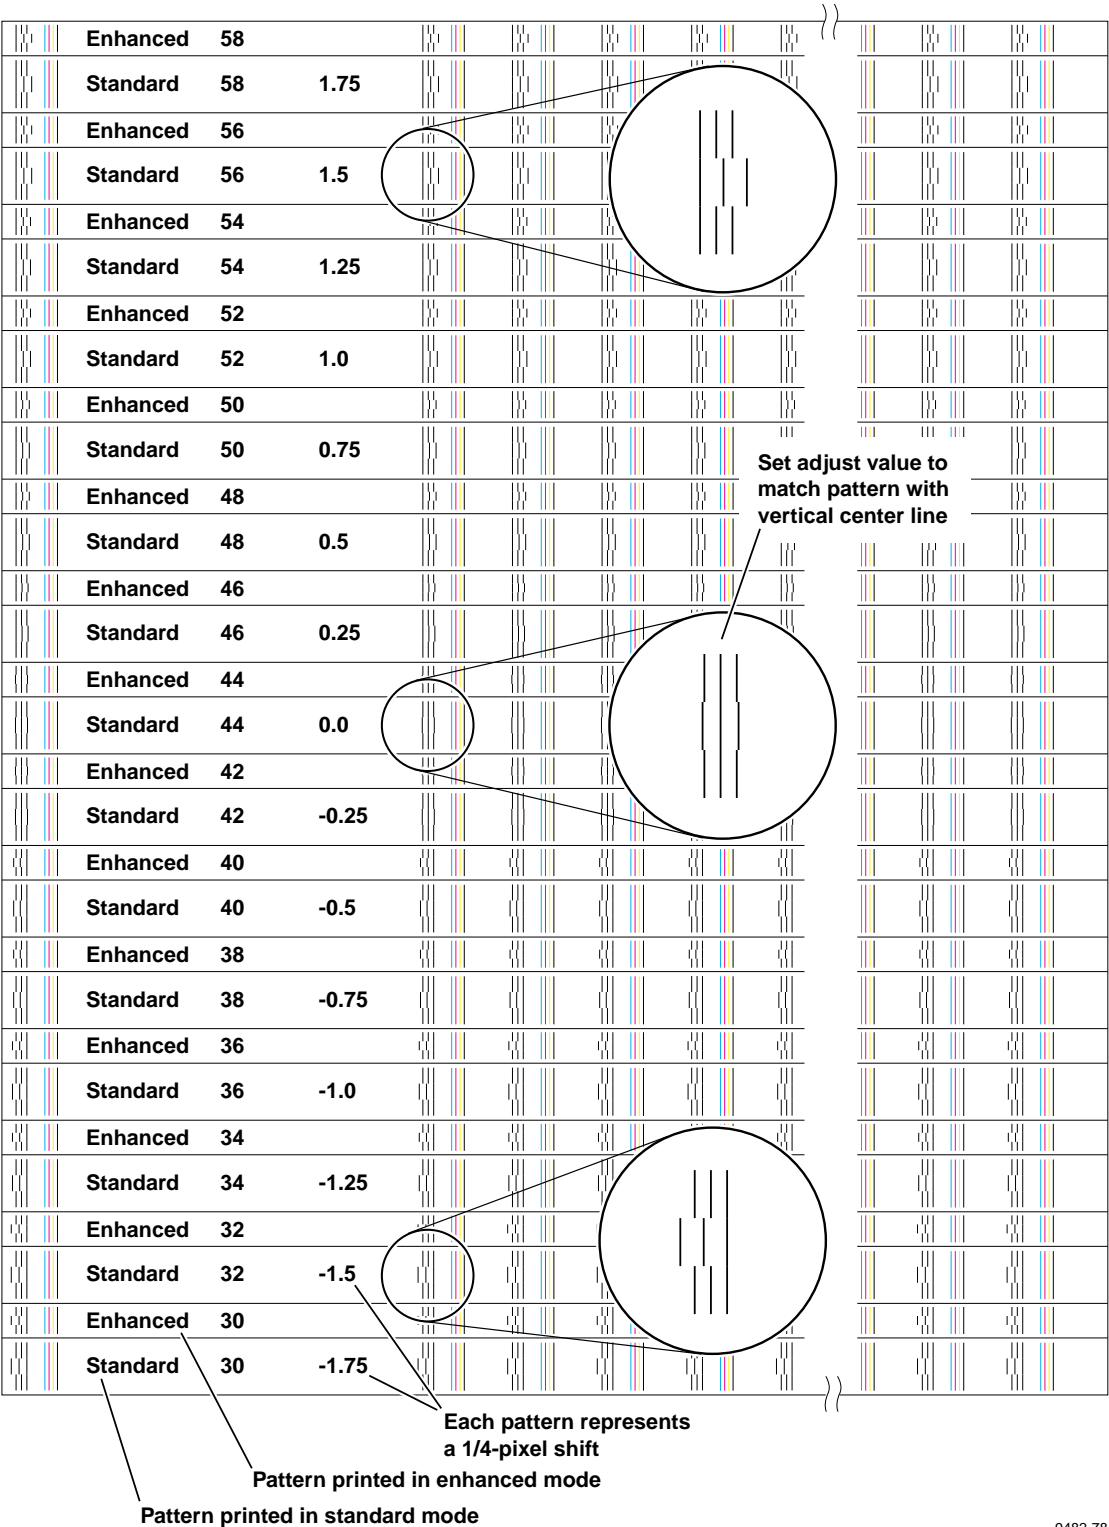


Figure 9-15 Setting bi-direction convergence

9482-78

Tilt adjustment

In this adjustment, you adjust the printhead's position in the printhead carriage. The adjustment sets the level of the magenta ink-jets at the right of the printhead face (viewed from the rear) level with the cyan ink-jets at the left of the printhead face.

1. Turn on the printer (if not already on).
2. If cold, allow the printhead to warm up to its operating temperature (this takes about 15 to 20 minutes from a cold start).
3. Scroll to the `Service Support` menu and enter the `Extended Service Support` menu by pressing both the **Menu** and **Exit** buttons at the same time.
4. Scroll to the `Tilt Adjust` menu item. Press **Print** to print a tilt adjustment pattern. The printer then prints a tilt adjustment pattern.
5. With a magnifying lens, examine the test pattern. Determine if the black printing is higher or lower than the cyan printing.

Warning *The printhead is hot. To avoid injury, don't touch it.*

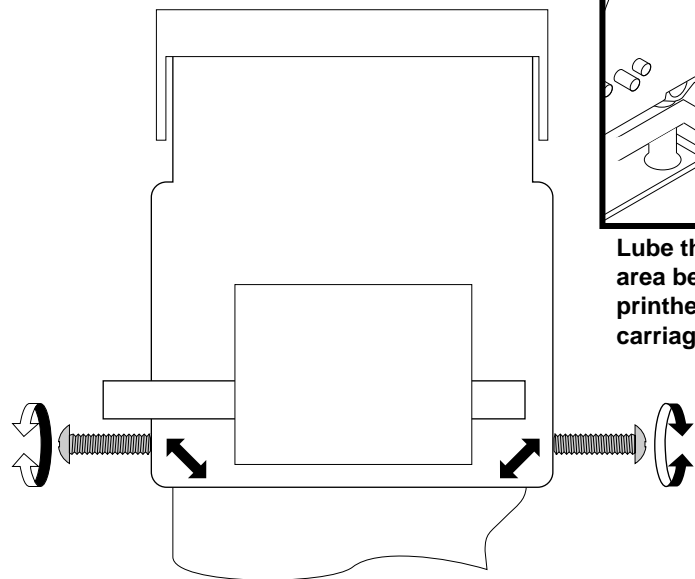
6. **If black is higher than cyan:** Loosen the left-side adjusting screw $\frac{1}{2}$ turn (*as viewed from the rear of the printer*). Tighten the right-side adjusting screw $\frac{1}{2}$ turn. Retighten the left-side adjusting screw.

If black is lower than cyan: Loosen the right-side adjusting screw $\frac{1}{2}$ turn (*as viewed from the rear of the printer*). Tighten the left-side adjusting screw $\frac{1}{2}$ turn. Retighten the right-side adjusting screw.

7. Press **Print** to print another tilt adjustment pattern.
8. Repeat Steps 6 and 7 until the black printing is level with the cyan printing.
9. Exit to the main menu.

Note *Misalignment must not exceed $\frac{1}{4}$ pixel.*

Adjust the printhead's position in the carriage




Test prints



Black higher than cyan

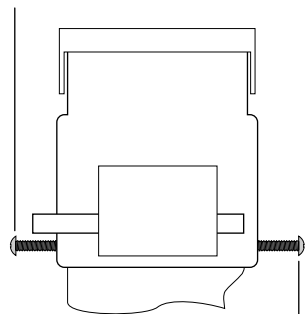First loosen this screw . . .




. . . then tighten this screw



Black lower than cyan

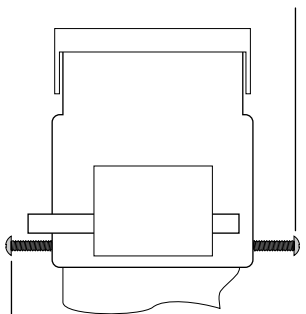First loosen this screw . . .



. . . then tighten this screw


9482-101

Figure 9-16 Setting the tilt adjustment

Drum step adjustment

1. Ensure that the printhead drive voltages are correct as explained in the earlier procedure, "Printhead drive voltage adjustment" on page 9-15.
2. Scroll to and enter the Extended Service Support menu and then scroll to the Drum Step Pattern menu item. Press **Print** to print a drum step test pattern so you can determine if a drum step change is required.
3. Examine the resulting print. With a magnifying lens, examine the convergence test print; it shows a series of alignment patterns, each indicates a 10 vertical pixels difference drum step variation. The pattern at the bottom of the print shows the current drum step setting. Ignore the gradated appearance of many of the patterns; that is an artifact the test. Only look for the thin horizontal black and white lines.
4. Under ordinary circumstances, the drum step pattern 0 should show the best convergence. If thin horizontal black lines are visible the drum is stepping too far between printhead passes. If thin horizontal white lines are visible the drum is not stepping far enough between printhead passes.
5. If the value must be changed, scroll to the Drum Step menu. Press the **Menu** button. The currently set convergence value is displayed, for example: Drum Step: 2. Use the arrow keys to set the displayed value to the desired value. Press **Select** to save the displayed value.
6. Scroll back to Drum Step Pattern menu and print another test print to check the adjustment.

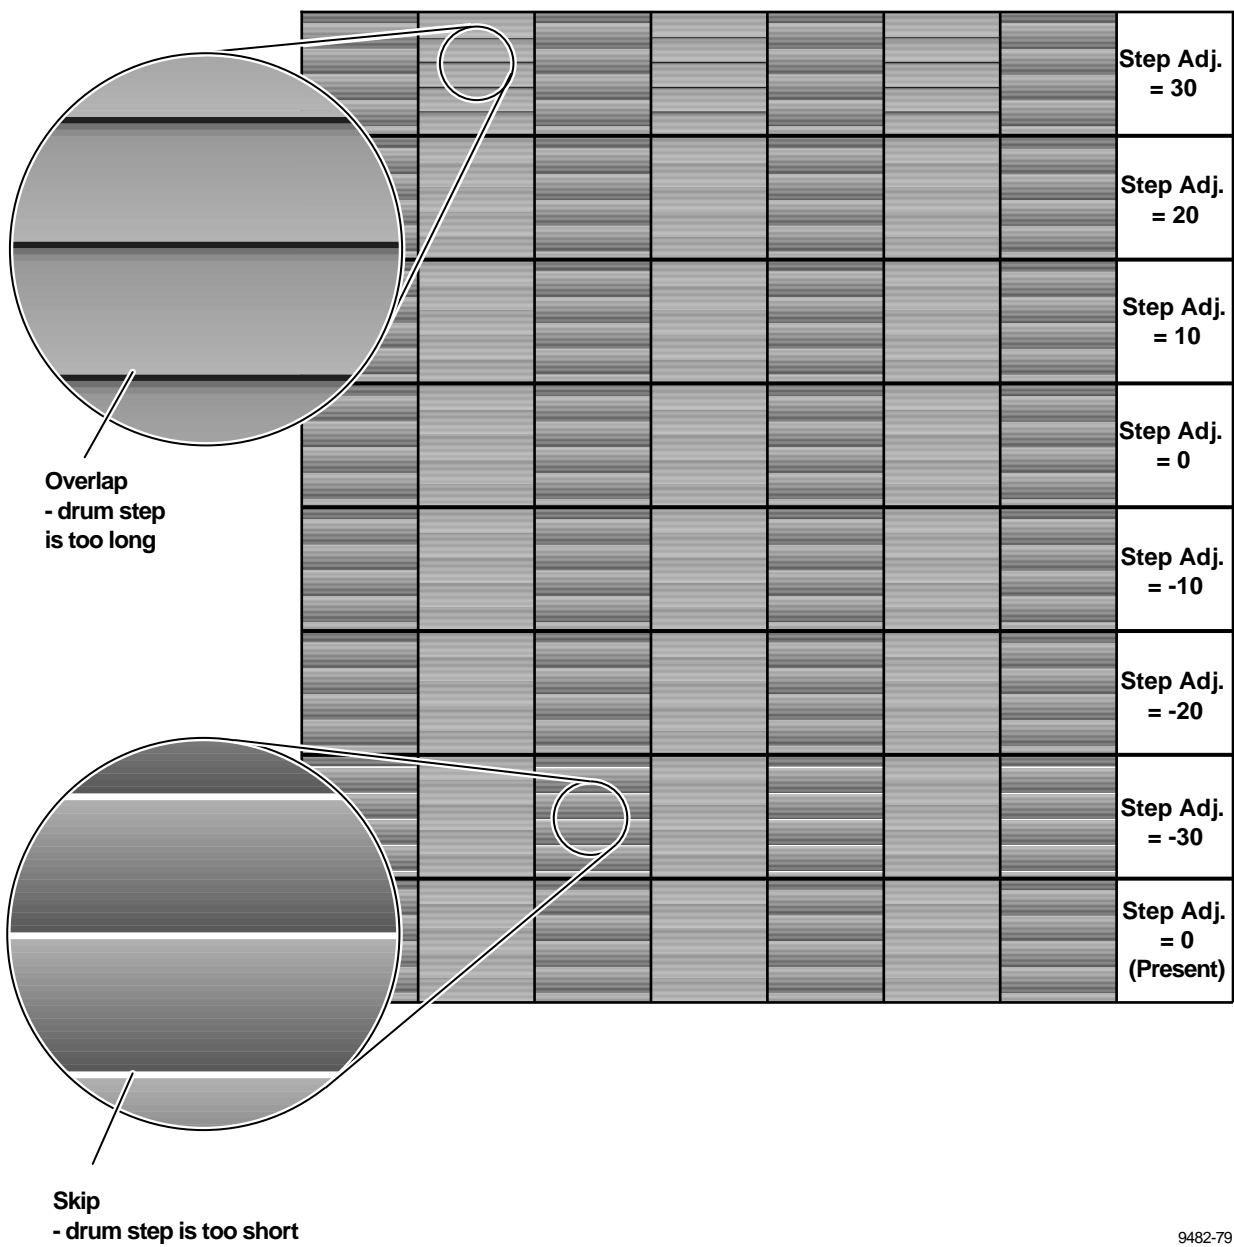If the alignment does not remain consistent, then the Y-axis belt tension may be incorrect. Check, clean and adjust, if necessary.



9482-79


Figure 9-17 Setting the drum step adjustment

Temperature offset adjustment

The temperature setting for each printhead is set at the factory. The printer gives you the means to slightly raise or lower this value, if necessary. In rare cases, you may do this to correct certain printing artifacts that may occur as the printhead ages. The default temperature offset value is 0.

There are separate temperature offset settings for both Standard mode and Enhanced mode printing. The adjust procedure is the same for each mode. Scroll to the `Head Temp Adjust` menu item to alter the Standard mode temperature adjustment. Scroll to the `Enh Head Temp Adjust` menu item to alter the Enhanced mode temperature adjustment. Generally, the offset value will be the same for both Standard and Enhanced mode printing.

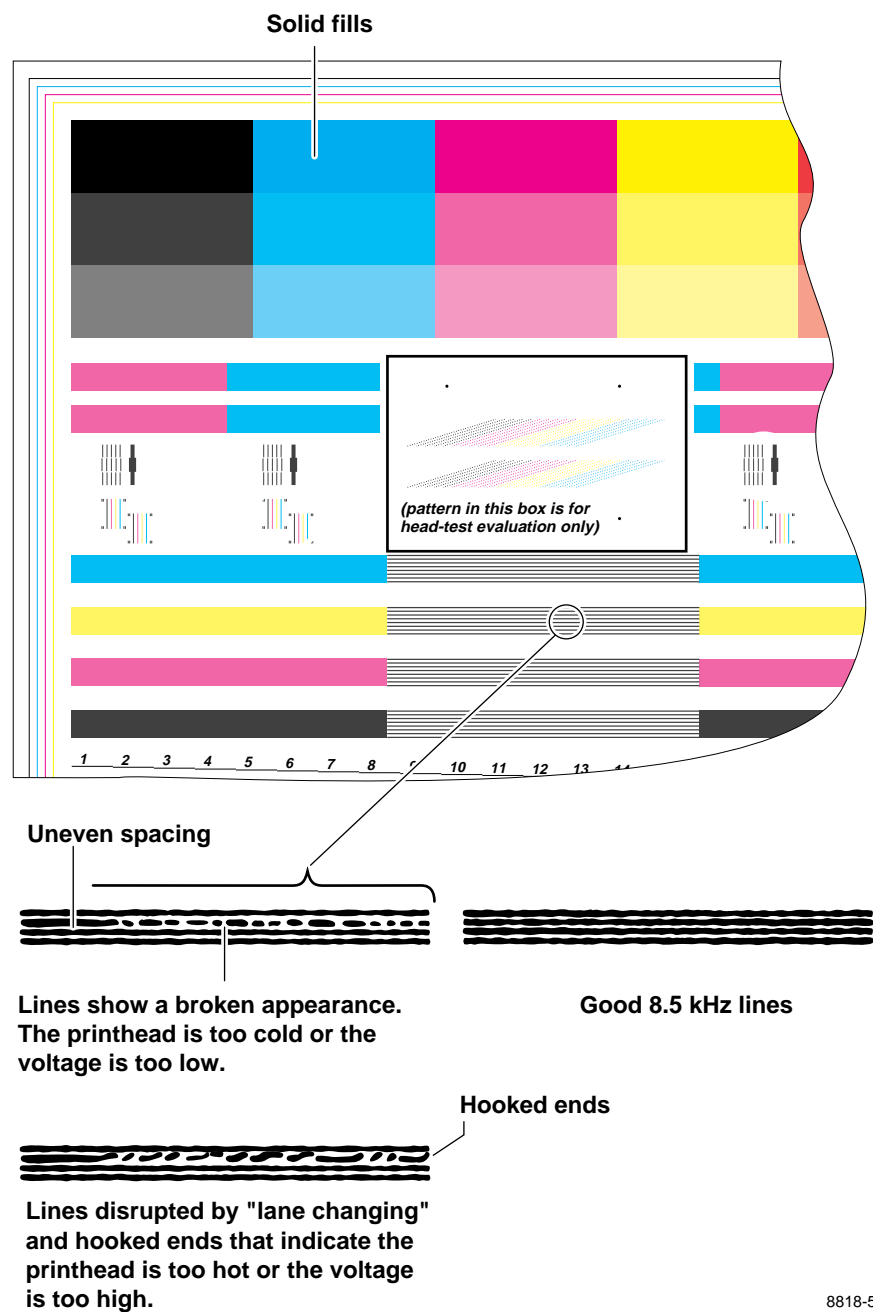1. Power up the printer to its ready state.
2. Scroll to and enter the Extended Service Support menu and then scroll to the `Test Print` menu item. Press **Print** to print a print quality check test print so you can determine if a temperature change is required.
3. Examine the test pattern. If the solid fill appears to be well-filled with even density and the 8.5 kHz manifold parallel line laydown is composed of even lines, then the printhead temperature is correct. Go to Step 7.
4. If the solid fill is appears well-filled and even, but the 8.5 kHz pattern is composed of uneven lines that appear to jump in and out of neighboring lines (this is called lane-changing) and feature lines that end with a trailing edge that deflects up or down, then the printhead temperature is too hot and must be lowered. If the lines appear to be broken with small gaps, then the printhead temperature is too low and must be raised.
5. Scroll to and enter the Extended Service Support menu and then scroll to the `Standard Head Temp` or the `Enhanced Head Temp` menu. It displays the currently set value between +6 and -6; 0 is the default value.
 - a. Press the arrow keys to scroll through the values.
 - b. Then press **Select** to save the desired value.
6. Make another test print and, if necessary, repeat the value change until the 8.5 kHz pattern is correct.
7. Since changing the printhead temperature alters the viscosity of the ink, its travel time from the jet nozzle to the paper is changed. Proceed to the convergence adjustment earlier in this procedure to ensure that bi-directional printing is correct.



8818-58

Figure 9-18 Printhead temperature adjustment

Sensor calibration

Using the PC-based diagnostics, you can adjust the sensitivity of the reflective-type paper edge sensors mounted on the printhead. This adjusts the sensor to detect the difference between the reflection of the drum and the reflections from the media loaded on the drum, particularly translucent media.

1. Turn on the printer and enable the PC diagnostics as explained in the Chapter 6 topic, “PC-based diagnostics” on page 6-26.
2. Run the diagnostic test **Calibrations — Sensor Calibration ... Load Cal Media**. Load a hand-fed sheet of Phaser 600 Tektronix-brand translucent film; use a pre-cut B-size sheet. The printer will advance the media into the print position.
3. Next, run the diagnostic test **Calibrations — Sensor Calibration ... Adjust Thresholds**. The printhead will scan across the media loaded on the drum, and adjust its sensors to the reflectivity of the drum and the media loaded on the drum.
4. Once completed, remove the media and exit the diagnostics.

Adjusting for an aged printhead

As a printhead ages, its print quality may change. It may not eject ink droplets with the same force as when it was new; the flight-time of the ink droplets has decreased. This results in bidirectional mis-convergence. This can be adjusted for. If you encounter a printer that has lost convergence or has its Standard and Enhanced convergence values significantly changed, then you should follow these steps to adjust the printhead's convergence:

1. Set the printhead-to-media spacing (tailpiece adjustment) as explained earlier in the topic, "Printhead-to-media adjustment (tailpiece adjustment)" on page 9-15.
2. Ensure that the printhead tilt is correct. Correct it if it is not, as explained in the topic, "Tilt adjustment" on page 9-24.
3. Scroll to the Extended Service Support mode and scroll to the menu item Standard Convergence menu item. It will display a value such as: Convergence: 44. Use the arrow keys to set the displayed value to 40; the printhead default value. Press **Select** to exit the menu, which saves the displayed value 40. Scroll to the Enhanced Convergence menu item and set it to 40. Scroll to the Standard Head Temp menu item and the Enhanced Head Temp menu items and set each to 0.
4. Scroll to and enter the Extended Service Support menu and then scroll to the Convergence Pattern menu item. Press **Print** to print a test pattern to determine if a change is required.
5. Examine the Standard mode alignment marks in the test print. If the center of the alignment mark is shifted to the left (minus direction — this is called a "slow" printhead), then the printhead voltage needs to be raised. (Refer to the earlier topic "Bi-directional print convergence" on page 9-21 for details on interpreting a convergence test print.)
6. Measure the HV+ and HV- voltages at the engine control board's power connector at the power supply; Pin 1 is HV+, Pin 2 is ground, and Pin 3 is HV-. Increase HV+ and HV- in 1 VDC increments. Keep the + and - values the same; that is, if the "+" value is +79, the "-" value should be -79. Increasing HV+ and HV- decreases the ink droplets flight-time to its original, expected value.
7. Press **Print** to print a convergence test pattern so you can determine if a convergence change is required. Examine the test print alignment marks for standard mode printing mis-convergence.
8. If mis-convergence still shows, repeat Step 5, increasing HV+ and HV- in 1 VDC increments, and repeat Step 6, printing a test print and checking the alignment marks, until alignment is correct.
9. If the Enhanced printing mode alignment patterns show mis-convergence, you can scroll to the Enhanced Convergence menu item and "fine-tune" the convergence as explained in the topic, "Bi-directional print convergence" on page 9-21.

Vacuum check

Tools required

- Magnetic screwdriver
- Vacuum gauge
- PC diagnostics

Use this check to verify the actions of the vacuum pump and the solenoid valve. In addition, you can determine if the maintenance station is sealing properly against the printhead faceplate.

1. Turn off the printer and remove the power cord.
2. Remove the top and right-side covers as explained in the Chapter 8 topic, "Printer cabinet" on page 8-2 .

3. With a T-connector, connect the vacuum gauge to the inlet side of the solenoid valve. This allows you to check the action of the vacuum pump and maintenance station seal.

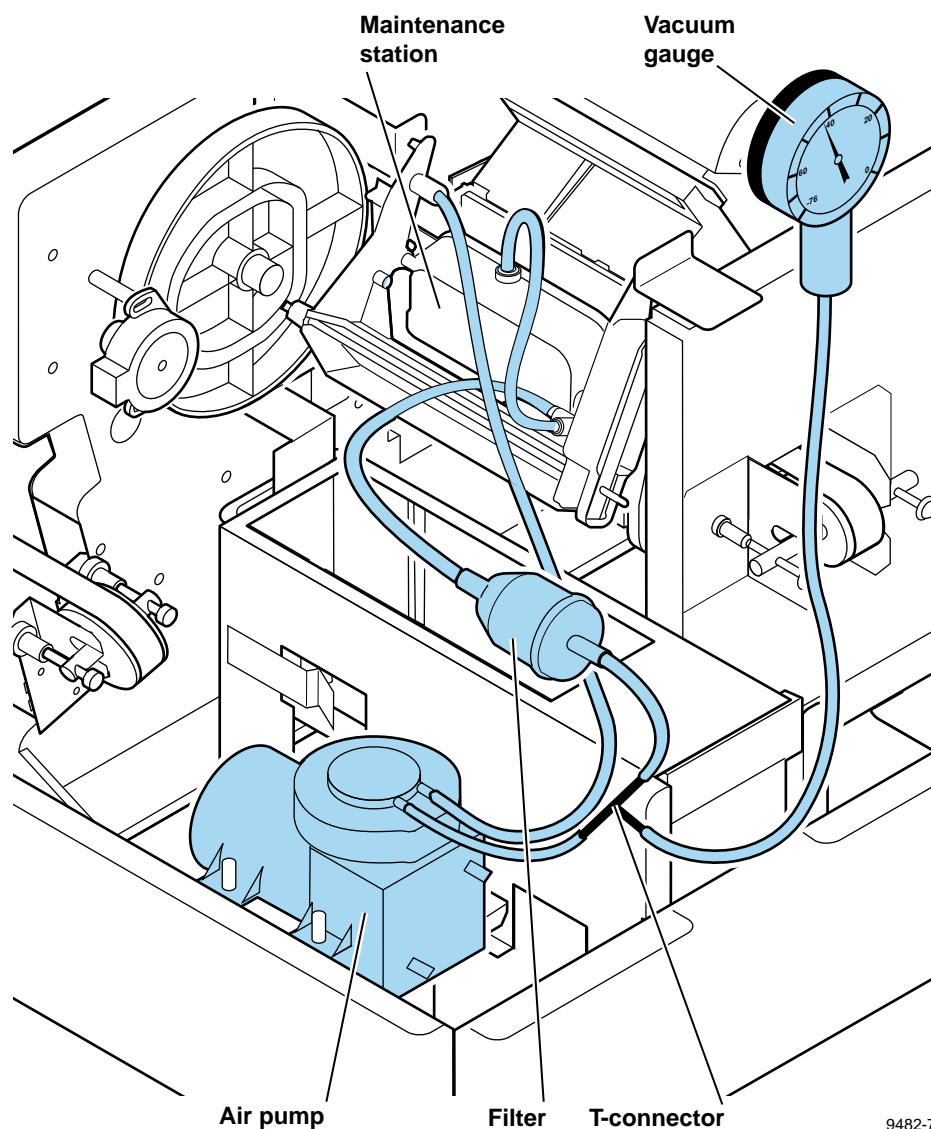


Figure 9-19 Connecting the vacuum gauge to the printer

4. Turn on the printer and enable the PC diagnostics as explained in the Chapter 6 topic, "PC-based diagnostics" on page 6-26.
5. Run the diagnostic test **Servo, Motors — Vacuum Check**.
6. Measure the vacuum pulled by the pump, it should measure a minimum of 8.5 psig (17 in Hg, 430 mm Hg). If the reading is lower, you should suspect a leaky maintenance station seal to the printhead face. Next, the maintenance station itself may be defective. Lastly, the air pump may be faulty.

Resetting NVRAM

Resetting NVRAM returns *all* the image processor's NVRAM-stored parameters to their factory defaults except the print count (for images processed through the image processor) and the Adobe firmware serial number. If you do not wish to reset the NVRAM-stored parameters of an installed PhaserShare card, then remove the card before performing this procedure.

To reset the printer to its factory-default values, follow this procedure:

1. With the printer in its Ready state, press **Menu**.
2. Scroll to the **Service Support** menu item.
3. Press **Menu** and **Exit** to enter the special service menu.
4. Scroll to the menu item **Reset NVRAM**.
5. Press **OK** to reset NVRAM.

Alternately, you can also use the PC diagnostics to selectively return either the print engine NVRAM contents to their factory default values.

Viewing NVRAM contents

You can use the PC diagnostic's NVRAM Test menu to select a test item that lets you view and change the contents of NVRAM.

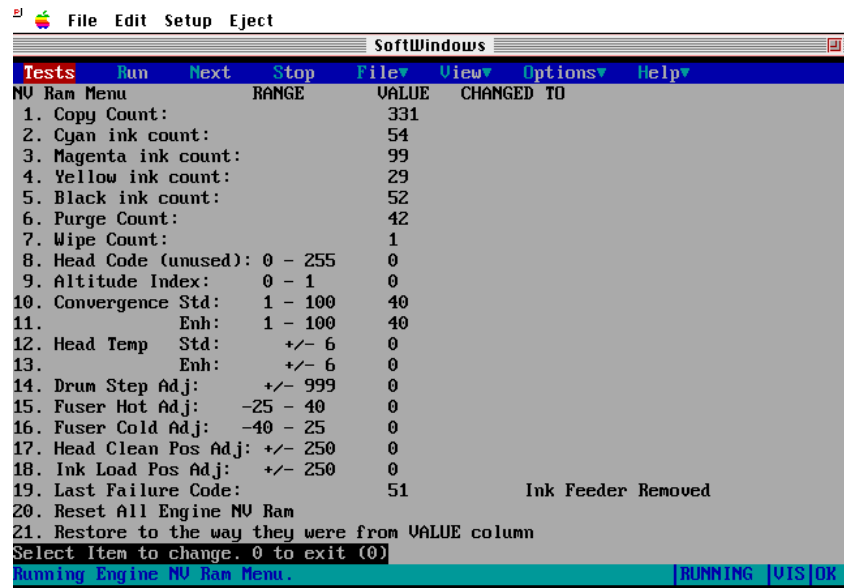


Figure 9-20 Viewing NVRAM contents

A

Field Replaceable Units List

This appendix provides a list of field replaceable units for the Phaser 600 Color Printer.

Changes to Tektronix products are made to accommodate improved components as they become available. It is important when ordering parts to include the following information:

- Component's part number
- Product type or model number
- Serial number of the printer

Serial numbering. Particular fields in the serial number indicate the modification level of the printer, the date of its manufacture and the sequence number of the printer produced on that day. The serial number is coded as follows:

BYRxxxx

B indicates the headquarter city of the manufacturing company, Beaverton.

Y numerically indicates the last digit of the year of manufacture, ranging from 0 to 9

R indicates the revision level of the printer, ranging alpha-numerically from 0 to Z (the letters I and O are not used).

xxxx alpha-numerically indicates the sequence of the printer among the printers produced, ranging from 0100 to 9999.

Table A-1 FRU exterior parts list

Figure A-1 parts	Part number	Serial number Effective	Discontinued	Quantity	Name and description
1	118-9493-00			1	Adjustable Roll Holder End Piece
2	118-9401-00			1	Media Roll Support Holder (Left & Right)
3	118-9396-00			1	Cabinet: Roll End Cover (Left or Right)
4	118-9400-00			1	Cabinet: Left Side Cover
5	118-9307-00			1	Ink Loader (Ink Stick Cassette)
6	118-9398-00			1	Cabinet: Top Cover Assy. (including Hinge)
7	118-9317-00				Cabinet: Paper Guide/Cover
8	650-3257-00			1	Front Panel LCD Board and Bezel
8a	671-3638-00				Front Panel LCD Board
9	118-9399-00			1	Cabinet: Right Side Cover
10	118-9395-00			2	Casters Kit
11	118-9318-00				Roll Cover Spacer Pin Kit
12	118-9322-00			1	Cabinet: Roll Cover
13	118-9316-00			1	Output Bin

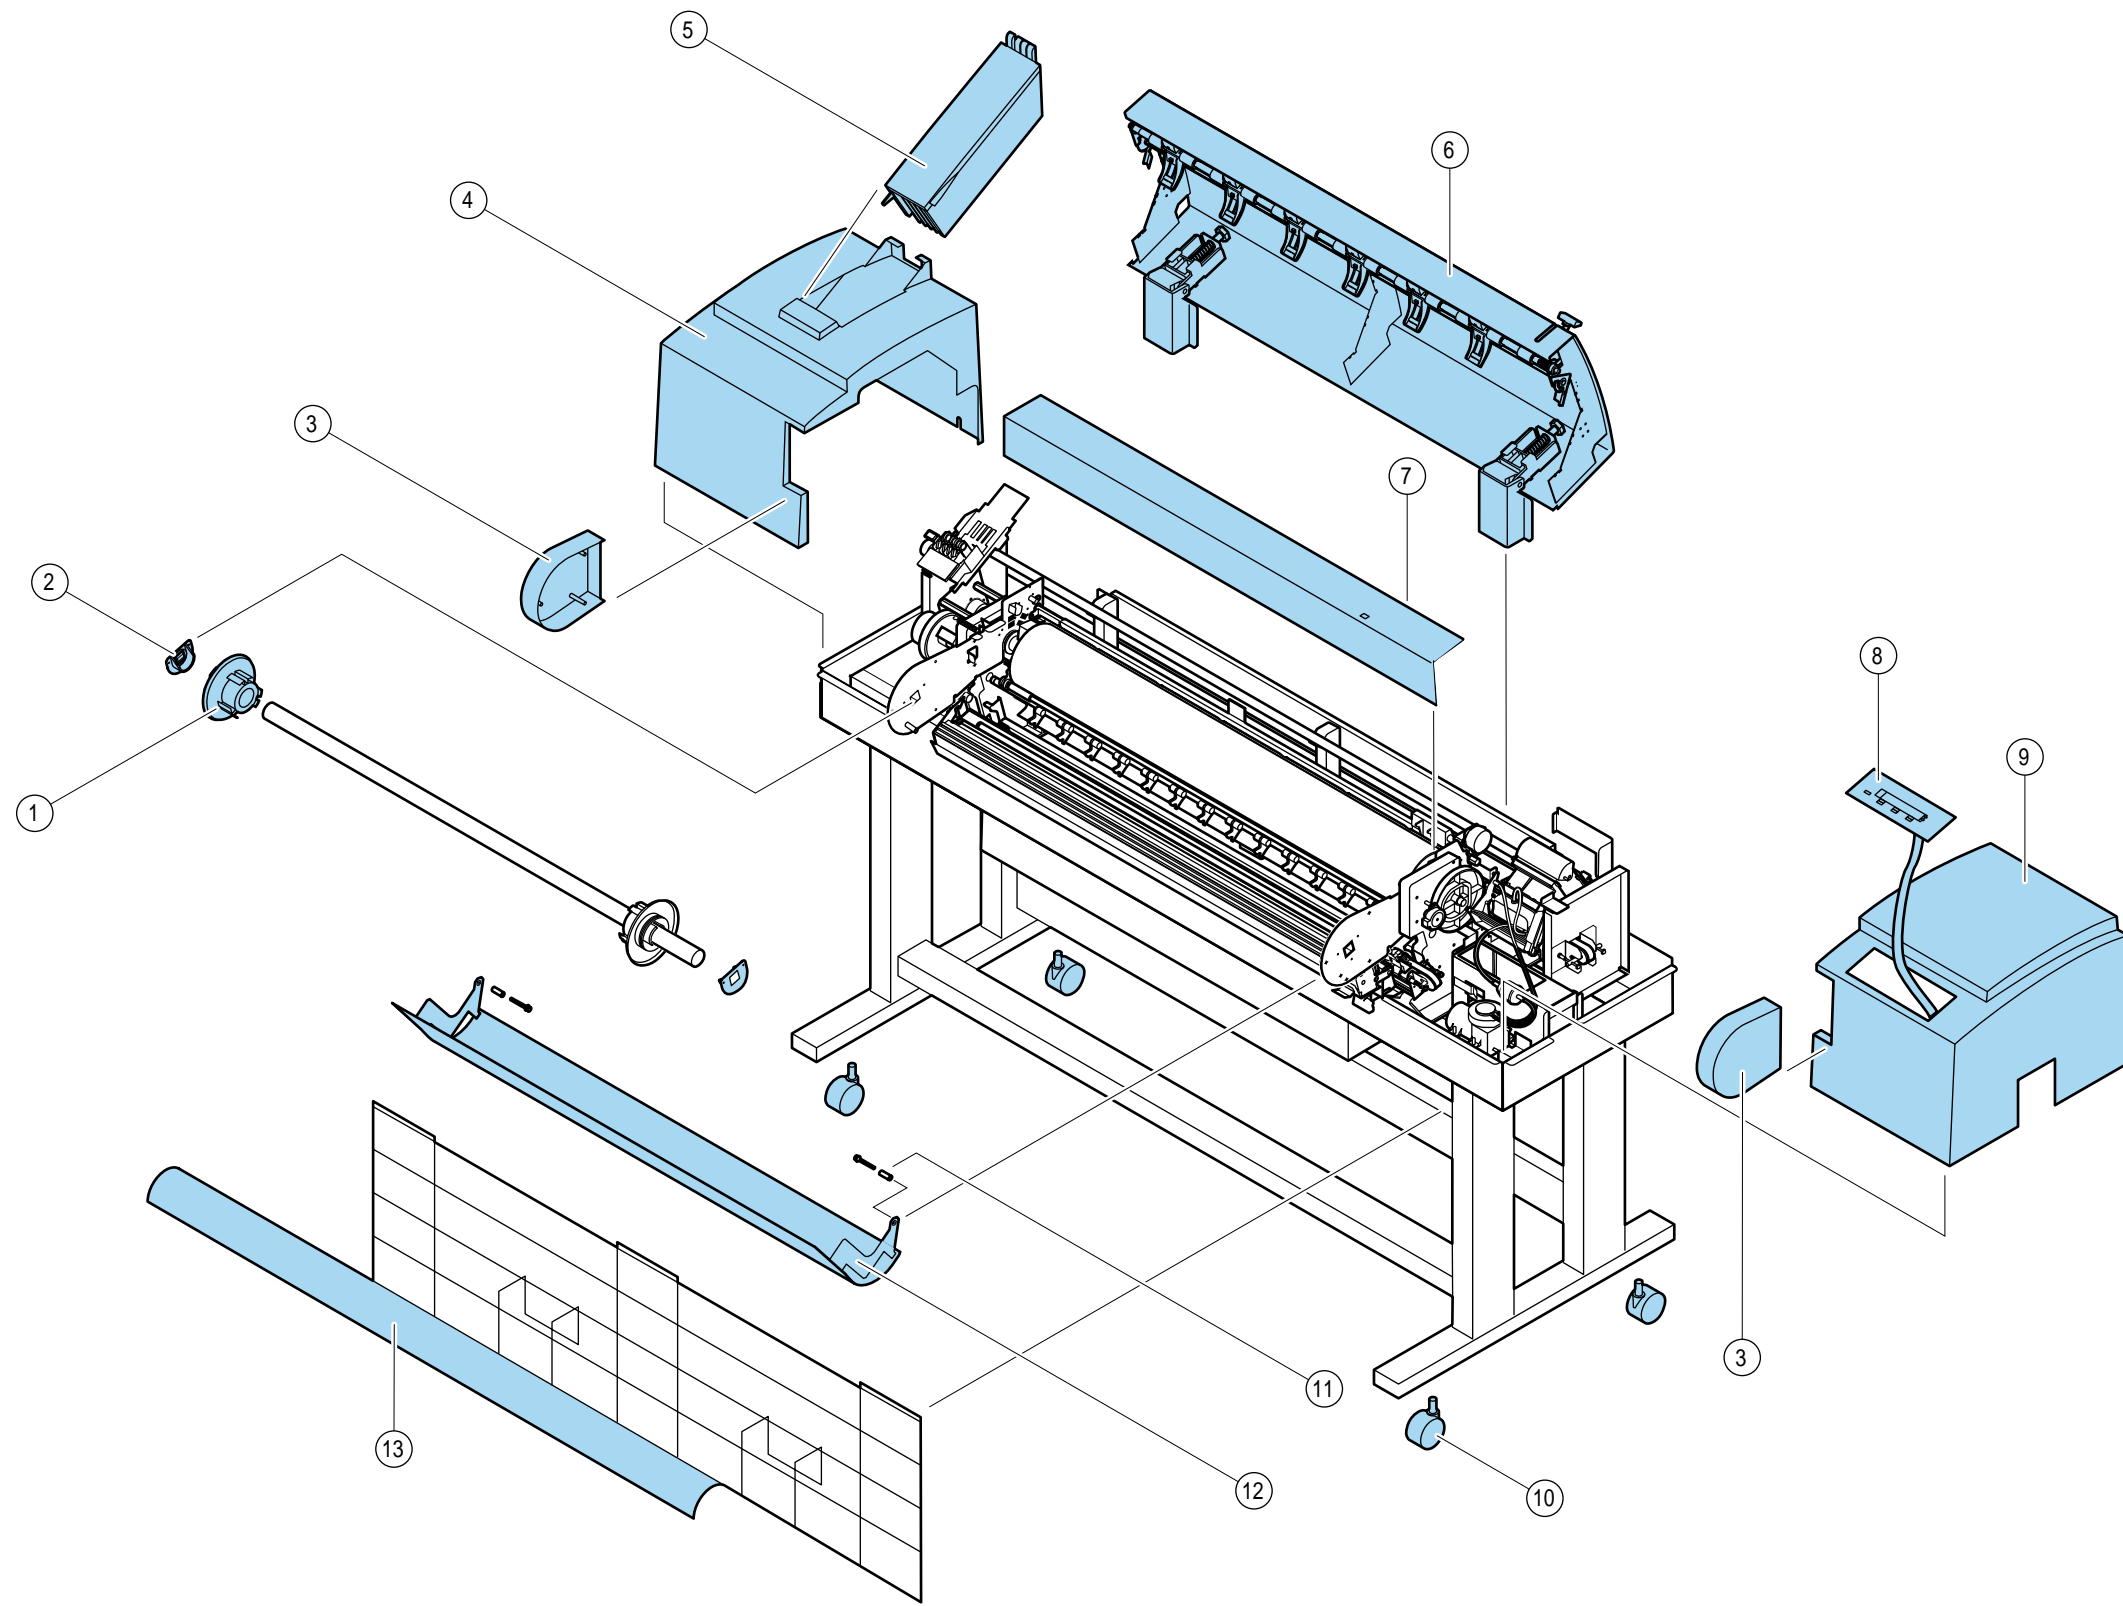


Figure A-1 The printer exterior FRUs


9482-83

Table A-2 FRU interior parts list

Figure A-2 parts	Part number	Serial number Effective	Discontinued	Quantity	Name and description
1	118-9321-00			1	Fuser Upper & Lower Assy.
2	118-9323-00				Paper Exit Motor Assy. (w/Pulley)
3	118-9297-00			1	Fuser Motor Assy. (w/Pulley)
4	118-9325-00			1	Stripper Finger Assy.
5	118-9494-00			1	Lower Roller/Guide Assembly
6	118-9326-00			1	Clamp (Bail) Roller Assy.
7	118-9319-00			1	Left Paper Holder Assy.
8	118-9296-00			1	X-Axis Motor Assy. (w/Pulley)
9					Y-axis Drive Gear Assembly
10	118-9295-00			1	Y-Axis Motor Assy. (w/Pulley)
11a	118-9303-00			1	Print Head Stop (Left)
11b	118-9499-00			1	Print Head Stop (Right)
12	118-9289-00			1	Left Junction Board Assy.
13	118-9300-00			1	Ink Loader Motor Assembly
14	118-9496-00			1	Printhead Door Motor
15	118-9497-00			1	Ink Loader Circuit Board
16	118-9313-00			2	Drum Solenoid Kit (two solenoids)
17	118-9312-00			1	Drum Assy.
18	118-9315-00			1	Paper Clamp
19	118-9314-00			1	Media Back Tension Blade
20	118-9424-00			1	Upper Media Guide Kit (3)
21	118-9397-00			1	Upper Roller Assy.
22	118-9498-00			1	Top Cover Junction Board
23	118-9299-00			1	Head to Media Assy. & Stepper Motor
24	118-9495-00			1	Head Maintenance Cam Gear
25	118-9298-00			1	Head Maintenance Cam Motor
26	650-3414-00			1	Printhead Assy.
27a	650-3416-00			1	Head-to-Media Assembly
27b	650-3557-00			1	Bearing and Oil Pads Kit
28a	211-0821-00			1	Printhead Hold-Down Screws
28b				1	Printhead Hold-down Brackets
29	118-9304-00			1	Head Mounting Bracket/Carriage Casting
30	650-3596-00			1	Head Carriage Bd.
31	118-9287-00			1	Printhead Umbilical Cable
32	118-9310-00			1	Timing Fence (Dot Clock) & Spring
33	118-9306-00			1	X-Axis Steel Belt Assy

Table A-2 FRU interior parts list

Figure A-2 parts	Part number	Serial number Effective	Discontinued	Quantity	Name and description
34	118-9288-00			1	Right Junction Board Assy.
35	118-9305-00			1	X-Axis Return Pulley
36	118-9308-00			1	Waste Bin (Drawer)
37	118-9309-00			1	Waste Bin Lock
38	118-9320-00			1	Right Paper Holder Assy.
39	384-1765-00			1	Drip Plate Rods
40	650-2652-03			1	Drip Plate Assy.
41	378-0387-00			1	Air Filter
42	650-2391-01			1	Head Wiper PM Kit (Pkg. of 5)
43	650-3097-01			1	Purge System Assy. (Maintenance Station)
44	650-2263-00			1	Air Pump Assy
45	118-9327-00			1	Clamp Stop
46	118-9324-00			1	Fuser Carriage Shuttle
47a 47b 47c 47d 47e 47f	118-9301-00				Belt Kit Fuser drive belt Y-Motor (Idler) Belt Y-Drum Belt Ink Loader Belts (2) Head-to-Media Stepper Motor Belt Fuser Shuttle Belt
48	118-9293-00				Optical Sensor/ Interlock Switch Kit Fuser open switch INK Drop Sensor Ink Low Sensor Ink Origin Sensor Ink Loader Cover Closed Sensor Ink Loader Installed Sensor Top Cover Open Sensor Top Cover Latched Sesor Skew Sensors Paper Input Senor Roll Media Sensor Printhead Left/right Edge Sensor Waste Bin Sensor Exit Sensor Clamp Home Sensor Clamp Ready Sensor
	118-9422-00				Hardware Kit (4 Per Type Screws, 4 Per Type Standoffs, etc.)
49	118-9501-00			1	Heater Interconnect Board
	118-9423-00				Spring Kit (1 Per Type Spring)
	346-0265-00				Hi-temp Cable Ties For Head Wiring

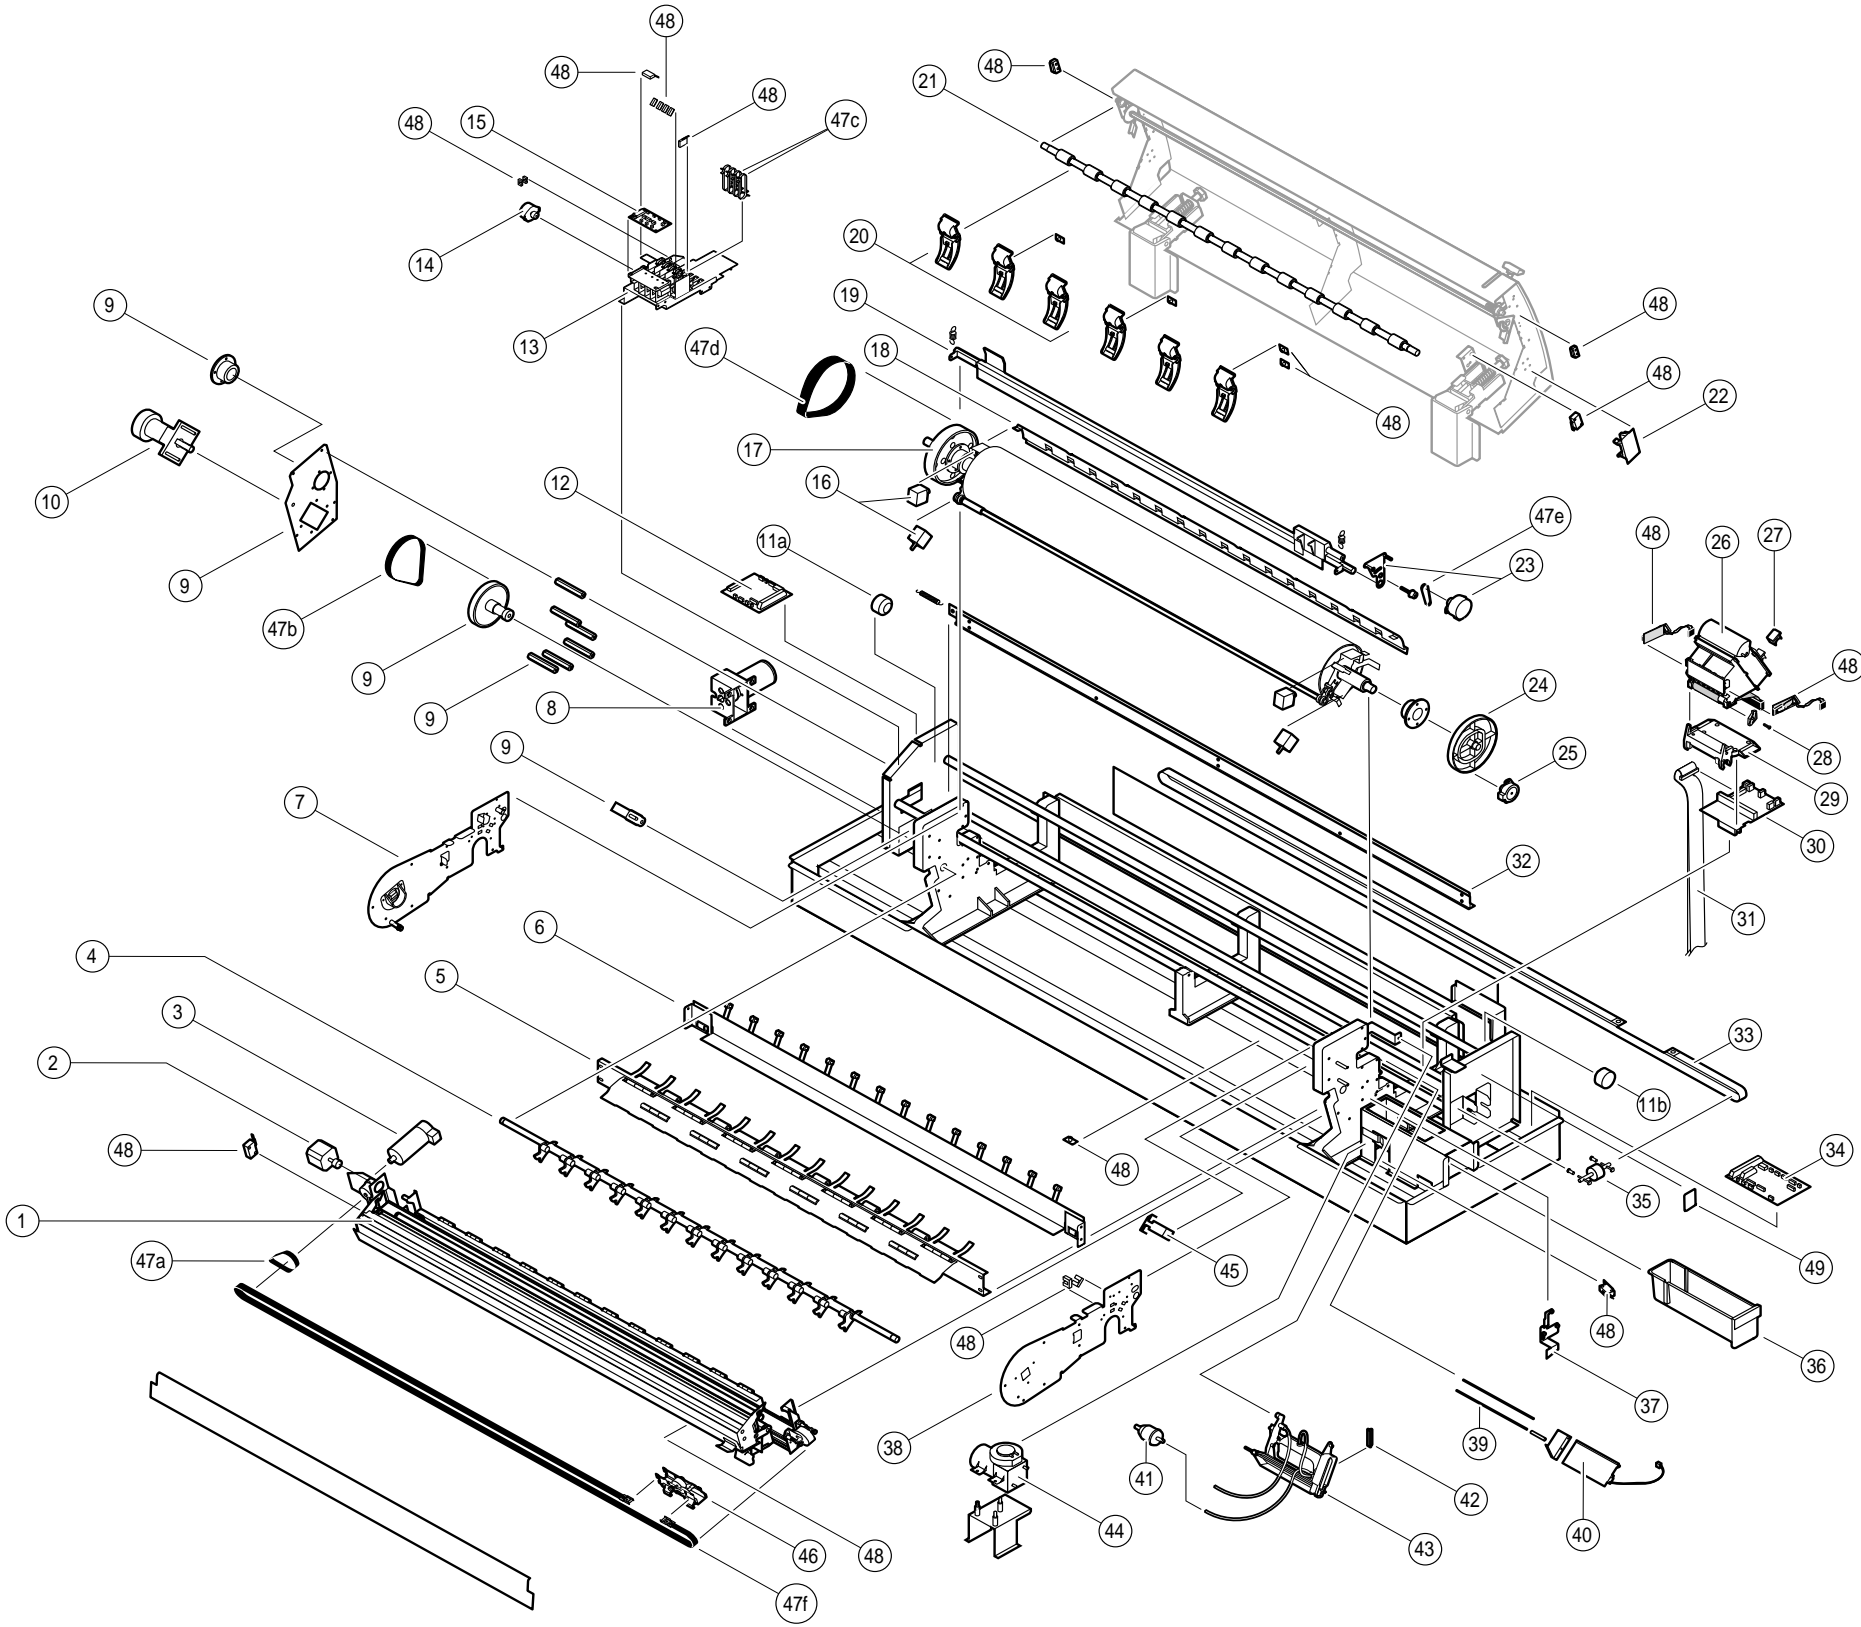

9482-84

Figure A-2 Printer interior FRUs

Table A-3 Electronics bay FRus

Figure A-2 parts	Part number	Serial number Effective	Discontinued	Quantity	Name and description
1	118-9302-00			1	Cooling Fan (Power Supply)
2	118-9294-00			1	Power Switch
3a	159-0047-00			1	Fuse, 10 Amp, 250V, .3AG
3b	159-0353-00			1	Fuse, 5 Amp, 250V 3AG
3c	118-9442-00			1	Fuse Cap,r 120VAC System
3d	118-9443-00			1	Fuse Cap, 250VAC System
4	118-9286-00			1	Print Engine Control Bd.
5	118-9290-00			1	Power Supply Assembly (Auto-Universal)
6	118-9291-00			1	Power Supply Cable (10 Pin)
7	118-9292-00			1	Power Supply Cable (12 Pin)
8	119-5480-00			1	1.2 Gbyte Hard Drive
8a	174-3621-00			1	Hard Drive DC Power Wiring Harness
9	118-9500-00			1	Card Cage with Wiring Harness
10a	671-3730-00			1	PostScript ROM SIMM (flash)
10b	671-3731-00			1	PostScript ROM SIMM (masked - avail mid-Feb 1997)
11a	671-3805-00			1	Extended Features SIMM, Roman
11b	671-3997-00			1	Extended Features SIMM, Kanji
12a	671-3468-03			1	Ethernet Network Card, Ver 3.0
12b	671-3469-00			1	LocalTalk/Serial Network Card, Ver 1.0
12c	671-3470-03			1	Token Ring Network Card, Ver 3.0
12d	386-6815-00			1	Blank Cover Plate (no card installed)
	213-1090-00			2	Blank Cover Plate Thumbscrews
13a	671-3318-00			1	8 Mbyte RAM SIMM
13b	671-3133-00				16 Mbyte RAM SIMM
13c	671-3138-00				32 Mbyte RAM SIMM
14	671-3750-00			1	Image Processor Board
15	118-9421-00			1	Head Voltage Adjust Access Cover

Supplies and Accessories

Table A-4 Supplies and Accessories

Figure A-2 parts	Part number	Serial number Effective	Discontinued	Quantity	Name and description
	016-1400-00			1	Cleaning Kit (wet)
	003-1681-00			1	Belt Tension Gauge
	003-1683-00			1	Drum Alignment Fixture
	003-1684-00			1	Ink Loader Position Fixture
	003-1685-00			1	Fuser Position Fixture
	003-1686-00			1	Clamp Position Fixture
	003-1687-00			1	Top Cover Position Fixture
	003-1688-00			1	Upper Fuser Roller Position #1 Fixture
	003-1689-00			1	Lower Fuser Roller Position #1 Fixture
	016-1472-00				Fuser Wheel/Pads/Fuser Cutter Assy
	003-1680-00				Calibration Media, Head Sensors
	016-1257-00			1	Media Roll Holder
	063-2778-00			1	PC-based Diagnostics Diskette

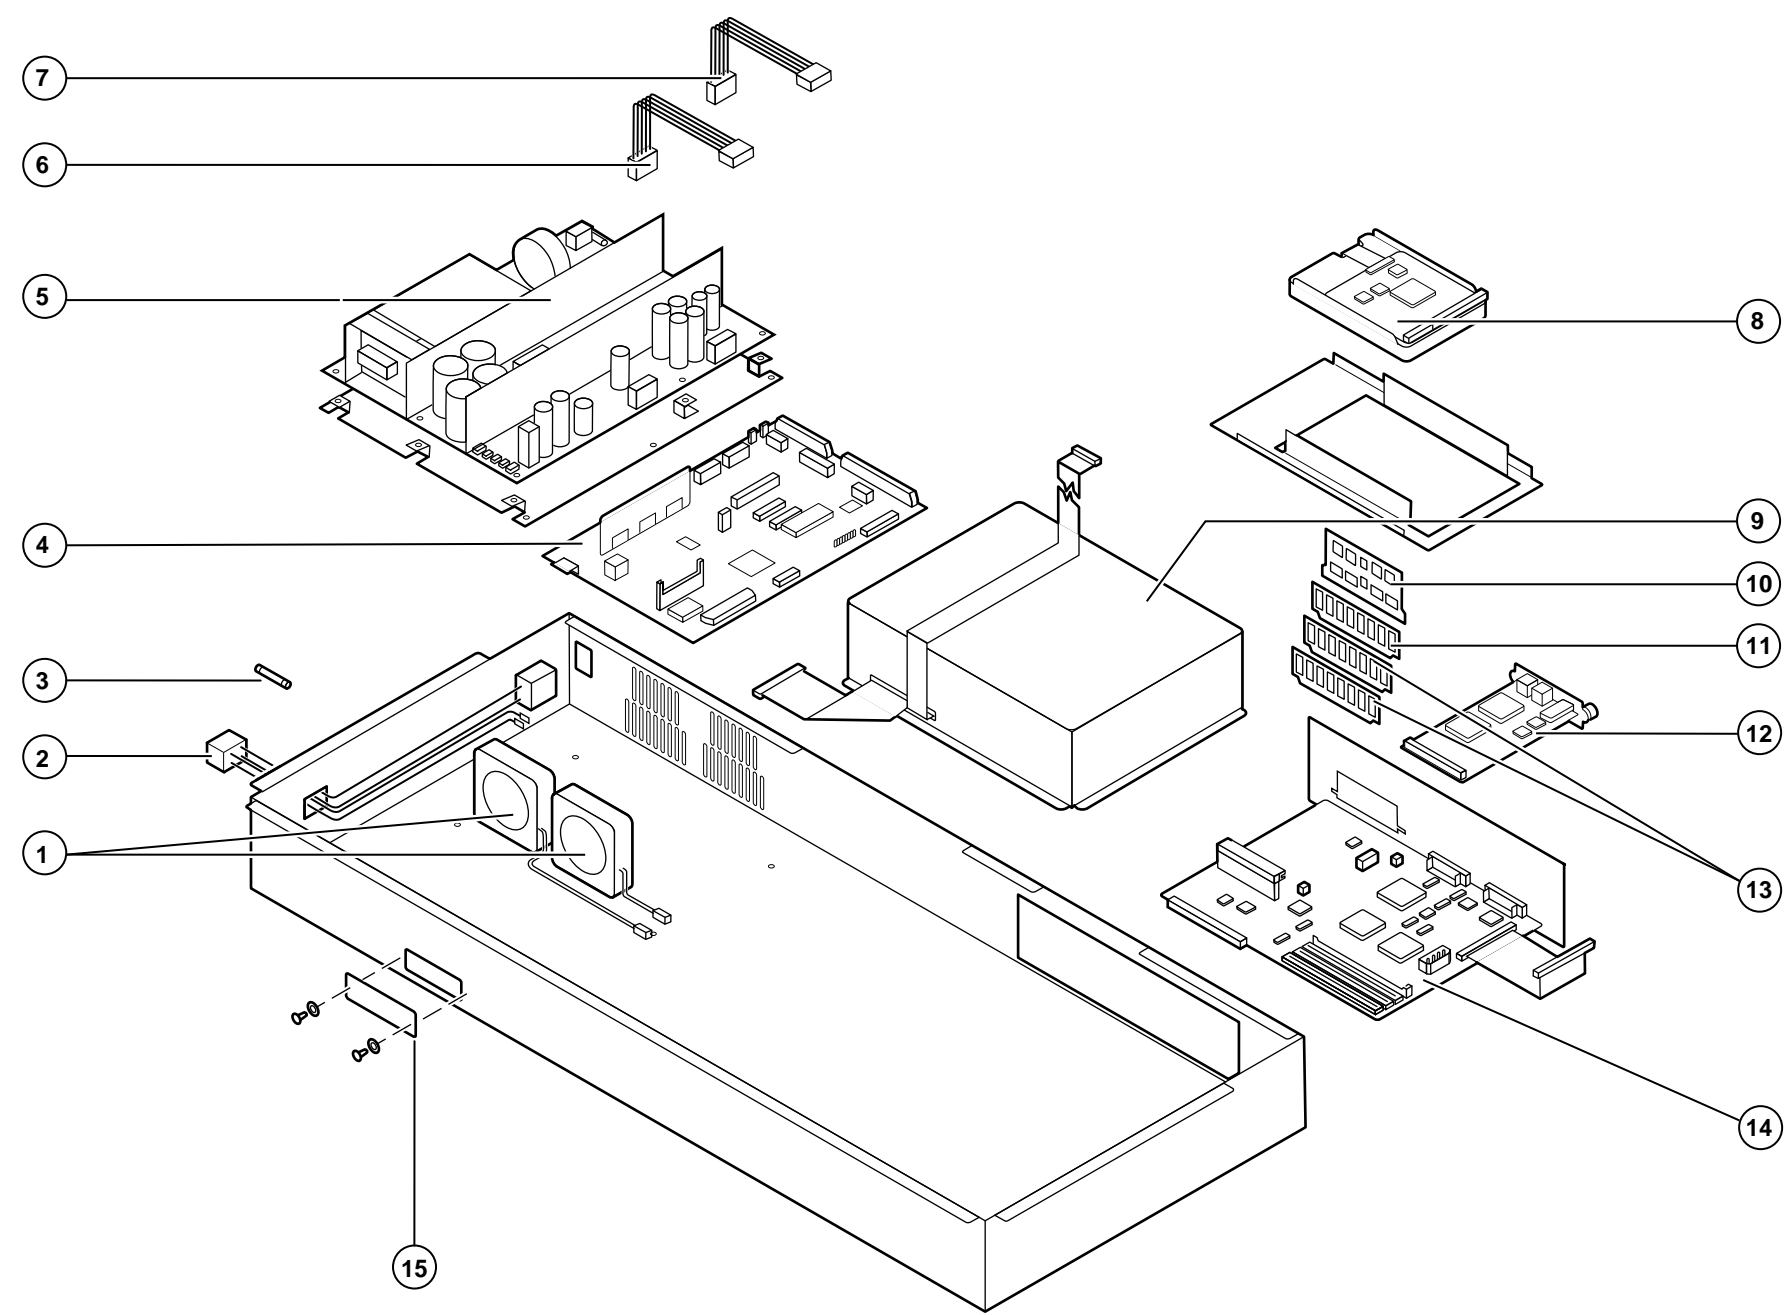


Figure A-3 Printer electronics bay FRUs

Test Patterns

This appendix illustrates the service test print produced by the printer. It shows a number of defective prints and the reason for the defects. Chapter 6 *Troubleshooting* discusses solutions to the problems shown in this appendix. The test print pushes the printer to the extremes of its performance to reveal possible shortcomings. Note that defects revealed by the prints may not show up at all in the course of ordinary printing. In servicing the printer, you should minimize the defects shown by the prints but not necessarily eliminate them.

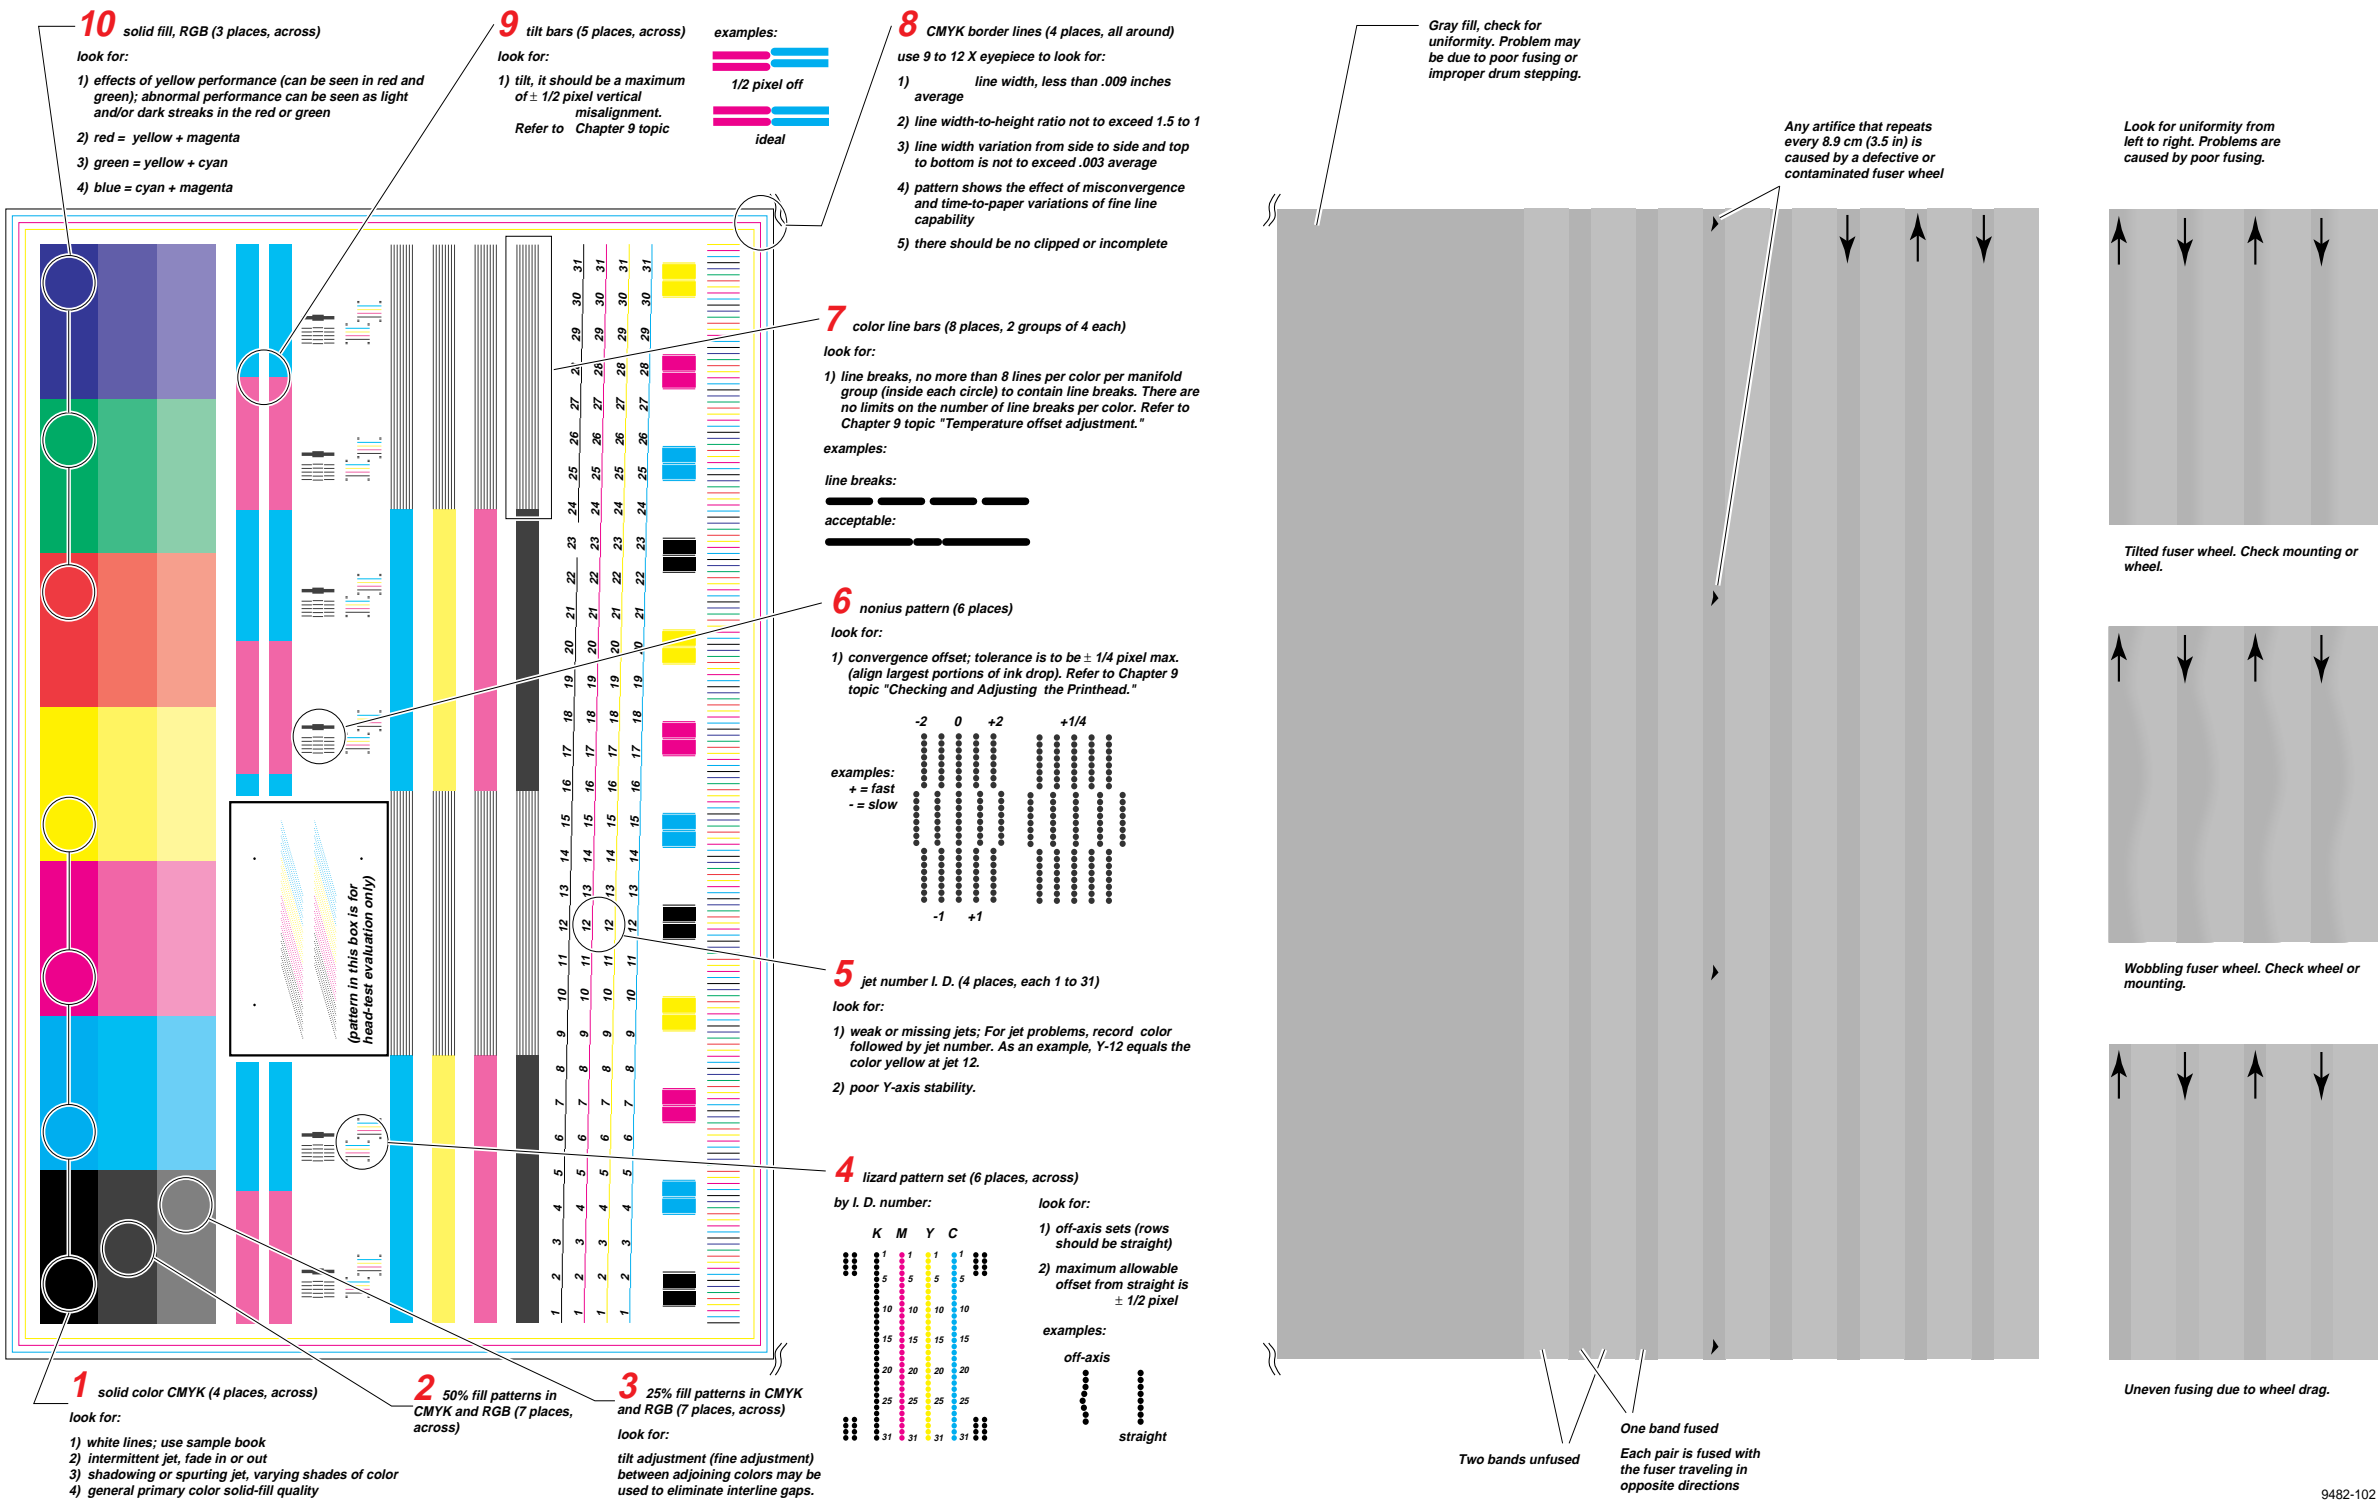


Figure B-1 Print quality check pattern

Index

A

- accessing printer's web page 4-6
- Acrobat Reader
 - installing on a PC 2-42
- Adobe PostScript Level 2 1-2
- applications
 - QuickDraw GX 2-46
- ARP 2-29
- ATM
 - installing on a PC 2-43

B

- BBS board 4-6
- belts
 - inspecting 7-19
- block diagram of printer 5-2
- BOOTP 2-28

C

- cables
 - parallel 2-20
- CD-ROM 2-6
- cleaning
 - wiper 7-15
- clearances 1-12
 - installation 2-4
- Color Correction 2-26
- color prints unevenly 6-13
- configuration page
 - contents 2-25
- connecting power 2-22
- connections
 - network 2-19, 2-21
 - parallel cable 2-20
 - power 2-22
 - SCSI 2-21
 - serial 2-21
- connectors
 - rear panel 1-11
- Customer Support Hotline 4-5

D

- dark prints, light prints 6-14
- desktop printers, QuickDraw GX
 - creating 2-46
- drivers
 - installation 2-33
 - installation (Macintosh) 2-44
 - installing Macintosh 2-47
 - QuickDraw GX 2-46
 - installing PPDs 2-33

E

- electrical specifications 1-14
- electronic bulletin board 4-6
- entrance jams 6-8
- environmental specifications 1-15
- Error codes, print engine 6-19
- Error Handler utility
 - Macintosh 3-8
 - PC 3-4
 - workstation 3-10
- error indicator 2-23
- Ethernet 2-19, 2-21
- EuroHAL, automated fax system 4-7
- exit jams 6-11

F

- failure 6-18
- field replaceable units list A-1
- front panel
 - description 1-10, 3-5
 - selecting a language 2-32
- front panel indicators 6-42
- front panel menu map 9-2
- FRUs A-1
- functional specifications 1-13
- fuser jam 6-10
- fuser stalls 6-15

G

- gears
 - inspecting 7-19
- Graphics Supplies Order Desk 2-3
- grease
 - assembly 9-1
 - using 7-20
- GX printer driver, see QuickDraw GX printer driver

H

- HAL, automated fax system 4-6
- hard disk
 - turning on the power 2-22
- hard disk drive 6-18
- hard error 1-11
- Help Pages
 - startup page 2-23
- Highly Automated Library (HAL) 2-5

I

- ICMP 2-29
- image is offset or cut off 6-14
- image processor diagnostics 6-23
- Image processor error indications 6-42
- image processor Service Mode 6-24
- indicators
 - error 2-23
 - power 2-23
- inspecting the printer 7-19
- installation 2-33
 - drivers and PPDs 2-33
 - Phaser Copystation 2-21
 - printer software for Macintosh 2-44
- installers
 - using
 - Macintosh 2-44
- installing printer software
 - Macintosh 2-44
 - PC 2-33
- interface cables, required 2-3
- interfaces
 - Ethernet 2-19
 - network 2-21
 - parallel 2-20
 - serial 2-21
 - Token Ring 2-19
- internal jam error 6-9

K

- key operator
 - training 4-1

L

- language
 - front panel selection 2-32
- large spots or blobs on the print 6-11
- LaserWriter 8.x driver, using 2-45, 2-47
- loading media 2-15
- LocalTalk 2-19
- lubrication 7-20

M

- Macintosh
 - installing printer software 2-44
 - printing 3-6
 - using the Error Handler utility 3-8
- Macintosh printer driver
 - selecting printer in Chooser 2-45
- maintenance station cam 5-8
- maintenance station wiper
 - replacement 8-22
- media
 - loading paper 2-15
- media jams, troubleshooting 6-8
- memory consideration 1-3
- moving the printer 7-17

N

- network
 - PhaserShare connections 2-21
 - ports 2-19
- networking
 - PhaserShare 2-19
- no image on print 6-14
- Novell NetWare 1-2, 2-19
- Novell NetWare verification 3-3
- null modem cable 2-52
- NVRAM
 - viewing NVRAM contents 9-34
 - resetting 9-34

O

- Ordering supplies 4-5
- OS/2 connection verification 3-2
- OS/2 Version 2.0, loading drivers 2-50

P

- packing material
 - removing 2-7
 - repacking 7-19
- paper, loading 2-15
- paper edges are rippled or wrinkled 6-11
- paper weight allowed 6-8
- paper weight, allowable 1-13
- paper-pick errors
 - troubleshooting 6-8
- parallel port 2-19
 - cables 2-20
 - connector 2-20
- PC
 - installing printer software 2-33
 - using the Error Handler utility 3-4
- PC-based diagnostic requirements 6-26
- PC-based diagnostics 6-26
- phase change inks 5-4
- phase-change inks, solid inks 1-3
- Phaser 600 (LaserWriter 7.1.2-based) printer
 - driver, see Macintosh printer driver
- Phaser 600, description 1-2
- Phaser Copystation 2-19
- PhaserLink 4-6
- PhaserShare
 - cards 2-19
 - connections 2-21
 - networking 2-19
- physical dimensions 1-12
- ports 2-19
- ports, printer
 - Ethernet 2-21
 - parallel 2-20
- power indicator 2-23
- power problems 6-39
- power supply, verifying 6-4
- power supply, verifying operation 6-4
- power, connecting 2-22
- power-up 2-23
- power-up sequence 6-1
- pre-installation interview 2-1

- print engine error codes 6-19
- print modes, description 5-5
- print quality 4-4
- print quality problems, troubleshooting 6-11
- printcap, configuring a workstation 2-52
- printer
 - assembly locations 1-4
 - inspecting 7-19
 - lubricating 7-20
 - troubleshooting 6-1
- printer clearances 1-12
- printer dimensions 1-12
- printer drivers
 - installing
 - Macintosh 2-47
 - QuickDraw GX 2-46
- Printer Information Server 4-9
- printer page description file 3-7
- printer software
 - installing on a Macintosh 2-44
- Printhead, voltage adjustment 9-4
- printhead
 - convergence 9-4
 - description 5-3
 - temperature adjustment 9-4
- printhead drive voltage
 - adjusting 9-15
- printhead maintenance system 1-8
- printhead tilt, adjusting 9-24
- printhead-to-media adjustment 9-15
- printing
 - PC 3-1
 - UNIX 3-9
 - VMS 3-10
- printing service test prints 9-4
- printing to a Macintosh 3-6
- printing to a workstation 3-9
- printing using TCP/IP 3-9

Q

- QuickDraw GX
 - Tektronix printer driver 2-46
- QuickDraw GX printer driver
 - desktop printers, creating 2-46
 - installing 2-46
 - selecting printer in Chooser 2-46
 - when to use 2-46

R

- RAM SIMM
 - installing 8-65
- RARP 2-28
- rear panel, description 1-11
- regulatory standards 1-16
- repacking 7-17
 - shipping box 7-19
- replaceable parts A-1
- resetting NVRAM 9-34
- rollers, inspecting 7-19

S

- sample paper roll, installing 2-15
- SCSI 2-19
 - connections 2-21
- SCSI drive 6-18
- sensor calibration 9-30
- sensors
 - location 1-8
- serial connections 2-21
- serial port, printer 2-19
- service Mode, image processor 6-24
- Service Option S0 2-1
- service support, calling 4-5
- service test prints, interpreting B-1
- service test prints, printing 9-4
- SNAP 2-26
- SNMP 2-30
- soft error 1-11
- software, installing PPDs 2-33
- specifications
 - clearances 1-12
 - electrical 1-14
 - environmental 1-15
 - functional 1-13
 - physical 1-12
- starting PC-diagnostics 6-27
- startup page 2-23, 2-24
- streaks or lines in the print 6-12
- supplies 4-5
- SWOP 2-26
- Syslog 2-30

T

- tailpiece adjustment 9-15
- TCP/IP 2-19

- Tektronix Bulletin Board Service (BBS) 2-49
- test patterns
 - descriptions 1
- things affecting 4-4
- Token Ring interface 2-19
- TokenTalk interface 2-19
- tools
 - for checks and adjustments 9-1
 - required for disassembly 8-1
- troubleshooting 6-1, 6-3
- turning on the printer 2-22

U

- UNIX
 - printing 3-9
- UNIX workstations
 - installing printer software 2-49
- Usable paper weights 1-13
- utility files 2-49

V

- VMS, printing 3-10

W

- warranty information 4-5
- web page 4-6
- weight of paper, allowed 6-8
- white portion of print is colored 6-13
- Windows 3.1 driver verification 3-2
- Windows 95 driver
 - adding printers 2-34, 2-36, 2-38, 2-42, 2-43
- wiper
 - cleaning 7-15
- wire dressing C-2
- wiring diagram, printer C-1
- workstation
 - printing 3-9
 - using the Error Handler utility 3-10
- wrinkled print 6-16

Wiring Diagrams

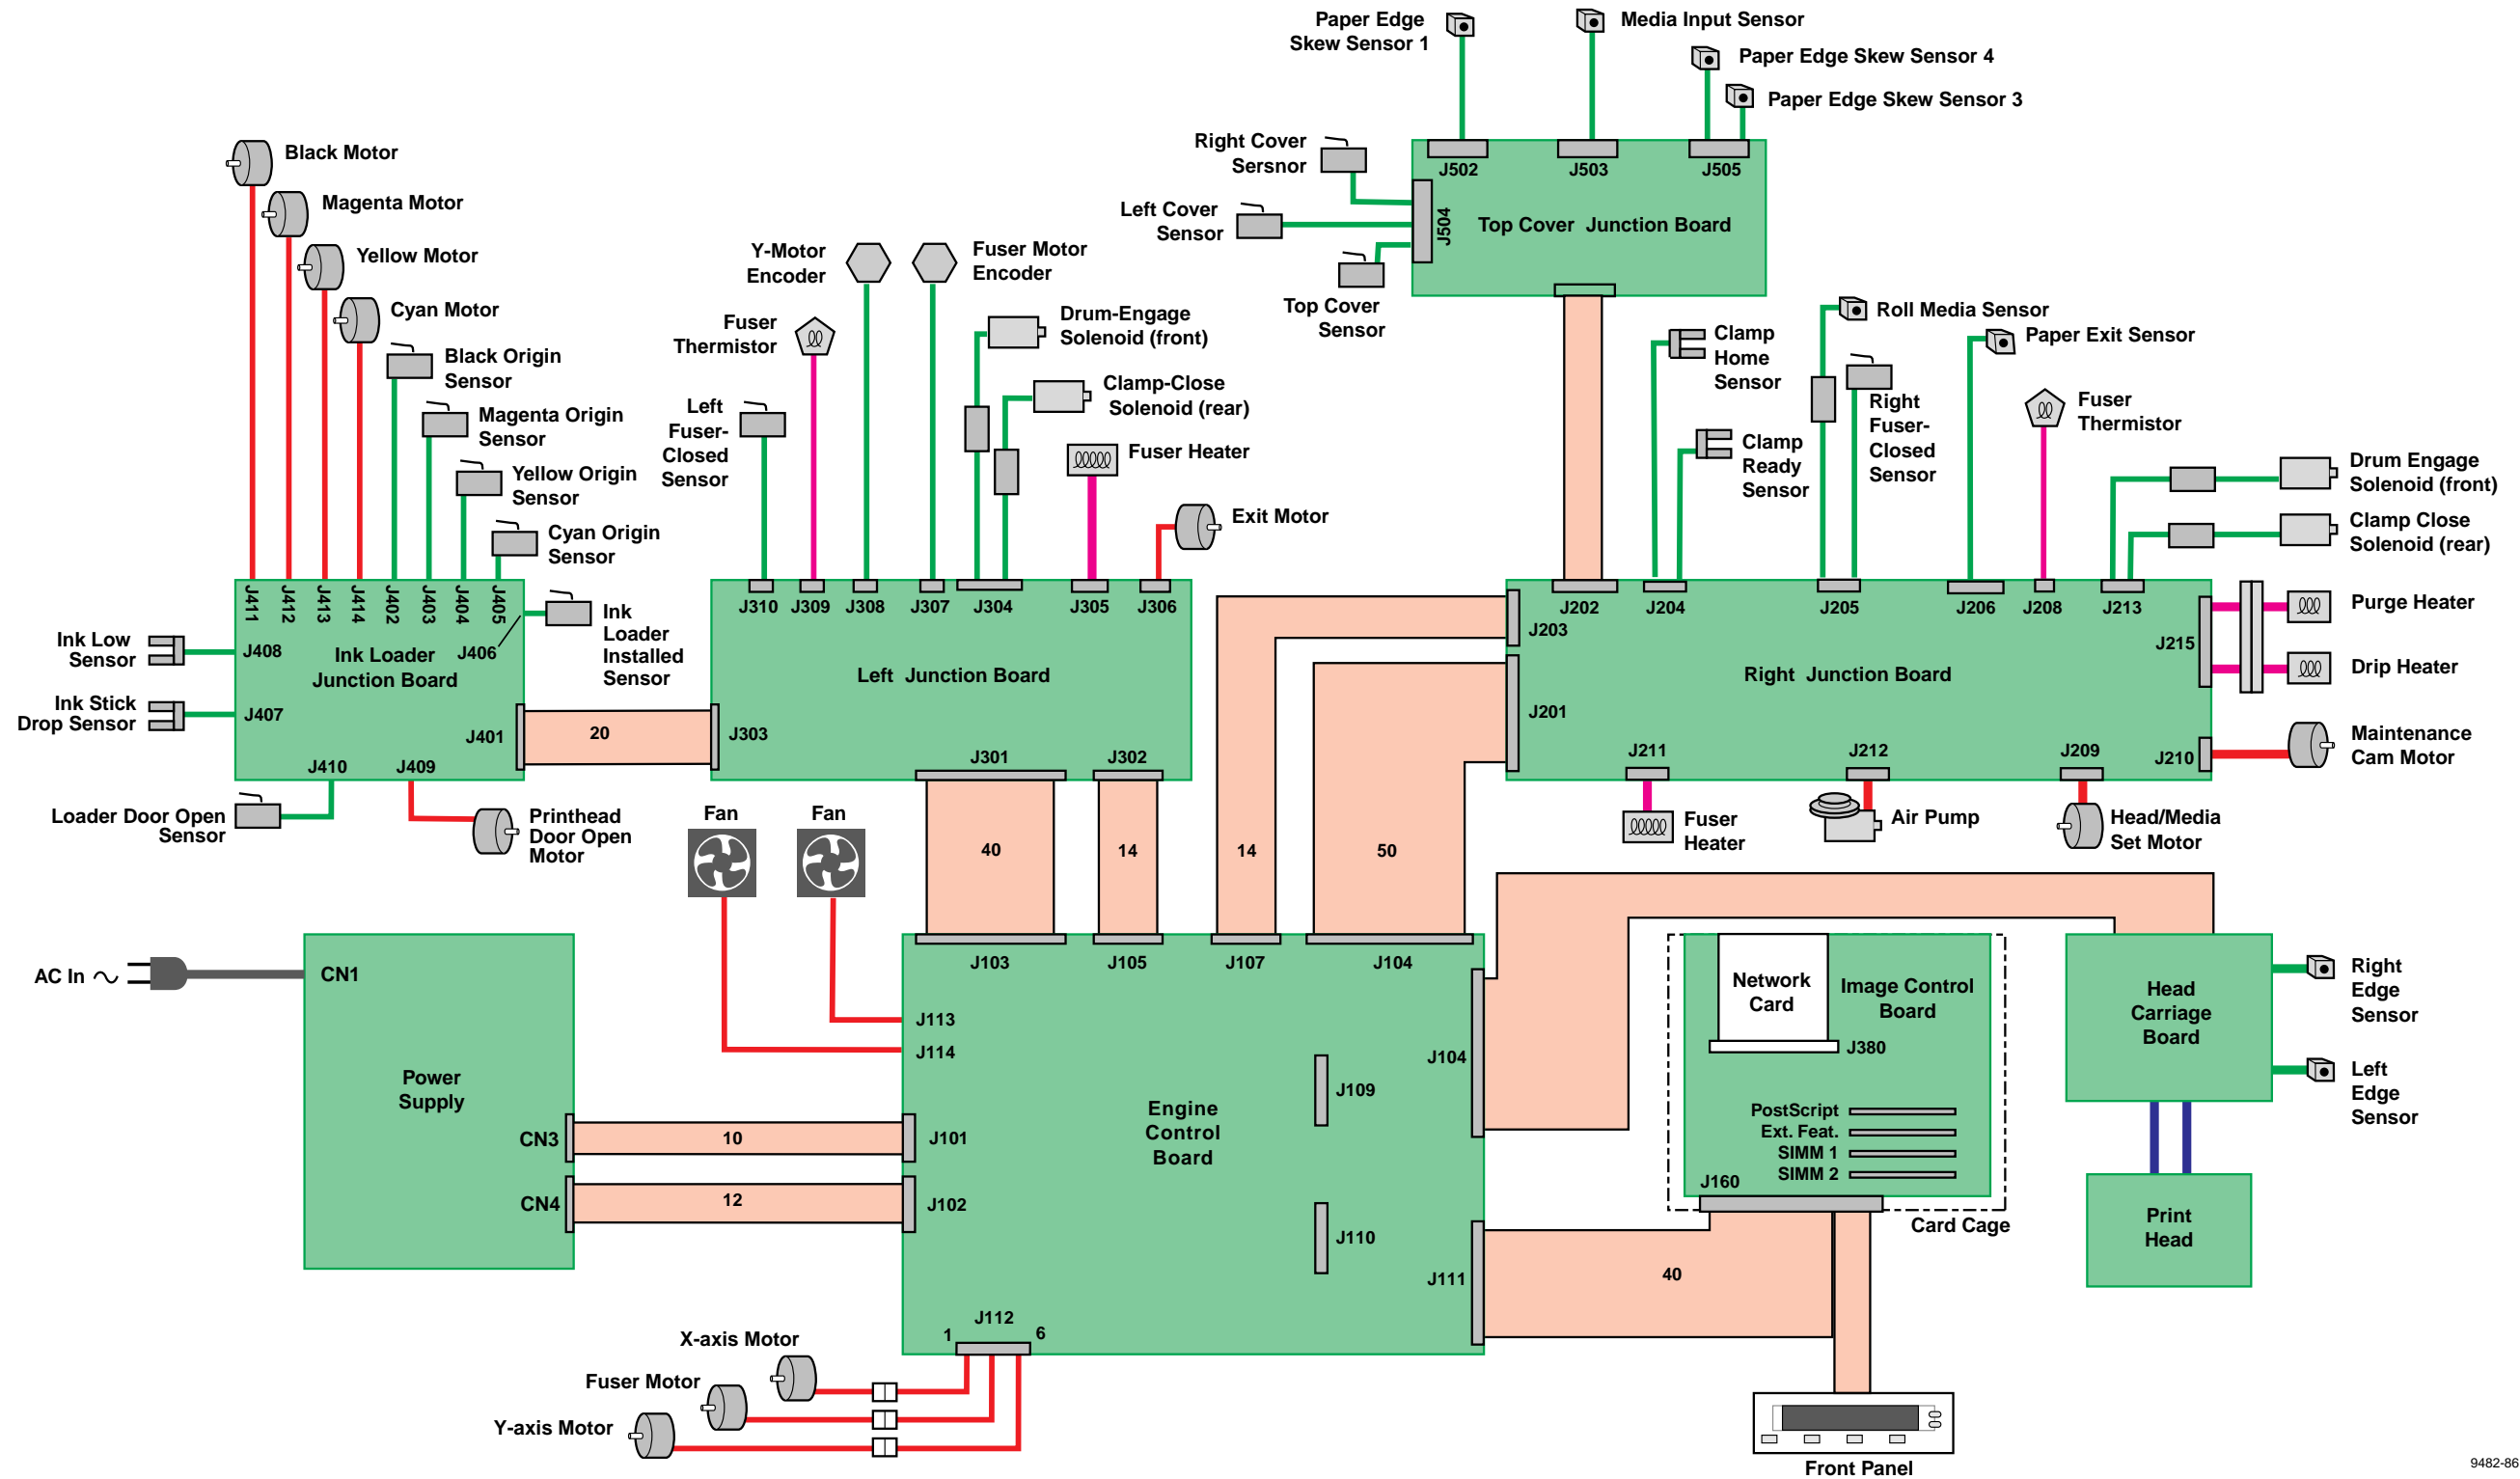


Figure C-1 Print engine wiring diagram

The following illustrations detail the proper means of routing and dressing printer wiring. Incorrect wiring dressing can result in wires pinched by cabinet panels or damaged by moving parts of the printer.

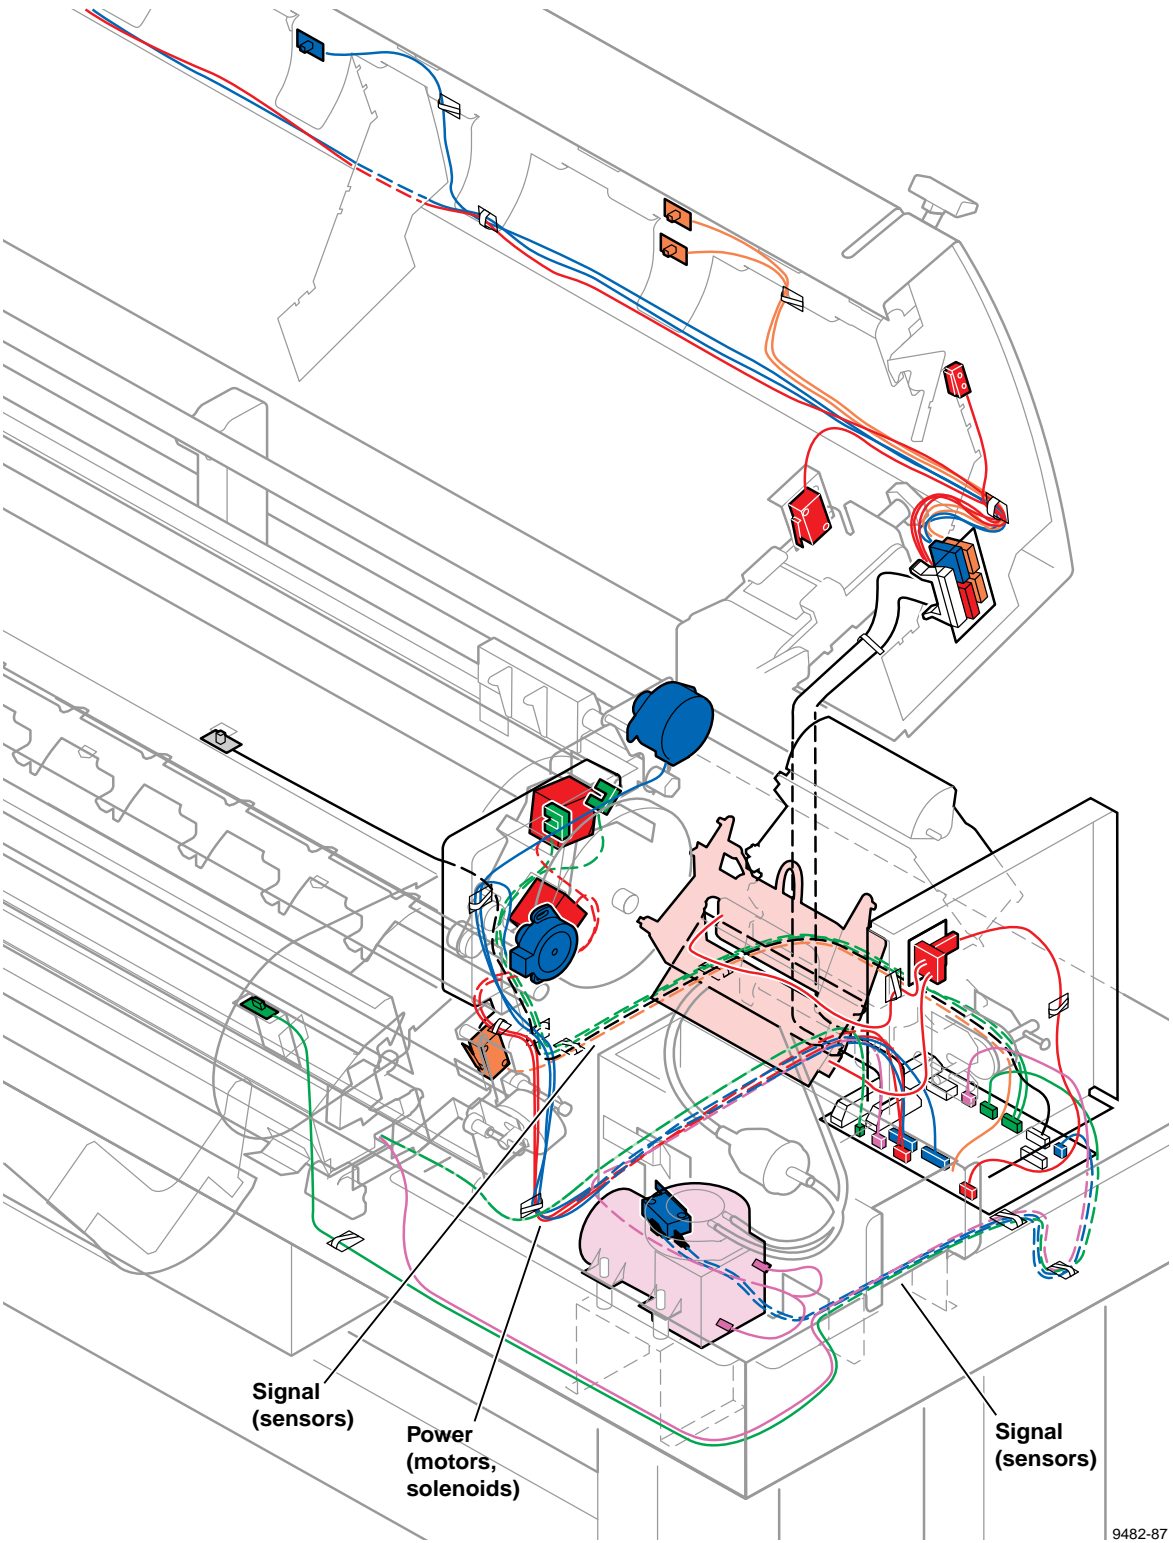


Figure C-2 Wire routing at the right end of the printer

Power wiring, for motors and solenoids, is kept separate from signal wiring, for sensors, to minimize crosstalk.

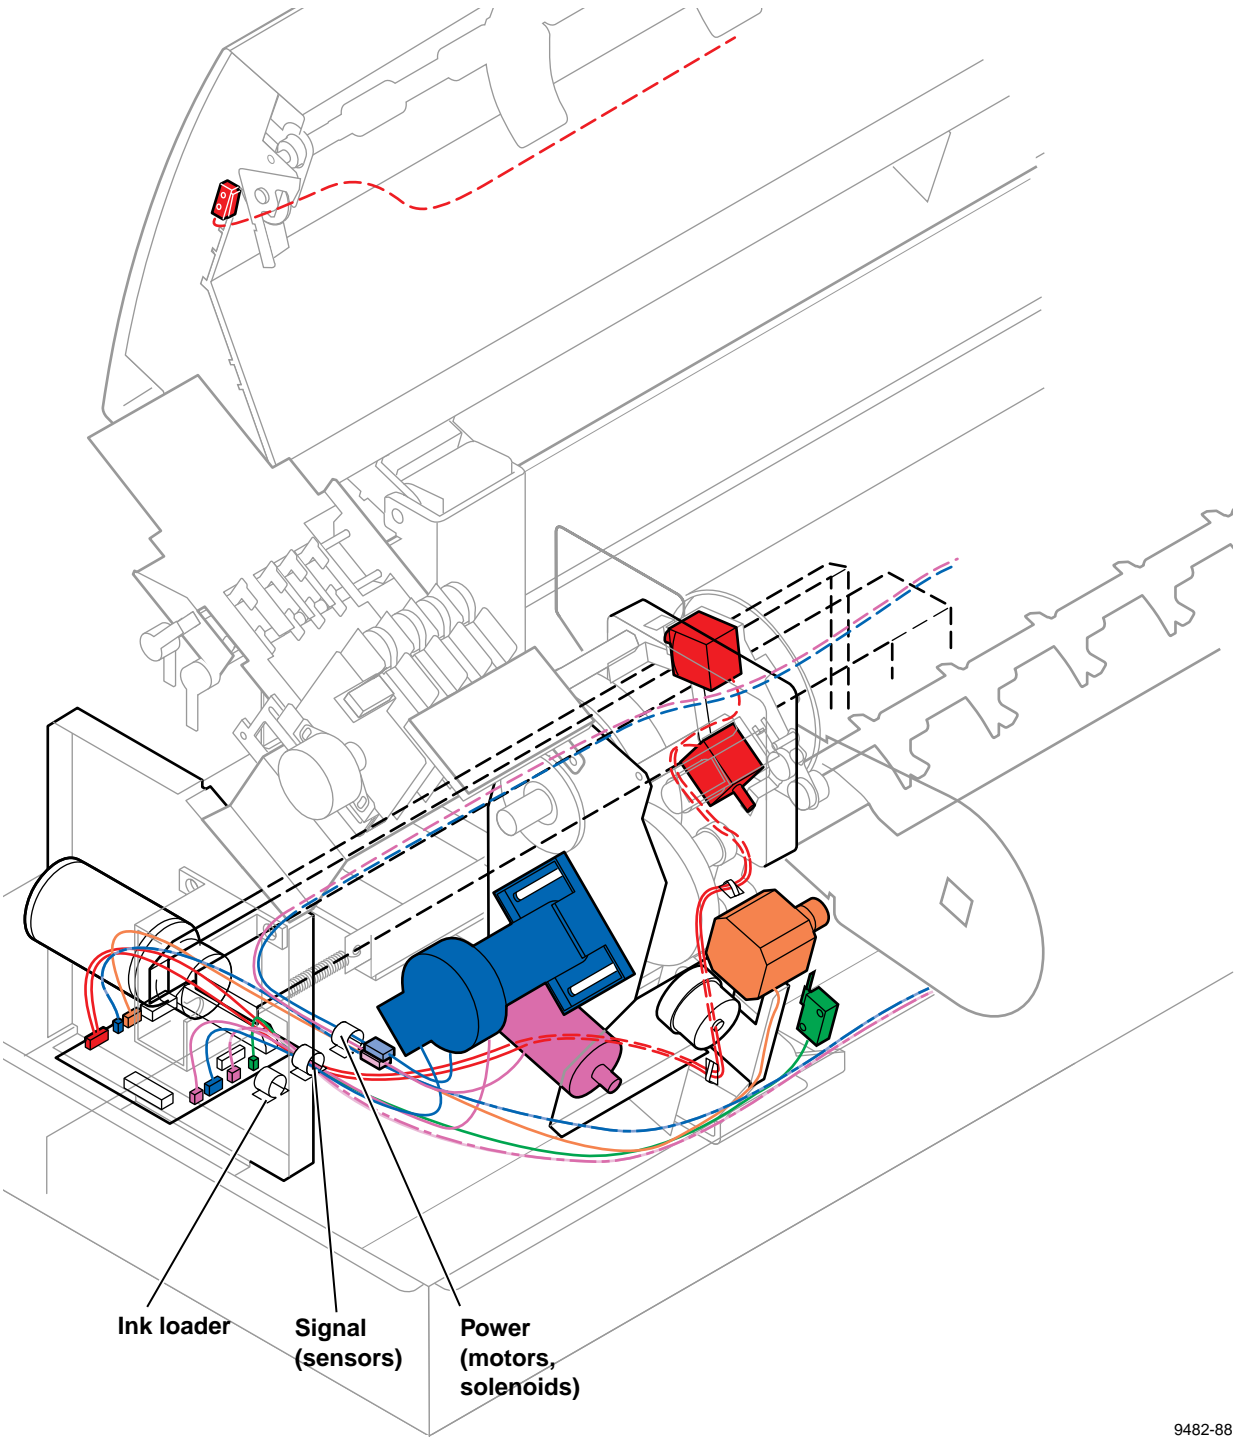


Figure C-3 Wire dressing at the left end of the printer